## C2004

### CAT Engine Harness

Engine temp sender

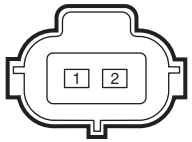


3536864C1

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 676 (PK/OG) | Vehicle speed sensor, - minus (return) to PCM |
| 2 | 39 (RD/WH) | Temperature gage to temperature sending unit |

## C2011

### IP Harness

Air solenoid power

2007315C1

| Pin | Circuit | Circuit Function |
|---|---|---|
| A | 417 (VT/OG) | Air suspension switch feed |
| B | 417 (VT/OG) | Air suspension switch feed |
| C | 417 (VT/OG) | Air suspension switch feed |
| D | 417 (VT/OG) | Air suspension switch feed |
| E | 417 (VT/OG) | Air suspension switch feed |
| F | 417 (VT/OG) | Air suspension switch feed |
| G | — | Not used |
| H | — | Not used |
| J | — | Not used |
| K | — | Not used |

## C2013

### IP Harness

Ground splice

2007315C1

| Pin | Circuit | Circuit Function |
|---|---|---|
| A | 57 (BK) | Ground circuit |
| B | 57 (BK) | Ground circuit |
| C | 57 (BK) | Ground circuit |
| D | — | Not used |
| E | 57 (BK) | Ground circuit |
| F | 57 (BK) | Ground circuit |
| G | 57 (BK) | Ground circuit |
| H | 57 (BK) | Ground circuit |
| J | 57 (BK) | Ground circuit |
| K | 57 (BK) | Ground circuit |

## C2014

### IP Harness

Stop power adapter

2007315C1

| Pin | Circuit | Circuit Function |
|---|---|---|
| A | 511 (LG) | Stoplamp (brake on/off) switch to stoplamps |
| B | 511 (LG) | Stoplamp (brake on/off) switch to stoplamps |
| C | 511 (LG) | Stoplamp (brake on/off) switch to stoplamps |
| D | 810 (RD/LG) | Stoplamp (brake on/off) switch to stoplamps |
| E | 511 (LG) | Stoplamp (brake on/off) switch to stoplamps |
| F | 511 (LG) | Stoplamp (brake on/off) switch to stoplamps |
| G | — | Not used |
| H | — | Not used |
| J | — | Not used |
| K | — | Not used |