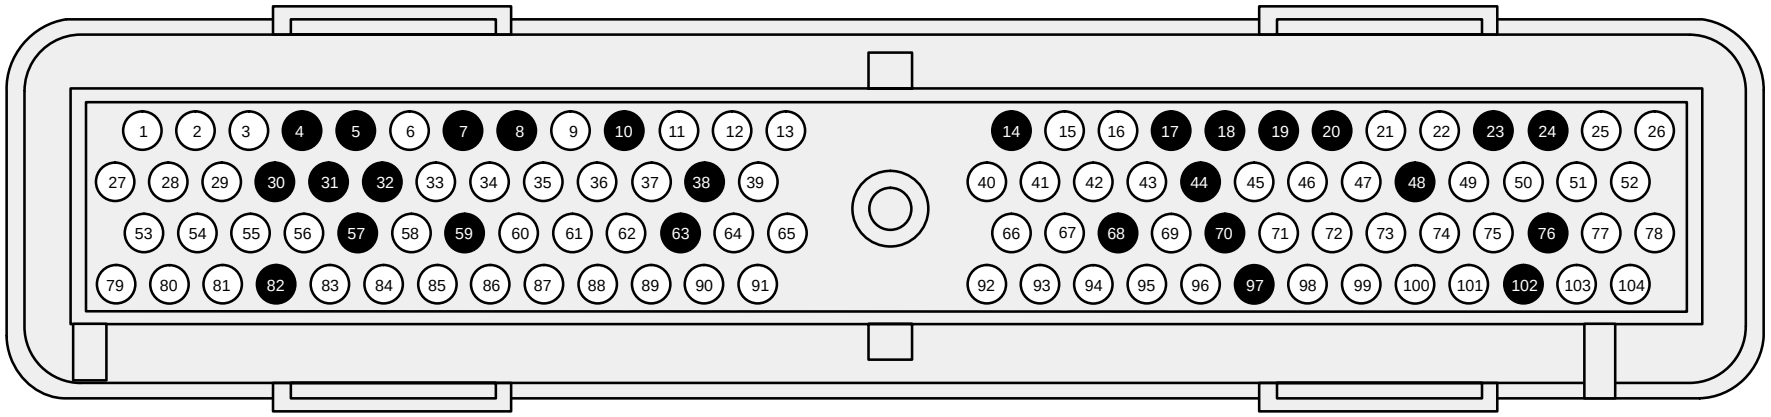

C185 (GRAY)
POWERTRAIN CONTROL MODULE (PCM)

GASOLINE

PIN	CIRCUIT	CIRCUIT FUNCTION	PIN	CIRCUIT	CIRCUIT FUNCTION
1	1025 (OG/YE)	Coil On Plug #6	21	138 (BK/PK)	Crankshaft Position Sensor (+)
2	658 (PK/LG)	Malfunction Indicator Lamp (MIL)	22	139 (GY/YE)	Crankshaft Position Sensor (–)
3	570 (BK/WH)	Ground	23	–	NOT USED
4	–	NOT USED	24	–	NOT USED
5	–	NOT USED	25	57 (BK)	Ground
6	237 (OG/YE)	Shift Solenoid A	26	1024 (LG/WH)	Coil On Plug #1
7	–	NOT USED	27	1021 (LG/YE)	Coil On Plug #5
8	–	NOT USED	28	229 (RD/OG)	Cooling Fan Low Relay Control
9	29 (YE/WH)	Fuel Gauge to Fuel Gauge Sender	29	224 (TN/WH)	Transmission Control Switch (TCS)
10	–	NOT USED	30	–	NOT USED
11	315 (VT/OG)	Shift Solenoid B	31	–	NOT USED
12	911 (WH/LG)	Transmission Control Indicator Lamp	32	–	NOT USED
13	107 (VT)	Flash EPROM Power Supply	33	676 (PK/OG)	Vehicle Speed Sensor (VSS) (–)
14	–	NOT USED	34	1144 (YE/BK)	Digital Transmission Range (DTR) Sensor (TR1)
15	915 (PK/LB)	SCP Data Bus (–)	35	392 (RD/LG)	Right Heated Oxygen Sensor (HO2S) #12
16	914 (TN/OG)	SCP Data Bus (+)	36	968 (TN/LB)	Mass Air Flow (MAF) Signal Return
17	–	NOT USED	37	923 (OG/BK)	Transmission Fluid Temperature (TFT)
18	–	NOT USED	38	–	NOT USED
19	–	NOT USED	39	743 (GY)	Intake Air Temperature (IAT) Sensor
20	–	NOT USED	40	238 (DG/YE)	Fuel Pump Monitor

PIN	CIRCUIT	CIRCUIT FUNCTION	PIN	CIRCUIT	CIRCUIT FUNCTION
41	347 (BK/YE)	A/C High Pressure Cutout Switch	73	559 (TN/BK)	Fuel Injector #5
42	39 (RD/WH)	Engine Coolant Temperature Indicator	74	557 (BN/YE)	Fuel Injector #3
43	205 (DB/LG)	Fuel Flow Rate Output	75	555 (TN)	Fuel Injector #1
44	–	NOT USED	76	–	NOT USED
45	1270 (OG/RD)	Cylinder Head Temperature Indicator	77	570 (BK/WH)	Ground
46	639 (LG/VT)	Cooling Fan High Relay Control	78	1027 (PK/LB)	Coil On Plug #7
47	360 (BN/VT)	EGR Vacuum Regulator (EVR) Solenoid	79	1029 (WH/RD)	Coil On Plug #8
48	–	NOT USED	80	926 (LB/OG)	Fuel Pump Control
49	1145 (LB/BK)	Digital Transmission Range (DTR) Sensor (TR2)	81	925 (WH/YE)	Electronic Pressure Control (EPC)
50	1143 (WH/BK)	Digital Transmission Range (DTR) Sensor (TR4)	82	–	NOT USED
51	570 (BK/WH)	Ground	83	264 (WH/LB)	Idle Air Control (IAC) Valve
52	1028 (WH/PK)	Coil On Plug #3	84	136 (DB/YE)	Output Shaft Speed (OSS) Sensor
53	1030 (DG/VT)	Coil On Plug #4	85	282 (DB/OG)	Camshaft Position (CMP) Sensor
54	126 (VT/YE)	Torque Converter Clutch (TCC) Solenoid	86	1154 (WH/BK)	A/C High Pressure Cutout Switch
55	554 (YE/BK)	B+ Keep Alive Power	87	94 (RD/BK)	Left Heated Oxygen Sensor (HO2S) #21
56	191 (LG/BK)	EVAP Canister Purge Valve	88	967 (LB/RD)	Mass Air Flow (MAF) Input
57	–	NOT USED	89	355 (GY/WH)	Throttle Position (TP) Sensor Input
58	679 (GY/BK)	Vehicle Speed Sensor (VSS) (–)	90	351 (BN/WH)	Reference Voltage (VREF)
59	–	NOT USED	91	359 (GY/RD)	Signal Return
60	74 (GY/BK)	Right Heated Oxygen Sensor (HO2S) #11	92	511 (LG)	Brake Pedal Position (BPP) Switch
61	393 (VT/LG)	Left Heated Oxygen Sensor (HO2S) #22	93	387 (RD/WH)	HO2S Heater Voltage Monitor
62	791 (RD/VT)	Fuel Tank Pressure Sensor	94	388 (YE/LB)	HO2S Heater Voltage Monitor
63	–	NOT USED	95	389 (WH/BK)	HO2S Heater Voltage Monitor
64	199 (LB/YE)	Digital Transmission Range (DTR) Sensor (TR3)	96	390 (TN/YE)	HO2S Heater Voltage Monitor
65	352 (BN/LG)	Differential Pressure Feedback EGR (DPFE)	97	–	NOT USED
66	1102 (YE/LG)	Cylinder Heat Temperature (CHT) Sensor	98	562 (LB)	Fuel Injector #8
67	91 (VT/WH)	Canister Vent Solenoid	99	560 (LG/OG)	Fuel Injector #6
68	–	NOT USED	100	558 (BN/LB)	Fuel Injector #4
69	331 (PK/YE)	A/C WOT Cutout Relay Control	101	556 (WH)	Fuel Injector #2
70	–	NOT USED	102	–	NOT USED
71	361 (RD)	Power (Hot in Start or Run)	103	570 (BK/WH)	Ground
72	561 (TN/RD)	Fuel Injector #7	104	1026 (PK/WH)	Coil On Plug #2