112-1 ANTI-THEFT

2001 WINDSTAR

For diagnostic information, refer to Section 419-01 of the Workshop Manual.

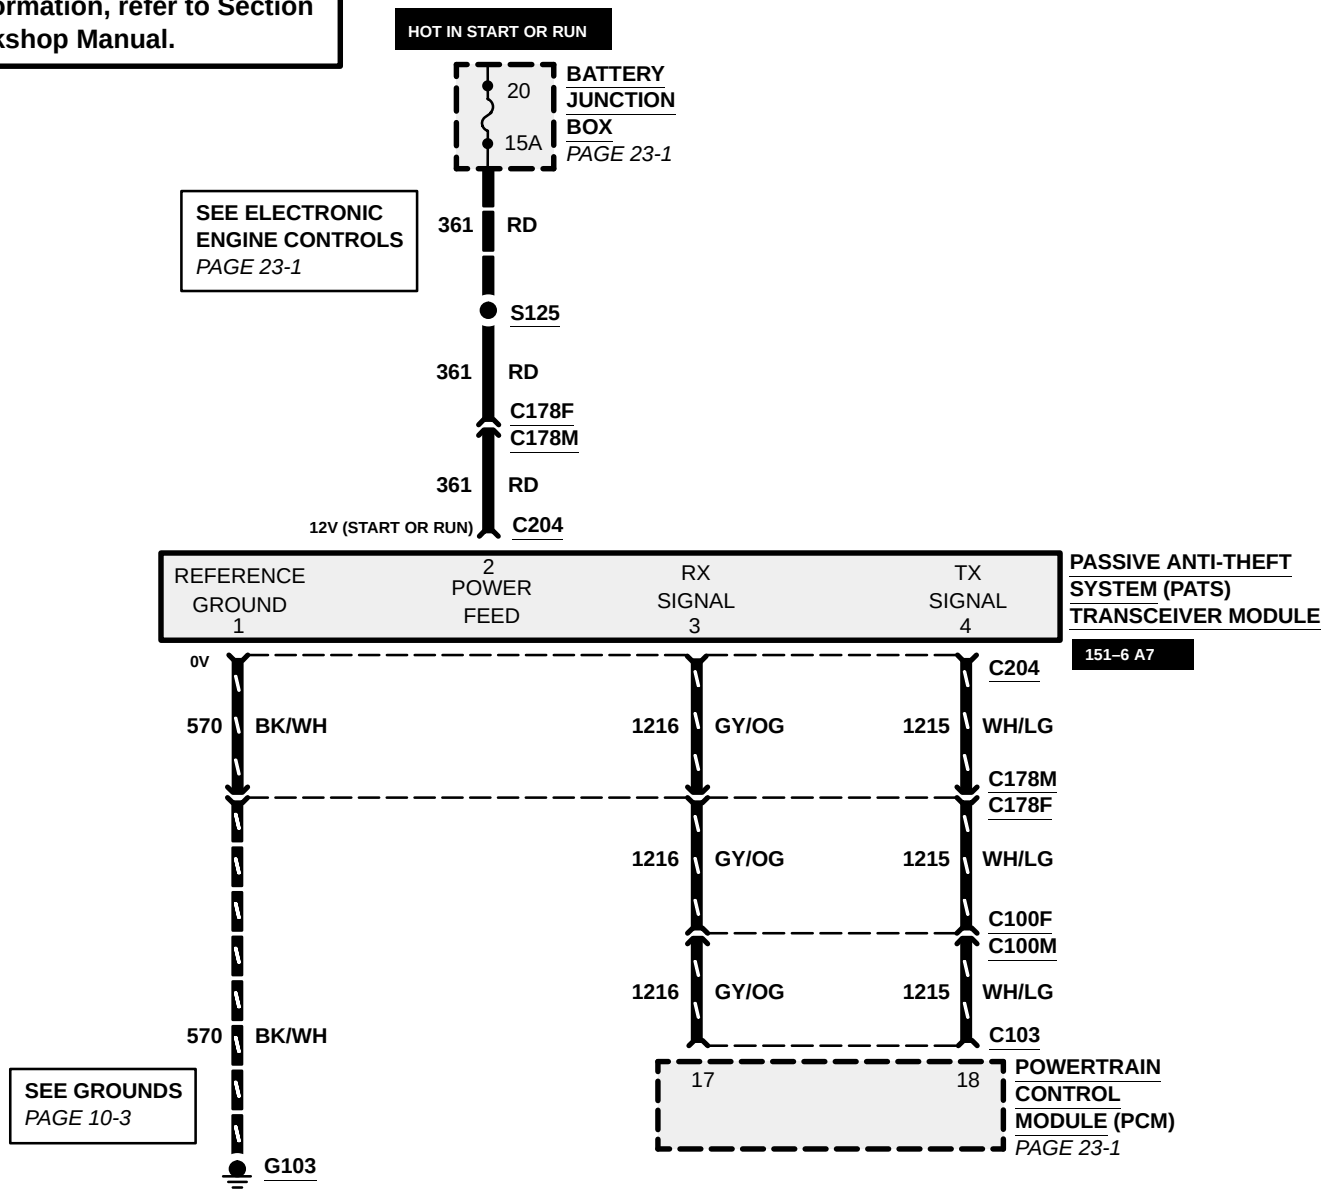

Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.