LONG WHEEL BASE

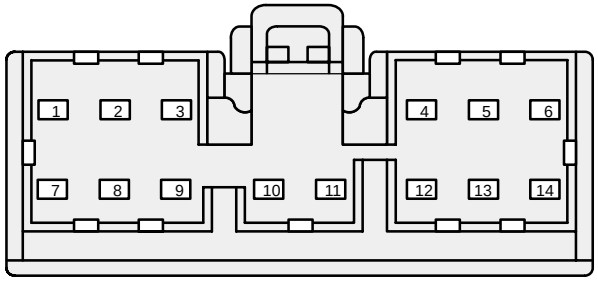

C361

LR SEAT HEATER MODULE

PIN	CIRCUIT	CIRCUIT FUNCTION
1	1020 (DG/VT)	Switch to Module - Cushion Enable
2	461 (OG)	Module to Switch
3	1018 (LG/OG)	Temperature Adjust (+)
4	1019 (TN/LB)	Temperature Adjust (–)
5	1060 (BK/LB)	Seat Heater Sensor
6	1061 (BN/LB)	Seat Heater Sensor
7	1445 (RD/LG)	Power (Hot at All Times)
8	1064 (YE/LB)	Seat Heater Element
9	1066 (GY/LB)	Seat Back Heater Element
10	1062 (RD/LB)	Seat Back Heater Sensor
11	1063 (OG/LB)	Seat Back Heater Sensor
12	1067 (VT/LB)	Seat Back Heater Element
13	1065 (WH/LB)	Seat Heater Element
14	57 (BK)	Ground

LONG WHEEL BASE

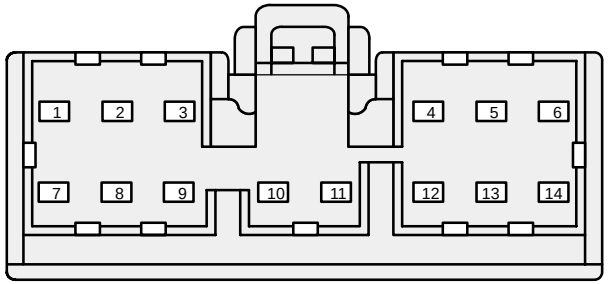

C363

RR SEAT HEATER MODULE

PIN	CIRCUIT	CIRCUIT FUNCTION
1	581 (RD)	Switch to Module - Cushion Enable
2	461 (OG)	Module to Switch
3	579 (BK/OG)	Temperature and Adjust (+)
4	580 (BN)	Temperature and Adjust (–)
5	1060 (BK/LB)	Seat Heater Sensor
6	1061 (BN/LB)	Seat Heater Sensor
7	1445 (RD/LG)	Power (Hot at All Times)
8	1064 (YE/LB)	Seat Heater Element
9	1066 (GY/LB)	Seat Back Heater Element
10	1062 (RD/LB)	Seat Back Heater Sensor
11	1063 (OG/LB)	Seat Back Heater Sensor
12	1067 (VT/LB)	Seat Back Heater Sensor
13	1065 (WH/LB)	Seat Heater Element
14	57 (BK)	Ground