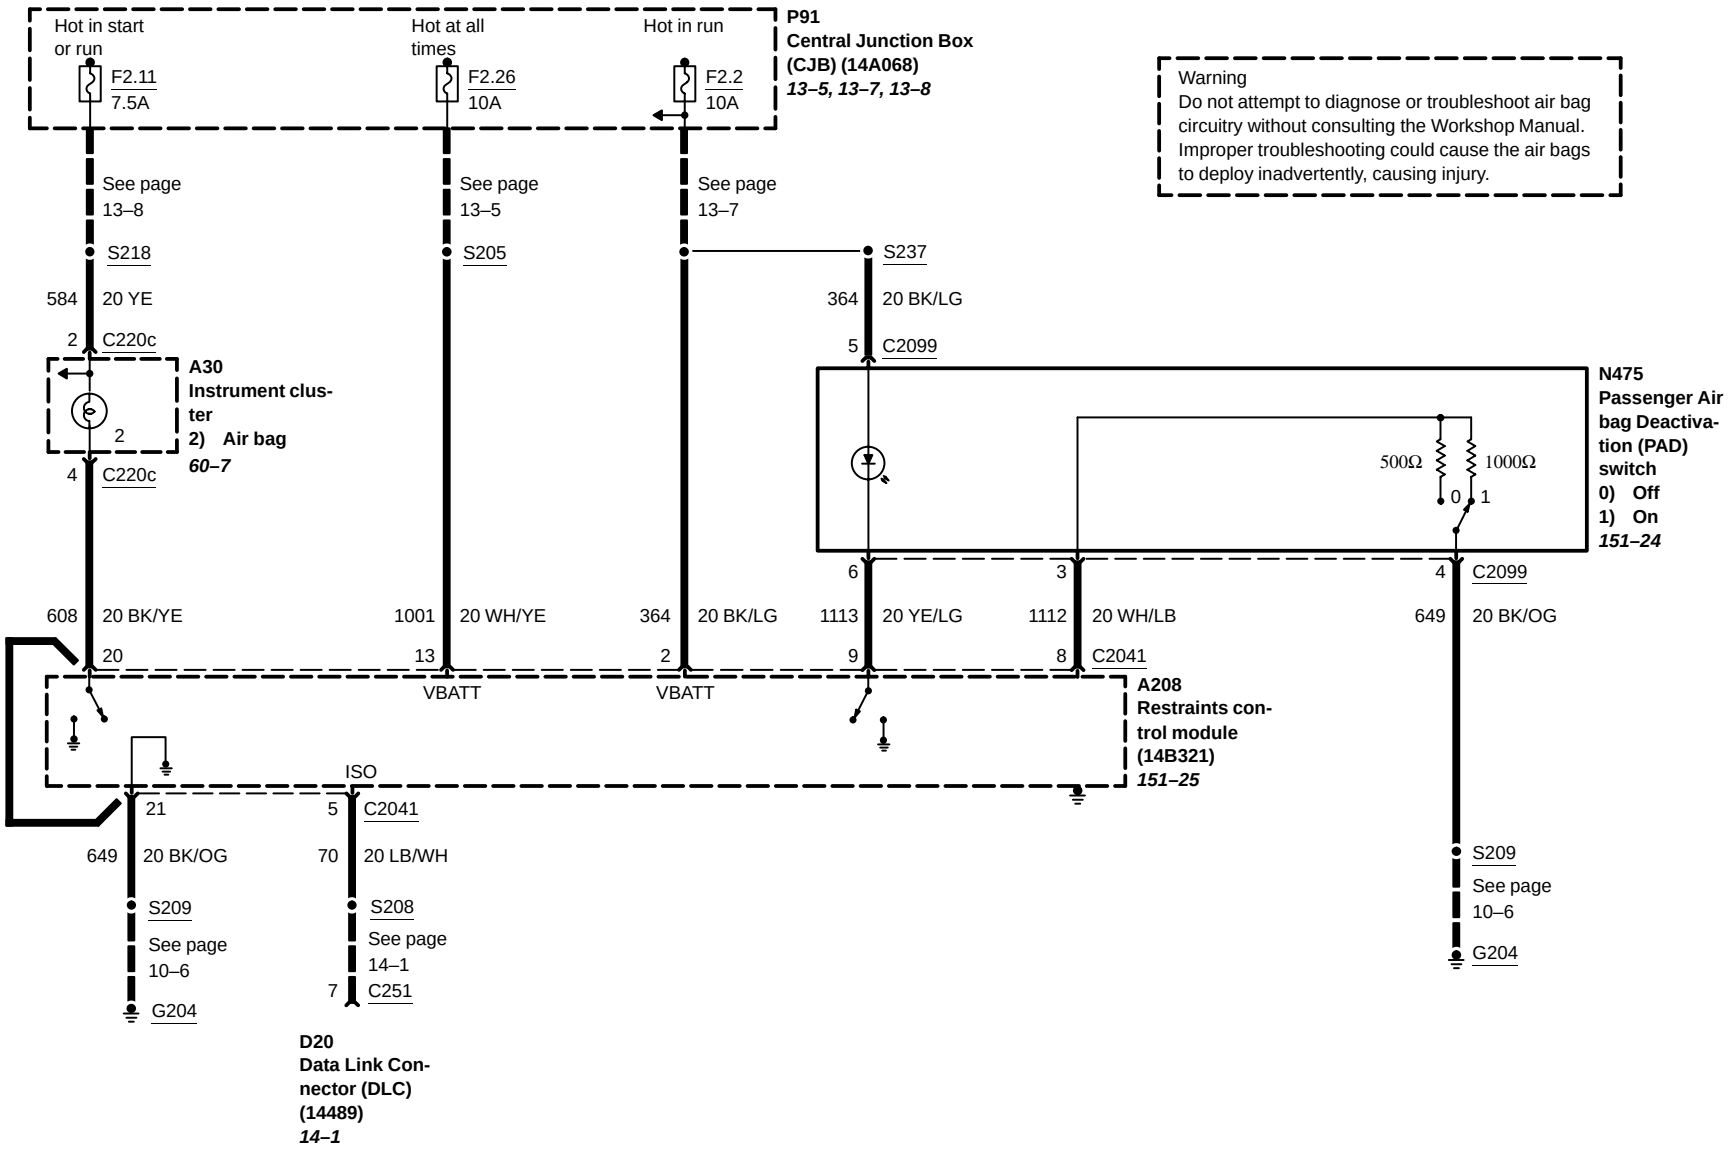
Hot in start or run
F2.11
7.5A
Hot at all times
F2.26
10A
Hot in run
F2.2
10A
P91
Central Junction Box (CJB) (14A068)
13–5, 13–7, 13–8
Warning
Do not attempt to diagnose or troubleshoot air bag circuitry without consulting the Workshop Manual. Improper troubleshooting could cause the air bags to deploy inadvertently, causing injury.
See page 13–8
See page 13–5
See page 13–7
S218
S205
S237
584 20 YE
364 20 BK/LG
2 C220c
5 C2099
A30
Instrument cluster
2) Air bag
60–7
2
4 C220c
N475
Passenger Air bag Deactivation (PAD) switch
0) Off
1) On
151–24
500Ω
1000Ω
0
1
6
3
4 C2099
608 20 BK/YE
1001 20 WH/YE
364 20 BK/LG
1113 20 YE/LG
1112 20 WH/LB
649 20 BK/OG
20
13
2
9
8 C2041
VBATT
VBATT
A208
Restraints control module (14B321)
151–25
ISO
21
5 C2041
649 20 BK/OG
70 20 LB/WH
S209
See page 10–6
G204
S208
See page 14–1
7 C251
D20
Data Link Connector (DLC) (14489)
14–1
S209
See page 10–6
G204