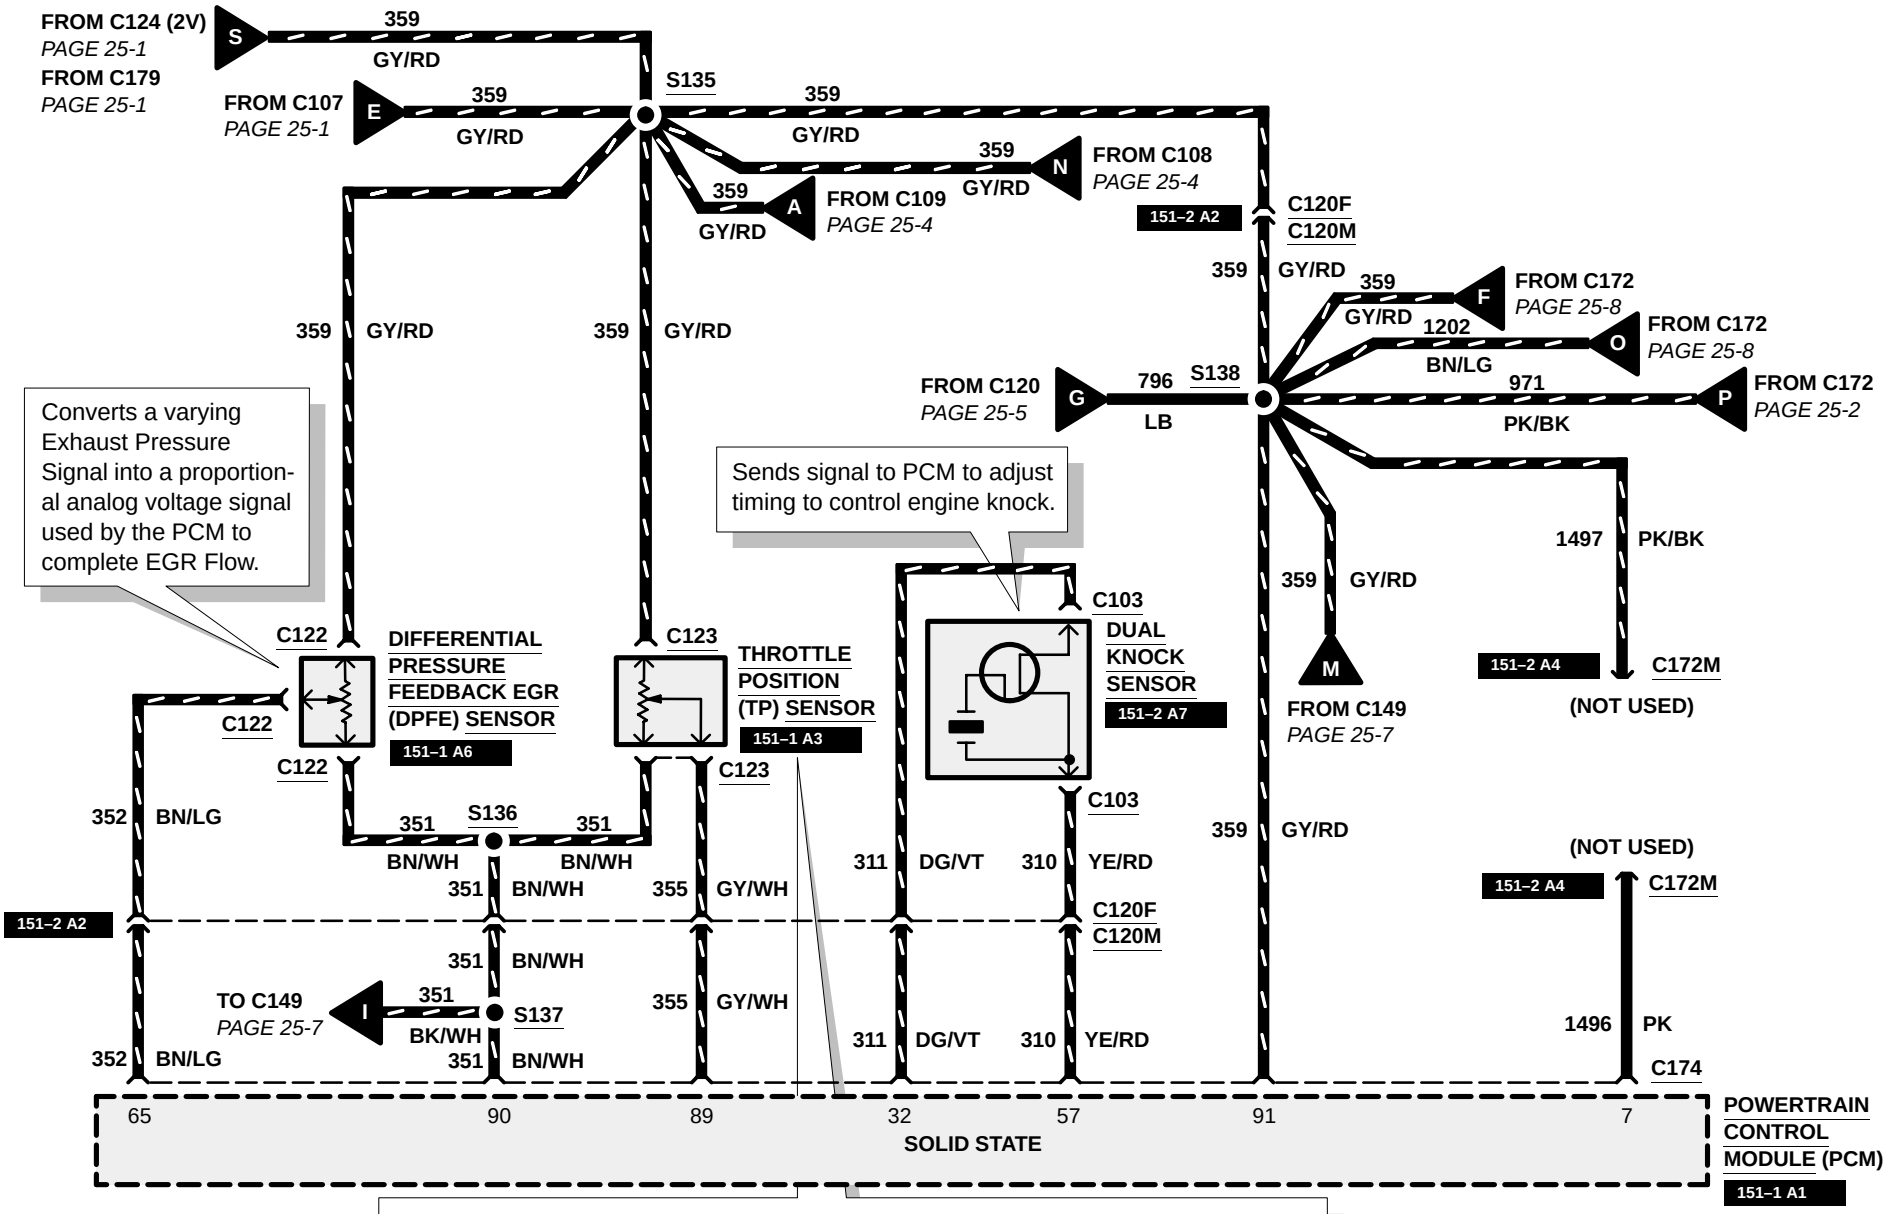
FROM C124 (2V)
PAGE 25-1
FROM C179
PAGE 25-1
S
359
GY/RD
FROM C107
PAGE 25-1
E
359
GY/RD
S135
359
GY/RD
359
GY/RD
N
FROM C108
PAGE 25-4
359
GY/RD
A
FROM C109
PAGE 25-4
151–2 A2
C120F
C120M
359
GY/RD
359
GY/RD
F
FROM C172
PAGE 25-8
1202
BN/LG
O
FROM C172
PAGE 25-8
971
PK/BK
P
FROM C172
PAGE 25-2
359
GY/RD
359
GY/RD
FROM C120
PAGE 25-5
G
796
LB
S138
Converts a varying Exhaust Pressure Signal into a proportional analog voltage signal used by the PCM to complete EGR Flow.
Sends signal to PCM to adjust timing to control engine knock.
1497
PK/BK
359
GY/RD
M
FROM C149
PAGE 25-7
151–2 A4
C172M
(NOT USED)
C122
DIFFERENTIAL PRESSURE FEEDBACK EGR (DPFE) SENSOR
151–1 A6
C122
C122
C123
THROTTLE POSITION (TP) SENSOR
151–1 A3
C123
C103
DUAL KNOCK SENSOR
151–2 A7
C103
352
BN/LG
351
BN/WH
S136
351
BN/WH
351
BN/WH
355
GY/WH
311
DG/VT
310
YE/RD
359
GY/RD
(NOT USED)
151–2 A4
C172M
151–2 A2
C120F
C120M
351
BN/WH
TO C149
PAGE 25-7
I
351
BK/WH
S137
355
GY/WH
1496
PK
352
BN/LG
351
BN/WH
311
DG/VT
310
YE/RD
C174
65
90
89
32
57
91
7
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–1 A1
As the resistance varies according to accelerator pedal angle, the PCM applies voltage to this sensor and then measures the voltage drop to help calculate fuel delivery.