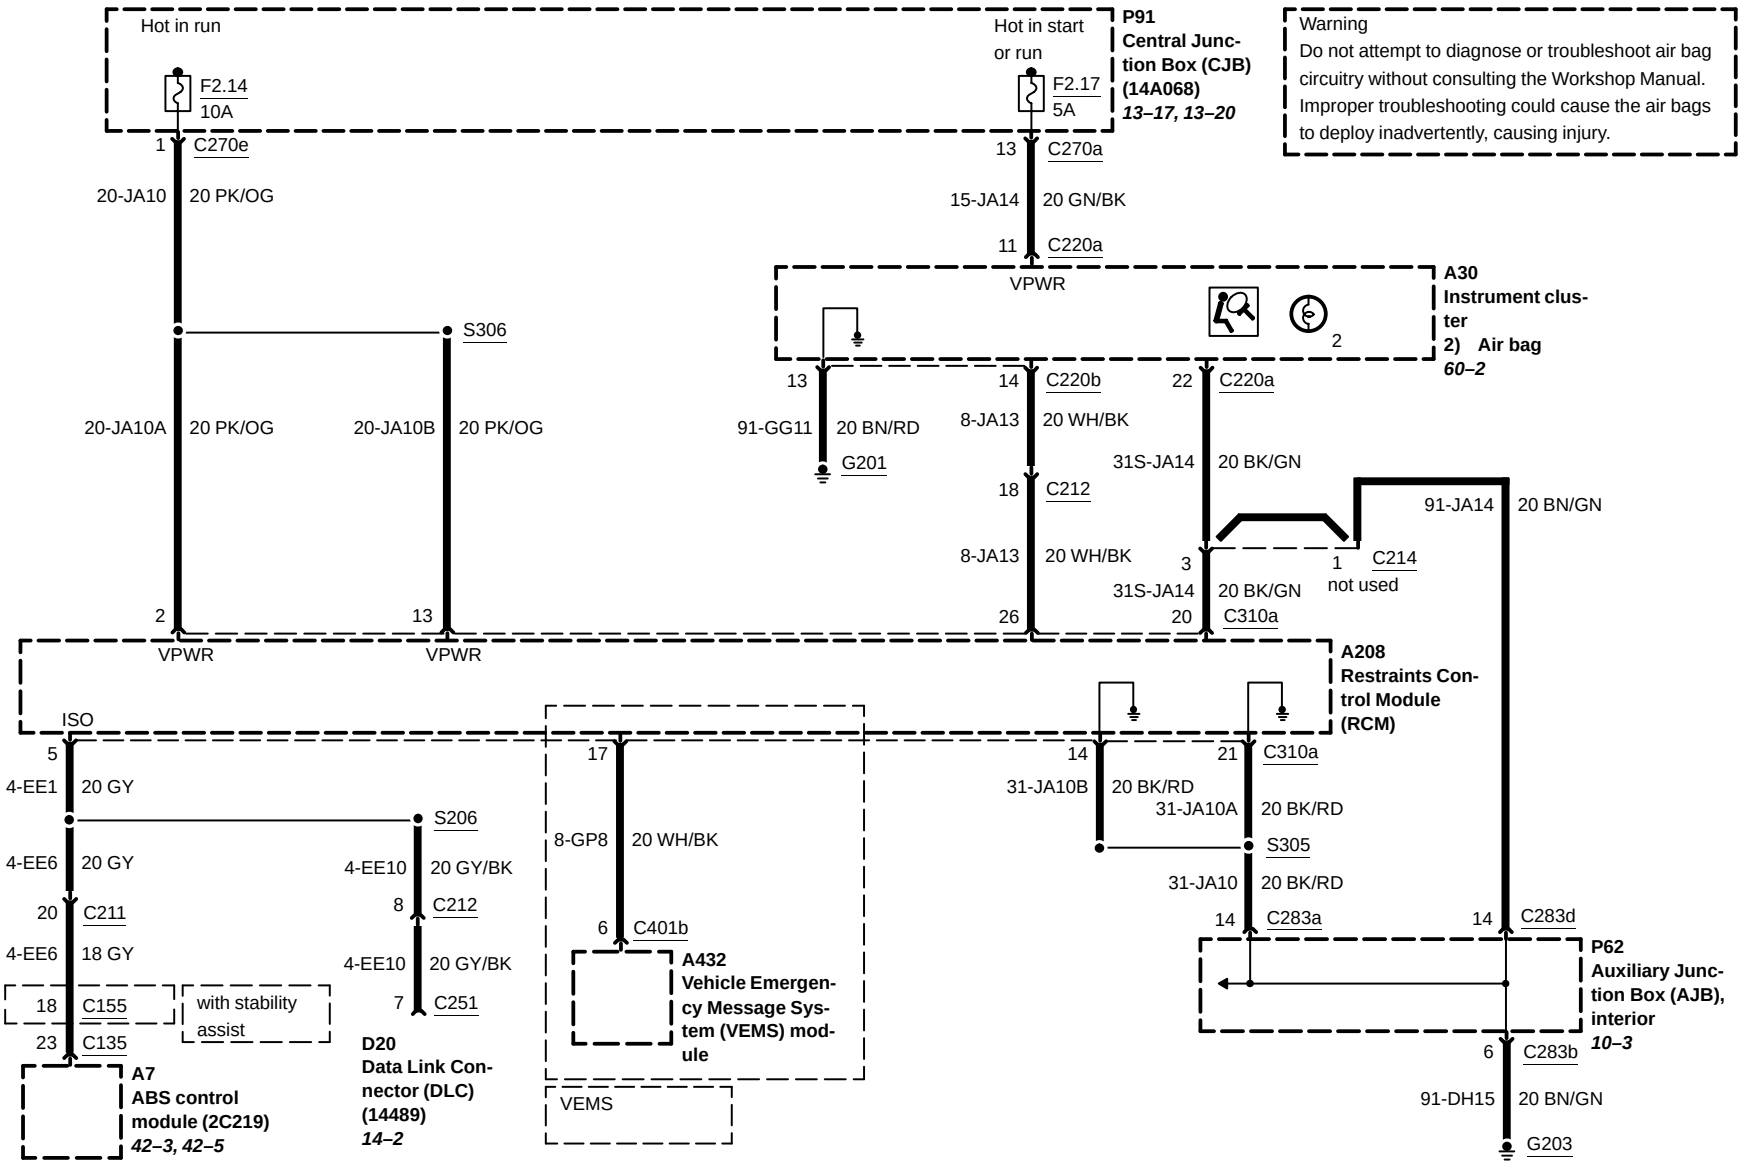
Hot in run
F2.14
10A
1
C270e
20-JA10
20 PK/OG
Hot in start
or run
F2.17
5A
P91
Central Junction Box (CJB)
(14A068)
13–17, 13–20
13
C270a
15-JA14
20 GN/BK
11
C220a
VPWR
Warning
Do not attempt to diagnose or troubleshoot air bag circuitry without consulting the Workshop Manual. Improper troubleshooting could cause the air bags to deploy inadvertently, causing injury.
A30
Instrument cluster
2) Air bag
60–2
2
S306
20-JA10A
20 PK/OG
20-JA10B
20 PK/OG
13
91-GG11
20 BN/RD
G201
14
C220b
8-JA13
20 WH/BK
18
C212
22
C220a
31S-JA14
20 BK/GN
91-JA14
20 BN/GN
3
1
C214
not used
8-JA13
20 WH/BK
31S-JA14
20 BK/GN
2
13
26
20
C310a
VPWR
VPWR
A208
Restraints Control Module
(RCM)
ISO
5
4-EE1
20 GY
17
8-GP8
20 WH/BK
6
C401b
A432
Vehicle Emergency Message System (VEMS) module
VEMS
14
21
C310a
31-JA10B
20 BK/RD
31-JA10A
20 BK/RD
S305
31-JA10
20 BK/RD
14
C283a
14
C283d
P62
Auxiliary Junction Box (AJB), interior
10–3
6
C283b
91-DH15
20 BN/GN
G203
S206
4-EE6
20 GY
20
C211
4-EE6
18 GY
18
C155
with stability assist
23
C135
A7
ABS control module (2C219)
42–3, 42–5
4-EE10
20 GY/BK
8
C212
4-EE10
20 GY/BK
7
C251
D20
Data Link Connector (DLC)
(14489)
14–2