C602

19A041/14630

N85
Door ajar switch,
right front

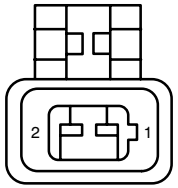

F02117

Pin	Circuit	Circuit function
1	761 (GY/RD)	Door ajar switch, right front
2	57 (BK)	Ground

C603

14630

M242
Door lock actuator,
right front

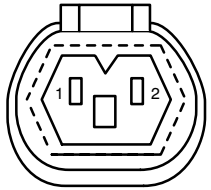

F02227

Pin	Circuit	Circuit function
1	118 (PK/OG)	Door unlock, output
2	117 (PK/BK)	Door lock, output

C604

14630

N105
Window adjust
switch, passenger
side

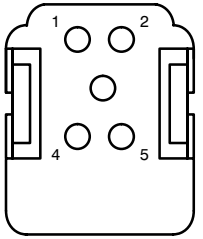

F05013

Pin	Circuit	Circuit function
1	333 (YE/RD)	Window motor, feed, Up
2	314 (TN/LB)	Window switch, feed, right front, Down
3	400 (LB/BK)	Accessory relay, switched power, output
4	313 (WH/YE)	Window switch, feed, right front, Up
5	334 (RD/YE)	Window motor, feed, Down