C267a (BK)

14N104

A30
Instrument cluster

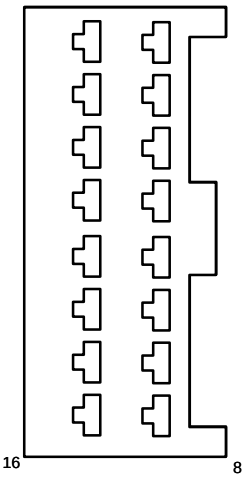

F16037

Pin	Circuit	Circuit Function
1	MA04 (BU/RD)	Fuel pump/fuel gauge sender
2	MA03 (BU/WH)	Coolant temperature sensor 2, input
3	MJ01 (PK/BU)	Vehicle Speed Sensor (VSS) +
4	AV02 (LG)	Tachometer
5	MA06 (VT)	Voltage supplied at all times (overload protected)
6	AV32 (GN/YE)	Vehicle Speed Sensor (VSS) +
7	–	not used
8	AV05 (OG/BK)	Powertrain Control Module (PCM) - fuel flow
9	MA16 (BN)	Message center switch - Select
10	MA15 (GN/RD)	Message center switch - Reset
11	MA14 (YE/GN)	Message center switch - Units
12	–	not used
13	MA11 (RD/BU)	Message center switch - Trip select
14	MA12 (GN)	Message center switch - Trip reset
15	–	not used
16	–	not used

C267b (BK)

14N104

A30
Instrument cluster

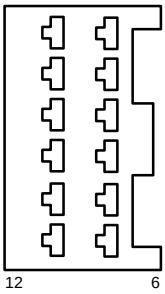

F12061

Pin	Circuit	Circuit Function
1	MA17 (YE/GN)	Outside temperature sensor, input
2	–	not used
3	MA01 (BU)	Voltage supplied in Start and Run (overload protected)
4	MJE2 (BK/RD)	Ground
5	IG91 (PK/BK)	Illumination, Ground
6	MAE2 (BK)	Ground
7	–	not used
8	NN01 (VT/WH)	Low fuel indicator, control
9	–	not used
10	EJ18 (RD)	Cruise set, indicator, switch sense
11	MA41 (BN/WH)	Door ajar indicator, control
12	HC06 (YE/GN)	Instrument cluster, from,EATC