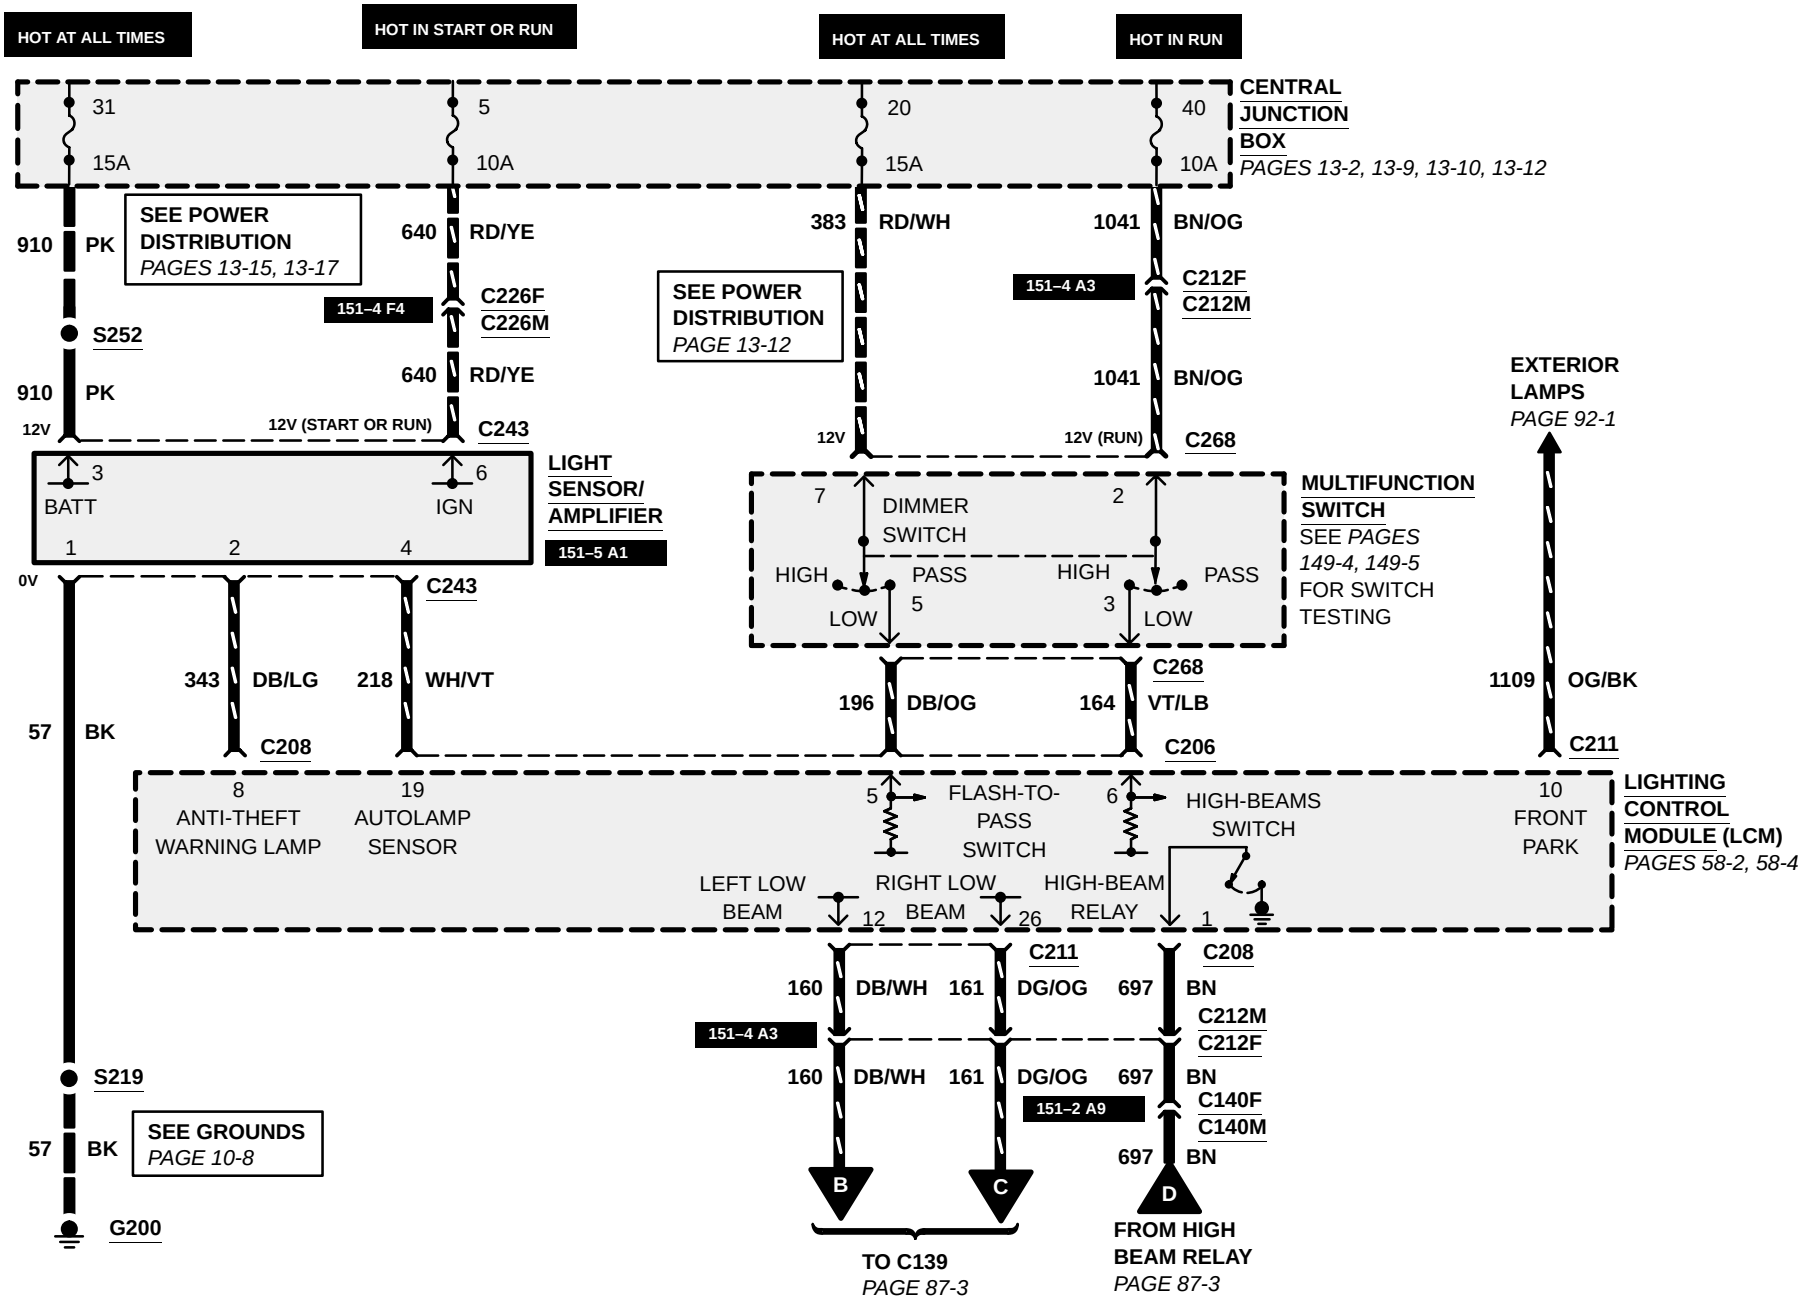
HOT AT ALL TIMES
HOT IN START OR RUN
HOT AT ALL TIMES
HOT IN RUN
31
15A
5
10A
20
15A
40
10A
CENTRAL JUNCTION BOX
PAGES 13-2, 13-9, 13-10, 13-12
SEE POWER DISTRIBUTION
PAGES 13-15, 13-17
910 PK
640 RD/YE
151–4 F4
C226F
C226M
S252
910 PK
640 RD/YE
12V
12V (START OR RUN)
C243
383 RD/WH
1041 BN/OG
151–4 A3
C212F
C212M
SEE POWER DISTRIBUTION
PAGE 13-12
1041 BN/OG
12V
12V (RUN)
C268
EXTERIOR LAMPS
PAGE 92-1
3
BATT
6
IGN
1
2
4
LIGHT SENSOR/ AMPLIFIER
151–5 A1
7
DIMMER SWITCH
2
HIGH
PASS
LOW
5
HIGH
PASS
3
LOW
MULTIFUNCTION SWITCH
SEE PAGES 149-4, 149-5 FOR SWITCH TESTING
0V
C243
343 DB/LG
218 WH/VT
196 DB/OG
164 VT/LB
C268
1109 OG/BK
57 BK
C208
C206
C211
8
ANTI-THEFT WARNING LAMP
19
AUTOLAMP SENSOR
5
FLASH-TO-PASS SWITCH
6
HIGH-BEAMS SWITCH
10
FRONT PARK
LEFT LOW BEAM
12
RIGHT LOW BEAM
26
HIGH-BEAM RELAY
1
LIGHTING CONTROL MODULE (LCM)
PAGES 58-2, 58-4
160 DB/WH
161 DG/OG
C211
697 BN
C208
151–4 A3
C212M
C212F
160 DB/WH
161 DG/OG
697 BN
151–2 A9
C140F
C140M
697 BN
S219
57 BK
SEE GROUNDS
PAGE 10-8
G200
B
C
D
TO C139
PAGE 87-3
FROM HIGH BEAM RELAY
PAGE 87-3