C486

14A584

N300
Window operating switch, driver side front (multiple)



F04029

Pin	Circuit	Circuit Function
1	15S-AJ2 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected), switched
2	15-AJ10 (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected)
3	31-AJ7 (BK)	Ground
4	15-AJ7 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected)

C487 (NA)

14A584

N300
Window operating switch, driver side front (multiple)

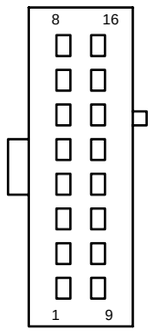

F16001

Pin	Circuit	Circuit Function
1	33-AJ18 (YE/VT)	Switched between: Battery voltage, Ground or Open
2	–	not used
3	–	not used
4	32-AJ18 (WH/VT)	Switched between: Battery voltage, Ground or Open
5	–	not used
6	–	not used
7	33-AJ24 (YE)	Switched between: Battery voltage, Ground or Open
8	32-AJ24 (WH)	Switched between: Battery voltage, Ground or Open
9	33-AJ26 (YE)	Switched between: Battery voltage, Ground or Open
10	–	not used
11	15S-AJ40 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected), switched
12	15S-AJ42 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected), switched
13	–	not used
14	15-LH14 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected)
15	33-AJ14 (YE/BU)	Switched between: Battery voltage, Ground or Open
16	32-AJ14 (WH/BU)	Switched between: Battery voltage, Ground or Open