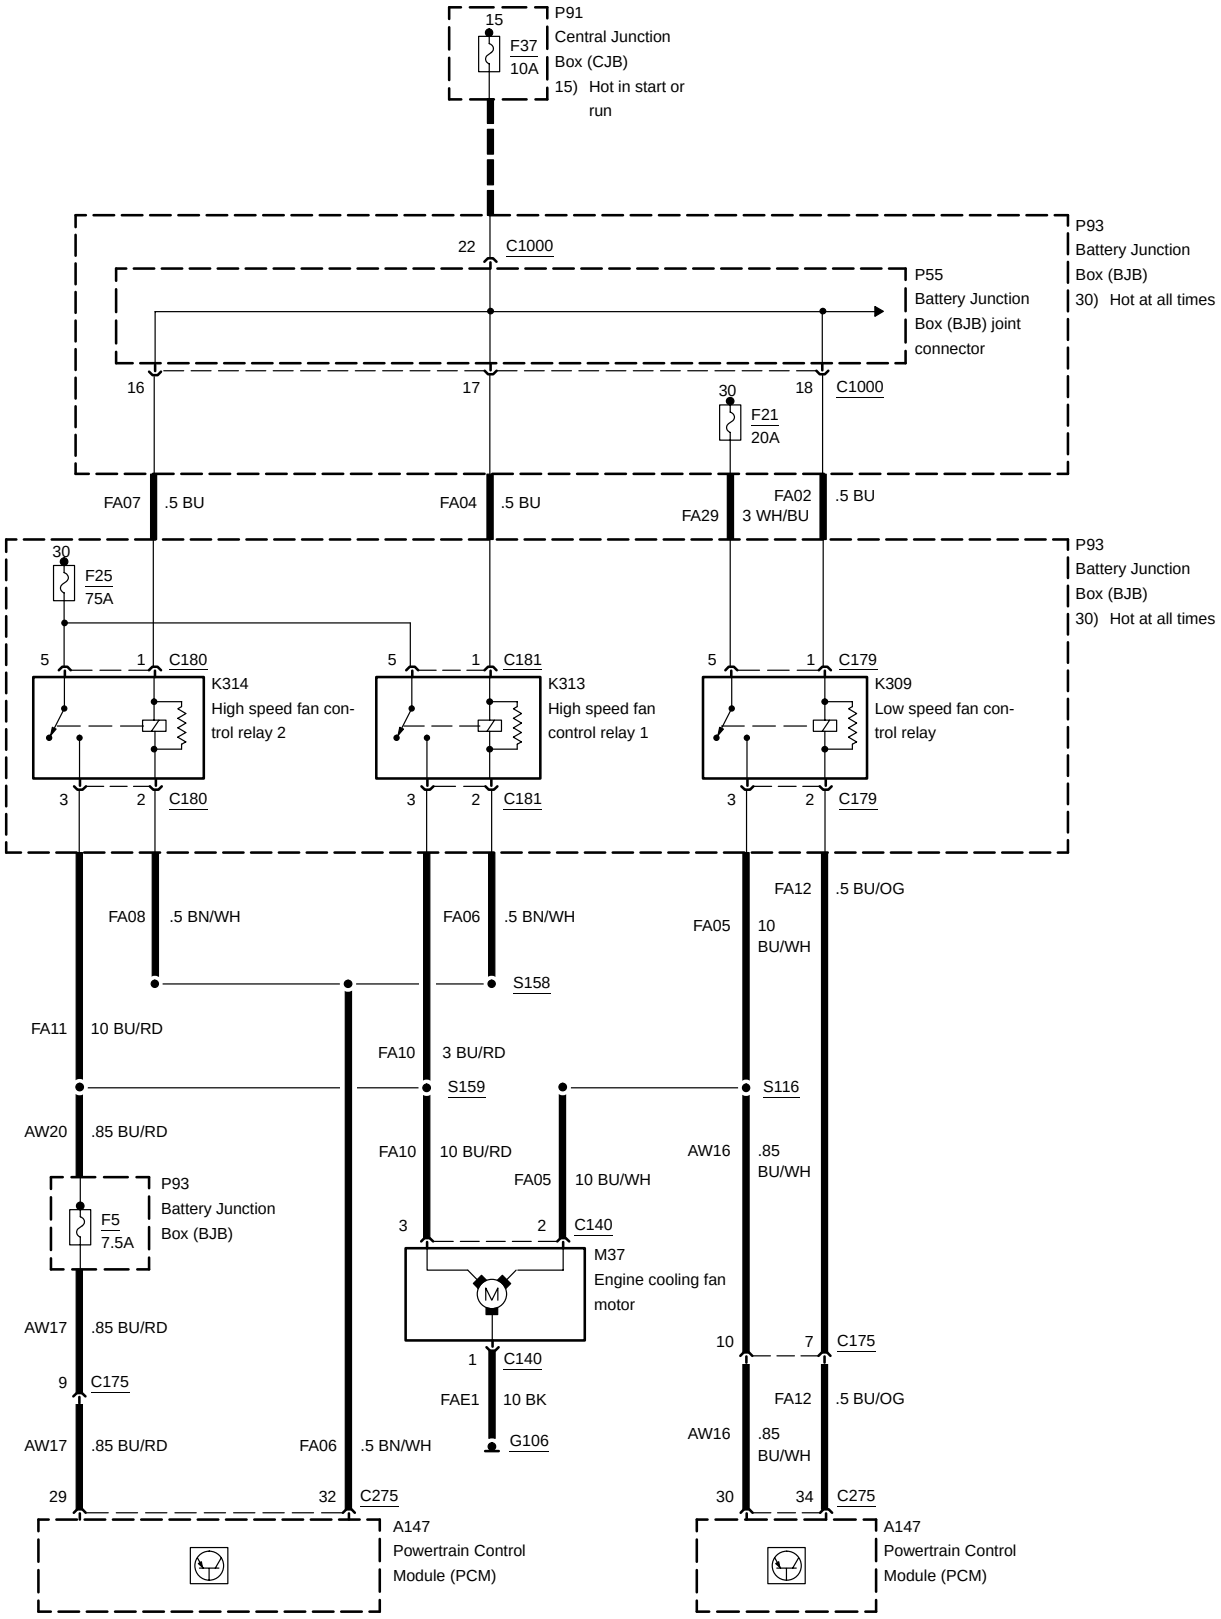
15
F37
10A
P91
Central Junction
Box (CJB)
15) Hot in start or
run
22
C1000
P93
Battery Junction
Box (BJB)
30) Hot at all times
P55
Battery Junction
Box (BJB) joint
connector
16
17
30
18
C1000
F21
20A
FA07 .5 BU
FA04 .5 BU
FA29
FA02
3 WH/BU
.5 BU
30
F25
75A
P93
Battery Junction
Box (BJB)
30) Hot at all times
5
1
C180
K314
High speed fan con-
trol relay 2
5
1
C181
K313
High speed fan
control relay 1
5
1
C179
K309
Low speed fan con-
trol relay
3
2
C180
3
2
C181
3
2
C179
FA08 .5 BN/WH
FA06 .5 BN/WH
FA12 .5 BU/OG
FA05
10
BU/WH
S158
FA11 10 BU/RD
FA10 3 BU/RD
S159
S116
AW20 .85 BU/RD
FA10 10 BU/RD
FA05 10 BU/WH
AW16 .85
BU/WH
P93
Battery Junction
Box (BJB)
F5
7.5A
3
2
C140
M37
Engine cooling fan
motor
M
AW17 .85 BU/RD
1
C140
10
7
C175
9
C175
FAE1 10 BK
FA12 .5 BU/OG
AW17 .85 BU/RD
FA06 .5 BN/WH
G106
AW16 .85
BU/WH
29
32
C275
30
34
C275
A147
Powertrain Control
Module (PCM)
A147
Powertrain Control
Module (PCM)