C337

14C691

A154

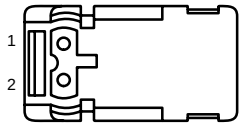

F02215

Pin	Circuit	Circuit function
1	31S-JA38 (BK/RD)	Ground, switch
2	30S-JA38 (RD/BK)	Voltage supplied at all times (not overload protected), switch

C357

14B719

Power seat motor assembly, left

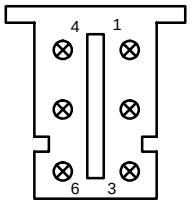

F06138

Pin	Circuit	Circuit function
1	33-AH9 (YE/GN)	Switched between: Battery voltage, Ground or Open
2	32-AH10 (WH/BK)	Switched between: Battery voltage, Ground or Open
3	33-AH10 (YE/BK)	Switched between: Battery voltage, Ground or Open
4	32-AH9 (WH/GN)	Switched between: Battery voltage, Ground or Open
5	33-AH11 (YE/VT)	Switched between: Battery voltage, Ground or Open
6	32-AH11 (WH/VT)	Switched between: Battery voltage, Ground or Open

C359

14B719

Heated seat module, driver side front

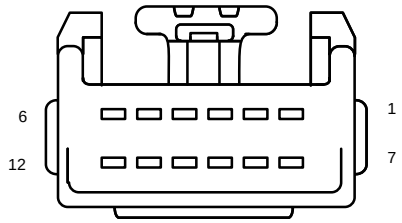

F12075

Pin	Circuit	Circuit function
1	31-HC21 (BK)	Ground
2	–	not used
3	9-HC23 (BN/YE)	Sensor signal return (reference/ground)
4	8-HC23 (WH/BK)	Sensor signal
5	20-HC21 (PK/BK)	Voltage, hot in run only
6	32-HC17 (WH/BU)	Switched between: Battery voltage, Ground or Open
7	32-HC16 (WH/RD)	Switched between: Battery voltage, Ground or Open
8	8-HC15 (WH)	Sensor signal
9	33-HC15 (YE)	Switched between: Battery voltage, Ground or Open
10	32-HC15 (WH)	Switched between: Battery voltage, Ground or Open
11	10-HC15 (GY)	Signal 2 (Y–direction, reverse, downward)
12	30-HC21 (RD)	Voltage supplied at all times (not overload protected)