Automatic

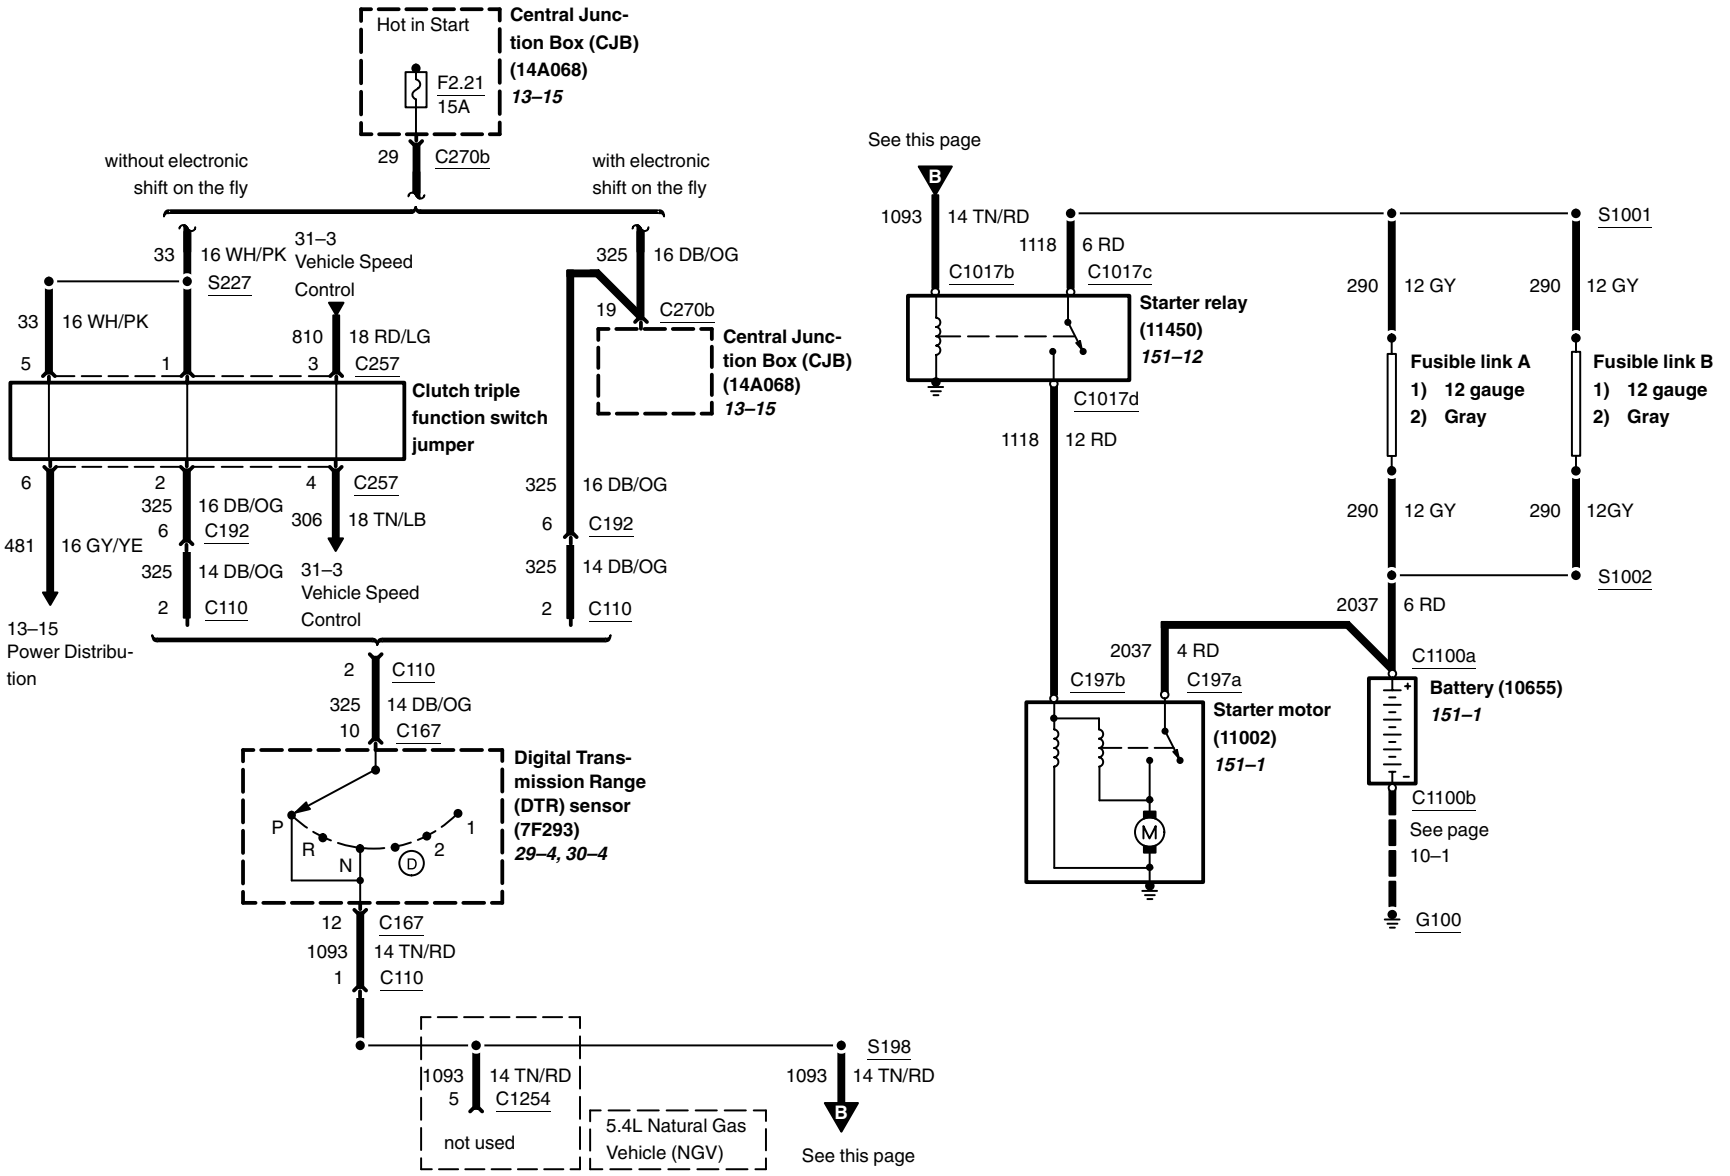
Hot in Start
Central Junction Box (CJB) (14A068) 13–15
F2.21 15A
29 C270b
without electronic shift on the fly
with electronic shift on the fly
33 16 WH/PK S227
31–3 Vehicle Speed Control
33 16 WH/PK
5
1
810 18 RD/LG
3 C257
Clutch triple function switch jumper
325 16 DB/OG
19 C270b
Central Junction Box (CJB) (14A068) 13–15
6
2
4 C257
325 16 DB/OG
6 C192
306 18 TN/LB
481 16 GY/YE
325 14 DB/OG
2 C110
31–3 Vehicle Speed Control
13–15 Power Distribution
325 16 DB/OG
6 C192
325 14 DB/OG
2 C110
2 C110
325 14 DB/OG
10 C167
Digital Transmission Range (DTR) sensor (7F293) 29–4, 30–4
P
R
N
D
1
2
12 C167
1093 14 TN/RD
1 C110
1093 14 TN/RD
5 C1254
not used
5.4L Natural Gas Vehicle (NGV)
S198
1093 14 TN/RD
See this page
See this page
1093 14 TN/RD
C1017b
1118 6 RD
C1017c
Starter relay (11450) 151–12
C1017d
1118 12 RD
290 12 GY
290 12 GY
S1001
Fusible link A 1) 12 gauge 2) Gray
Fusible link B 1) 12 gauge 2) Gray
290 12 GY
290 12GY
S1002
2037 6 RD
C1100a
2037 4 RD
C197b
C197a
Starter motor (11002) 151–1
Battery (10655) 151–1
C1100b
See page 10–1
G100
M