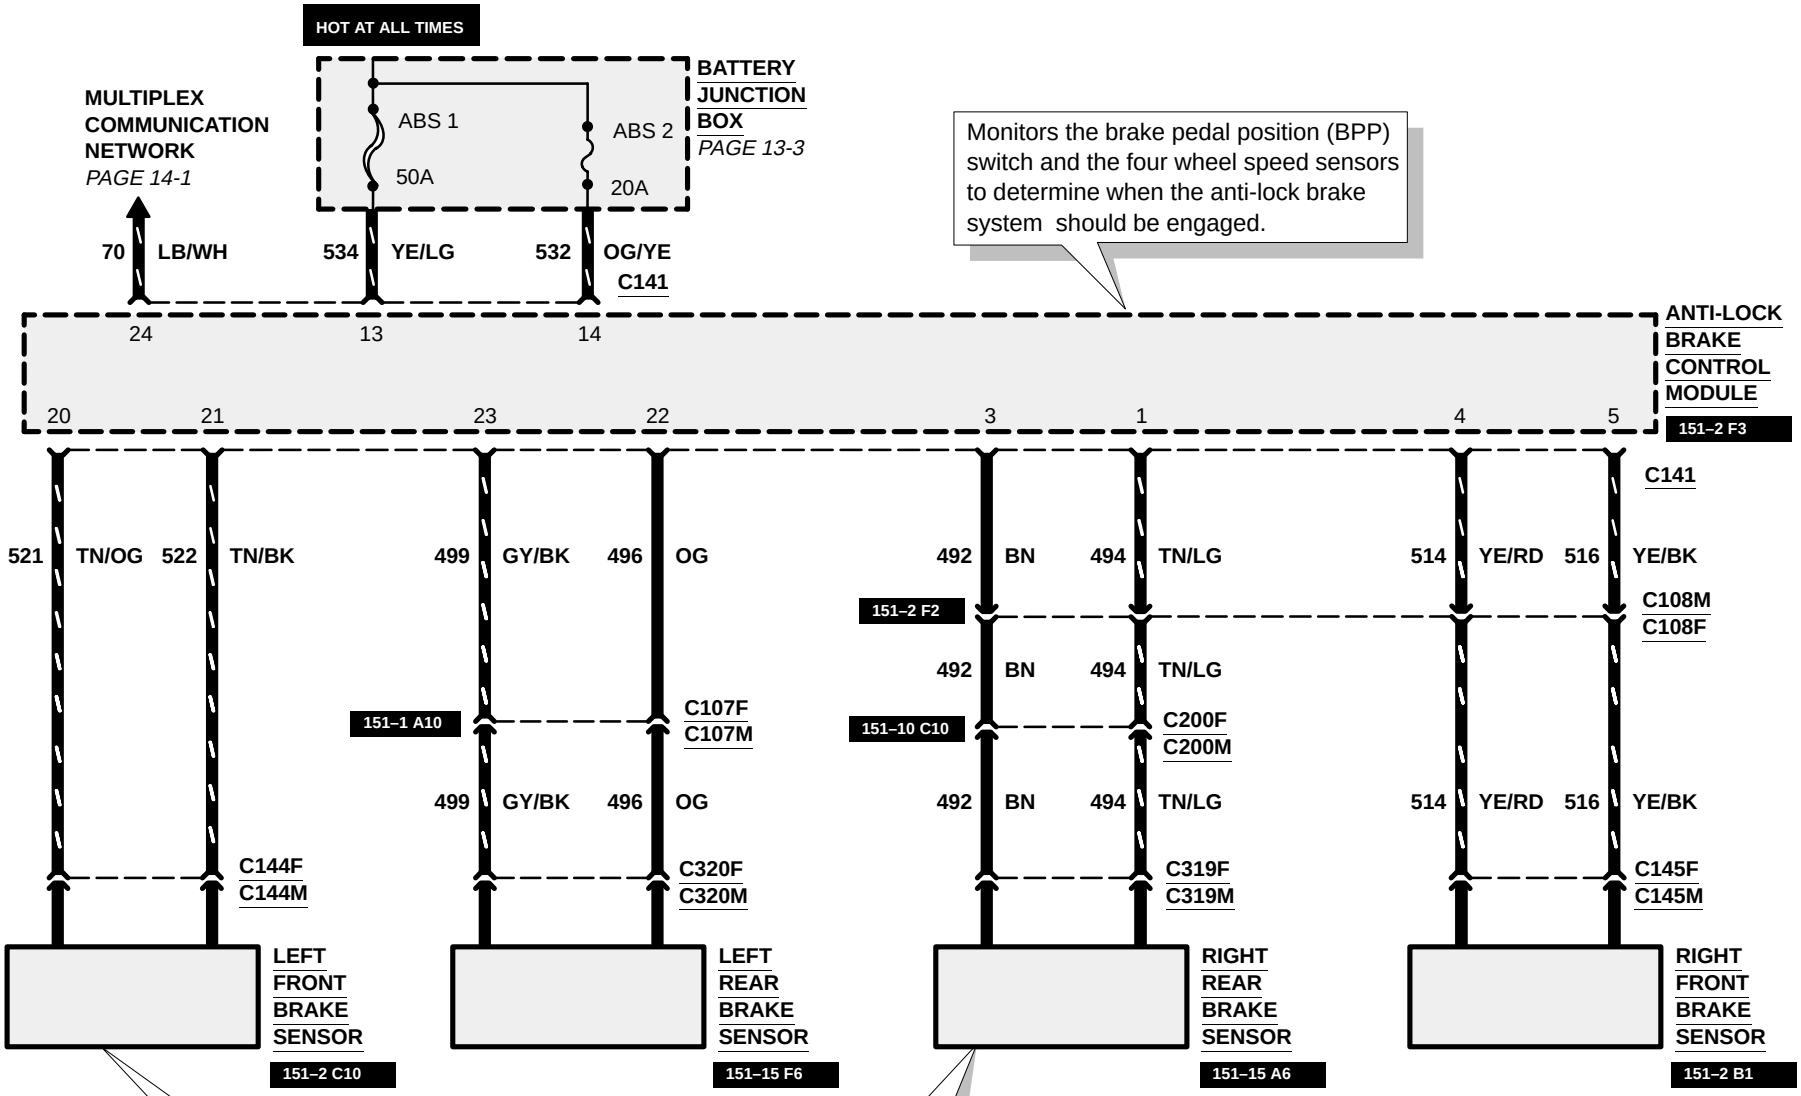
HOT AT ALL TIMES
MULTIPLEX COMMUNICATION NETWORK
PAGE 14-1
BATTERY JUNCTION BOX
PAGE 13-3
ABS 1
50A
ABS 2
20A
70 LB/WH
534 YE/LG
532 OG/YE
C141
24
13
14
Monitors the brake pedal position (BPP) switch and the four wheel speed sensors to determine when the anti-lock brake system should be engaged.
ANTI-LOCK BRAKE CONTROL MODULE
151–2 F3
20
21
23
22
3
1
4
5
C141
521 TN/OG
522 TN/BK
499 GY/BK
496 OG
492 BN
494 TN/LG
514 YE/RD
516 YE/BK
151–2 F2
C108M
C108F
492 BN
494 TN/LG
151–1 A10
C107F
C107M
151–10 C10
C200F
C200M
499 GY/BK
496 OG
492 BN
494 TN/LG
514 YE/RD
516 YE/BK
C144F
C144M
C320F
C320M
C319F
C319M
C145F
C145M
LEFT FRONT BRAKE SENSOR
151–2 C10
LEFT REAR BRAKE SENSOR
151–15 F6
RIGHT REAR BRAKE SENSOR
151–15 A6
RIGHT FRONT BRAKE SENSOR
151–2 B1
A variable reluctance sensor and toothed speed indicator ring used to determine wheel speed. As ring teeth pass by reluctance sensor, a pulsing voltage signal is generated and sent to anti-lock brake control module. Voltage pulses are directly proportional to rotational wheel speed.