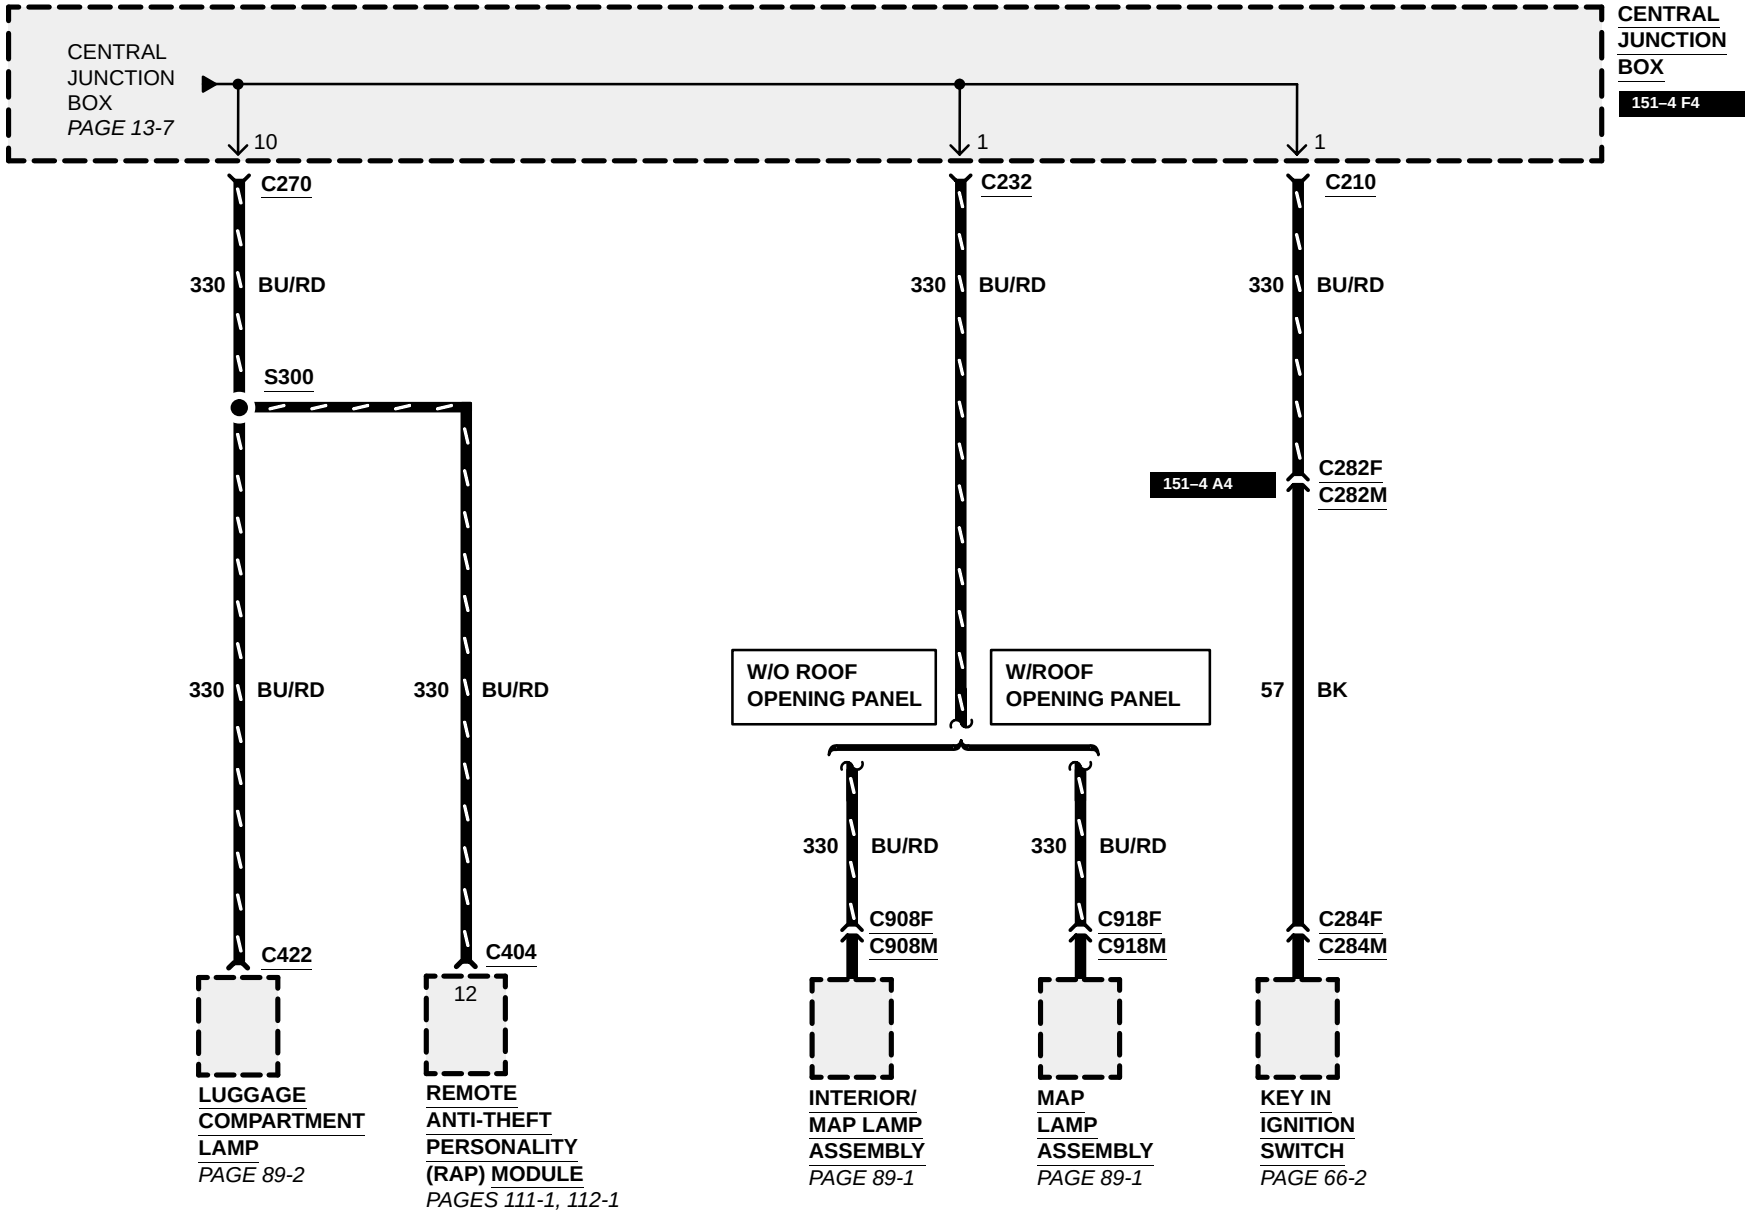
CENTRAL JUNCTION BOX
PAGE 13-7
10
1
1
CENTRAL JUNCTION BOX
151–4 F4
C270
C232
C210
330 BU/RD
330 BU/RD
330 BU/RD
S300
151–4 A4
C282F
C282M
330 BU/RD
330 BU/RD
W/O ROOF OPENING PANEL
W/ROOF OPENING PANEL
57 BK
330 BU/RD
330 BU/RD
C908F
C908M
C918F
C918M
C284F
C284M
C422
C404
12
LUGGAGE COMPARTMENT LAMP
PAGE 89-2
REMOTE ANTI-THEFT PERSONALITY (RAP) MODULE
PAGES 111-1, 112-1
INTERIOR/ MAP LAMP ASSEMBLY
PAGE 89-1
MAP LAMP ASSEMBLY
PAGE 89-1
KEY IN IGNITION SWITCH
PAGE 66-2