C1162

12B637

B248
Electronic thermo-stat

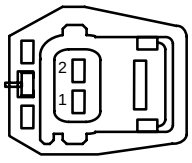

F02055

Pin	Circuit	Circuit Function
1	653 (DB)	Electronic thermostat, to, Pow-ertrain Control Module (PCM)
2	34 (LB/OG)	Voltage supplied in Start and Run (overload protected)

C1163

12B637

Y57
Swirl control sole-noid valve

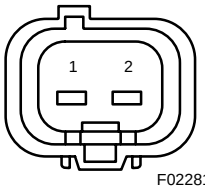

F02281

Pin	Circuit	Circuit Function
1	34 (LB/OG)	Voltage supplied in Start and Run (overload protected)
2	1276 (WH/OG)	Swirl control solenoid valve, to, Powertrain Control Module (PCM)

C1180

12B637

B41
Camshaft position sensor

2.3L

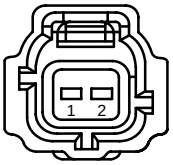

F02101

2.5L, 3.0L

F02109

Pin	Circuit	Circuit Function
1	359 (GY/RD)	signal, return
2	282 (DB/OG)	Camshaft position sensor, input

C1181

12B637

Y108
Injector 1



F02058

Pin	Circuit	Circuit Function
1	555 (TN)	Fuel injector 1, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C1182

12B637

Y109
Injector 2



F02058

Pin	Circuit	Circuit Function
1	556 (WH)	Fuel injector 2, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C1183

12B637

Y110
Injector 3



F02058

Pin	Circuit	Circuit Function
1	557 (BN/YE)	Fuel injector 3, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C1184

12B637

Y111
Injector 4



F02058

Pin	Circuit	Circuit Function
1	558 (BN/LB)	Fuel injector 4, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C1185

12B637

Y112
Injector 5



F02058

Pin	Circuit	Circuit Function
1	559 (TN/BK)	Fuel injector 5, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)