C178

12B637

B40
Exhaust Pressure Transducer (EPT) sensor

3.0L

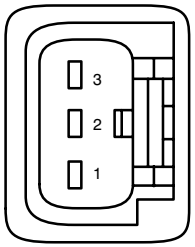

F03161

3.9L

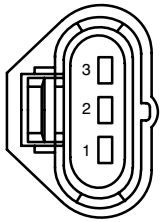

F03101

Pin	Circuit	Circuit function
1	7-RJ7 (YE/BU)	Voltage DC supplied at all times (sensor)
2	9-RJ7 (BN/BU)	Sensor signal return (reference/ground)
3	8-RJ7 (WH/BU)	Sensor signal

C179

12B637

Y33
Electr. Vacuum Regulator (EVR) solenoid valve

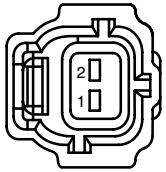

F02101

Pin	Circuit	Circuit function
1	15S-RL7 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected), Switched
2	91S-RL7 (BN/GN)	Ground, Switched

C180

12B637

B41
Camshaft position sensor (6B288)

3.0L



F02183

3.9L

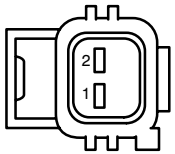

F02107

Pin	Circuit	Circuit function
1	9-RJ3 (BN/WH)	Sensor signal return (reference/ground)
2	8-RJ3 (WH/VT)	Sensor signal

C181

9D930/12B637

Y108
Fuel injector 1 (9F593)

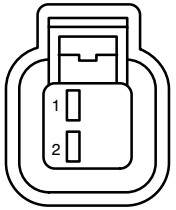

F02069

Pin	Circuit	Circuit function
1	91S-RL10 (BN/WH)	Ground, Switched
2	15S-RL10 (GN/WH)	Voltage, ignition switch in Start or Run (not overload protected), Switched

C182

9D930/12B637

Y109
Fuel injector 2 (9F593)

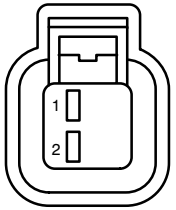

F02069

Pin	Circuit	Circuit function
1	91S-RL11 (BN)	Ground, Switched
2	15S-RL11 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected), Switched