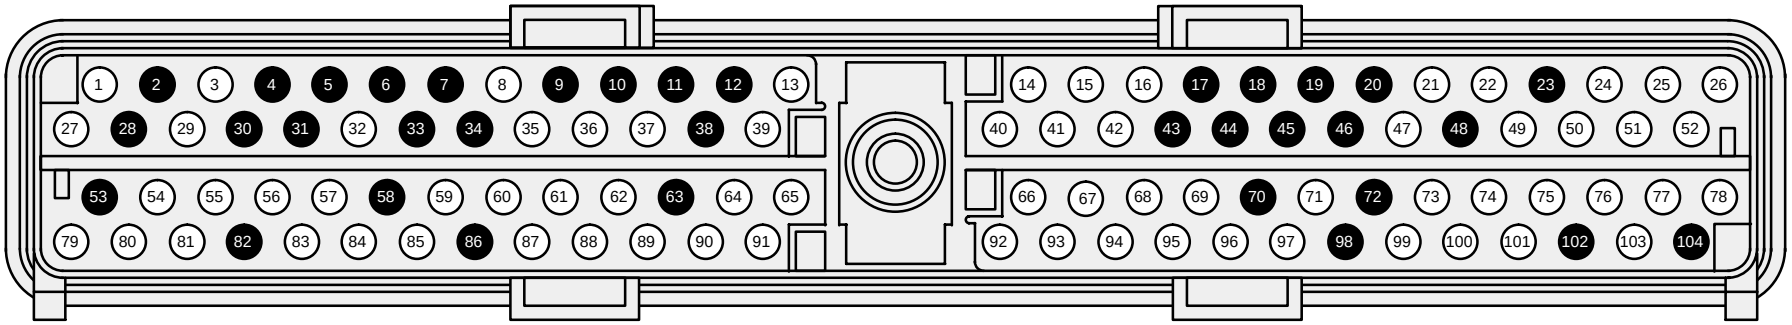


**C174 (GRAY)**
**POWERTRAIN CONTROL MODULE (PCM)**

| PIN | CIRCUIT | CIRCUIT FUNCTION | PIN | CIRCUIT | CIRCUIT FUNCTION |
|---|---|---|---|---|---|
| 1 | 315 (VT/OG) | Shift Solenoid B (SSB) | 17 | – | NOT USED |
| 2 | – | NOT USED | 18 | – | NOT USED |
| 3 | 1144 (YE/BK) | TR1 (A/T) | 19 | – | NOT USED |
| 4 | – | NOT USED | 20 | – | NOT USED |
| 5 | – | NOT USED | 21 | 349 (DB) | Crankshaft Position (CKP) (+) Sensor |
| 6 | – | NOT USED | 22 | 350 (GY) | Crankshaft Position (CKP) (–) Sensor |
| 7 | – | NOT USED | 23 | – | NOT USED |
| 8 | 190 (WH/OG) | Intake Manifold Runner Control (IMRC) | 24 | 570 (BK/WH) | Power Ground |
| 9 | – | NOT USED | 25 | 567 (LB/YE) | Case Ground |
| 10 | – | NOT USED | 26 | 526 (DB/LG) | Ignition Coil #1 |
| 11 | – | NOT USED | 27 | 237 (OG/YE) | Shift Solenoid A (SSA) |
| 12 | – | NOT USED | 28 | – | NOT USED |
| 13 | 107 (VT) | Data Link Connector (DLC) | 29 | 224 (TN/WH) | Transmission Control Switch (TCS) |
| 14 | 784 (LB/BK) | 4X4 Low Indicator Switch | 30 | – | NOT USED |
| 15 | 915 (PK/LB) | J1850 Bus (–) | 31 | – | NOT USED |
| 16 | 914 (TN/OG) | J1850 Bus (+) | 32 | 311 (DG/VT) | Knock Sensor (–) (KS) |

| PIN | CIRCUIT | CIRCUIT FUNCTION | PIN | CIRCUIT | CIRCUIT FUNCTION |
|---|---|---|---|---|---|
| 33 | – | NOT USED | 63 | – | NOT USED |
| 34 | – | NOT USED | 64 | 199 (LB/YE) | TR3A (A/T), Clutch Pedal Position (CPP) Switch (M/T) |
| 35 | 392 (RD/LG) | Heated Oxygen Sensor #12 (HO2S) Input | | | |
| 36 | 968 (TN/LB) | Mass Air Flow (MAF) Sensor | 65 | 352 (BN/LG) | Differential Pressure Feedback EGR (DPFE) Sensor |
| 37 | 923 (OG/BK) | Transmission Fluid Temperature (TFT) Sensor | 66 | 1102 (YE/LG) | Cylinder Head Temperature (CHT) Sensor |
| 38 | – | NOT USED | 67 | 91 (VT/WH) | Canister Vent |
| 39 | 743 (GY) | Intake Air Temperature (IAT) Sensor | 68 | 679 (GY/BK) | Vehicle Speed Output Signal |
| 40 | 238 (DG/YE) | Fuel Pump Monitor | 69 | 331 (PK/YE) | WOT Relay |
| 41 | 347 (BK/YE) | A/C High Pressure Cutoff Switch Input | 70 | – | NOT USED |
| 42 | 367 (BN) | Intake Manifold Runner Control (IMRC) | 71 | 361 (RD) | Vehicle Power (VPWR) |
| 43 | – | NOT USED | 72 | – | NOT USED |
| 44 | – | NOT USED | 73 | 559 (TN/BK) | Fuel Injector #5 Control |
| 45 | – | NOT USED | 74 | 557 (BN/YE) | Fuel Injector #3 Control |
| 46 | – | NOT USED | 75 | 555 (TN) | Fuel Injector #1 Control |
| 47 | 360 (BN/PK) | EGR Vacuum Regulator (EVR) Control | 76 | 570 (BK/WH) | Power Ground |
| 48 | – | NOT USED | 77 | 570 (BK/WH) | Power Ground |
| 49 | 1145 (LB/BK) | TR2 | 78 | 528 (PK/WH) | Ignition Coil #3 |
| 50 | 1143 (WH/BK) | TR4 | 79 | 911 (WH/LG) | Transmission Control Indicator Lamp (TCIL) |
| 51 | 570 (BK/WH) | Power Ground | | | |
| 52 | 527 (RD/LB) | Ignition Coil #2 | 80 | 926 (LB/OG) | Fuel Pump Relay Control |
| 53 | – | NOT USED | 81 | 925 (WH/YE) | Electronic Pressure Control (EPC) Solenoid |
| 54 | 480 (VT/YE) | Torque Converter Clutch (TCC) Solenoid (A/T) | 82 | – | NOT USED |
| 55 | 729 (RD/WH) | Keep Alive Power (KAPWR) | 83 | 264 (WH/LB) | Idle Air Control (IAC) Valve Control |
| 56 | 191 (LG/BK) | EVAP Canister Purge Valve | 84 | 136 (DB/YE) | Output Shaft Speed (OSS) Sensor |
| 57 | 310 (YE/RD) | Knock Sensor (+) (KS) | 85 | 795 (DG) | Camshaft Position (CMP) Sensor |
| 58 | – | NOT USED | 86 | – | NOT USED |
| 59 | 1496 (PK) | Transfer Case Speed Sensor (–) | 87 | 94 (RD/BK) | Heated Oxygen Sensor #21 (HO2S) Input |
| 60 | 74 (GY/LB) | Heated Oxygen Sensor #11 (HO2S) Input | 88 | 967 (LB/RD) | Mass Air Flow (MAF) Sensor |
| 61 | 393 (VT/LG) | Heated Oxygen Sensor #22 (HO2S) Input | | | |
| 62 | 791 (RD/PK) | Fuel Tank Pressure (FTP) Sensor | | | |

| PIN | CIRCUIT | CIRCUIT FUNCTION |
|---|---|---|
| 89 | 355 (GY/WH) | Throttle Position (TP) Sensor |
| 90 | 351 (BN/WH) | Reference Voltage |
| 91 | 359 (GY/RD) | Signal Return |
| 92 | 810 (RD/LG) | Brake Pedal Position (BPP) Switch |
| 93 | 387 (RD/WH) | Heated Oxygen Sensor #11 (HO2S) Heater |
| 94 | 388 (YE/LB) | Heated Oxygen Sensor #21 (HO2S) Heater |
| 95 | 389 (WH/BK) | Heated Oxygen Sensor #12 (HO2S) Heater |
| 96 | 390 (TN/YE) | Heated Oxygen Sensor #22 (HO2S) Heater |
| 97 | 361 (RD) | Vehicle Power (VPWR) |
| 98 | – | NOT USED |
| 99 | 560 (LG/OG) | Fuel Injector #6 Control |
| 100 | 558 (BN/LB) | Fuel Injector #4 Control |
| 101 | 556 (WH) | Fuel Injector #2 Control |
| 102 | – | NOT USED |
| 103 | 570 (BK/WH) | Power Ground |
| 104 | – | NOT USED |

**CONNECTOR REFERENCE LIST**

| CONNECTOR | SECTION-PAGE |
|---|---|
| C157 | 31-4 |
| C182 | 29-5, 30-5 |
| C183 | 29-5 |
| C189 | 34-6 |
| C224 | 130-5 |
| C236 | 62-6 |
| C237 | 62-6 |
| C243 | 13-22 |
| C267 | 59-6 |

**4.2L**

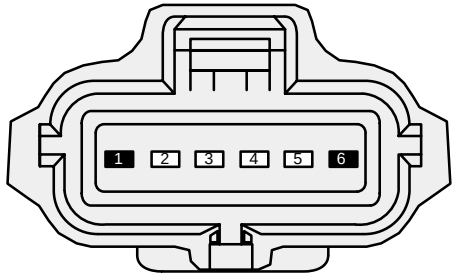


**C141**

**MASS AIR FLOW (MAF) SENSOR**

| PIN | CIRCUIT | CIRCUIT FUNCTION |
|---|---|---|
| 1 | – | NOT USED |
| 2 | 361 (RD) | Power (Hot in Start or Run) |
| 3 | 570 (BK/WH) | Ground |
| 4 | 968 (TN/LB) | MAF Sensor Signal Return |
| 5 | 967 (LB/RD) | MAF Signal Out |
| 6 | – | NOT USED |