C1017

14290
14398

K22
Starter relay

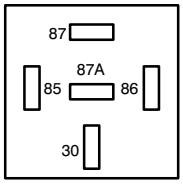

F05051

Pin	Circuit	Circuit Function
87	113 (YE/LB)	Starter motor to Starter relay
87A	–	not used
86	325 (DB/OG)	Starter relay, control
85	1093 (TN/RD)	Power, Hot in Start with Park or Neutral
30	37 (YE)	Voltage supplied at all times (overload protected)

C1018

14290
14398

V34
PCM Module power diode

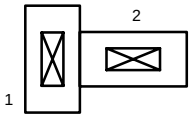

F02009

Pin	Circuit	Circuit Function
1	546 (DG/YE)	Voltage supplied in Start and Run (overload protected)
2	16 (RD/LG)	Voltage supplied in Start and Run (overload protected)
	16 (RD/LG)	Voltage supplied in Start and Run (overload protected)

C1021

14290
14398

E1
Headlamp, left

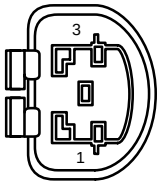

F03169

Pin	Circuit	Circuit Function
1	12 (LG/BK)	Power, Hot with High Beams on
2	57 (BK)	Ground
3	1055 (WH/LG)	Headlamp, left - fused feed

C1023

14290
14398

E164
Park/turn lamp, left front

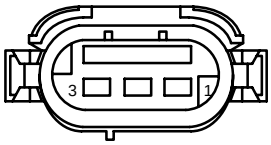

F03099

Pin	Circuit	Circuit Function
1	57 (BK)	Ground
2	14 (BN)	Power, Exterior lamps
3	3 (LG/WH)	Turn lamps, feed, left front

C1025

14290
14398

N423
Deactivator switch

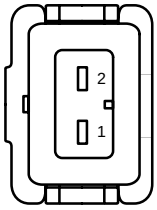

F02089

Pin	Circuit	Circuit Function
1	307 (BK/YE)	Brake pressure switch, input
2	10 (LG/RD)	Voltage supplied at all times (overload protected)

C1029

14290
14398

Y134
EVAP canister purge valve

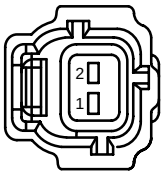

F02105

Pin	Circuit	Circuit Function
1	361 (RD)	Voltage supplied in Start and Run (overload protected)
2	191 (LG/BK)	Powertrain Control Module (PCM), EVAP canister purge valve