C118

12B637

P73
Coil On Plug (COP)
8 (12029)

F02371

Pin	Circuit	Circuit function
1	16 (RD/LG)	Voltage supplied in Start and Run (overload protected)
2	1029 (WH/RD)	Coil On Plug (COP) 8 (12029),control

C122

12A581

M87
Speed control servo
(9C735)

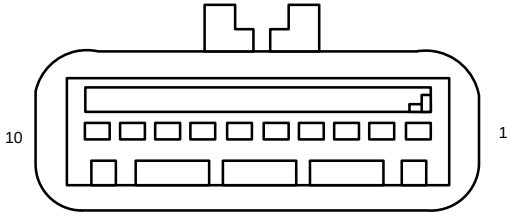

Pin	Circuit	Circuit function
1	–	not used
2	–	not used
3	679 (GY/BK)	Vehicle Speed Sensor (VSS) +
4	810 (RD/LG)	Brake pedal position switch (13480), Brake pressure switch (2B264), output
5	151 (LB/BK)	Speed control switch, input
6	848 (DG/OG)	Speed control switch, Ground
7	295 (LB/PK)	Voltage in Run (overload protected)
8	–	not used
9	307 (BK/YE)	Brake pressure switch (2B264), Brake pressure switch (2B264), output
10	57 (BK)	Ground

C123

12A581

Y134
EVAP canister
purge valve

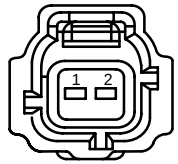

F02105

Pin	Circuit	Circuit function
1	391 (RD/YE)	Voltage supplied in Start and Run (overload protected)
2	191 (LG/BK)	Powertrain Control Module (PCM) (12A650), to, EVAP canister purge valve

C124

12A581

N1
Brake fluid level
switch (2L414)

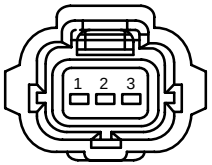

F03215

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	512 (TN/LG)	Brake indicator, prove–out
3	128 (VT/YE)	Brake indicator, control