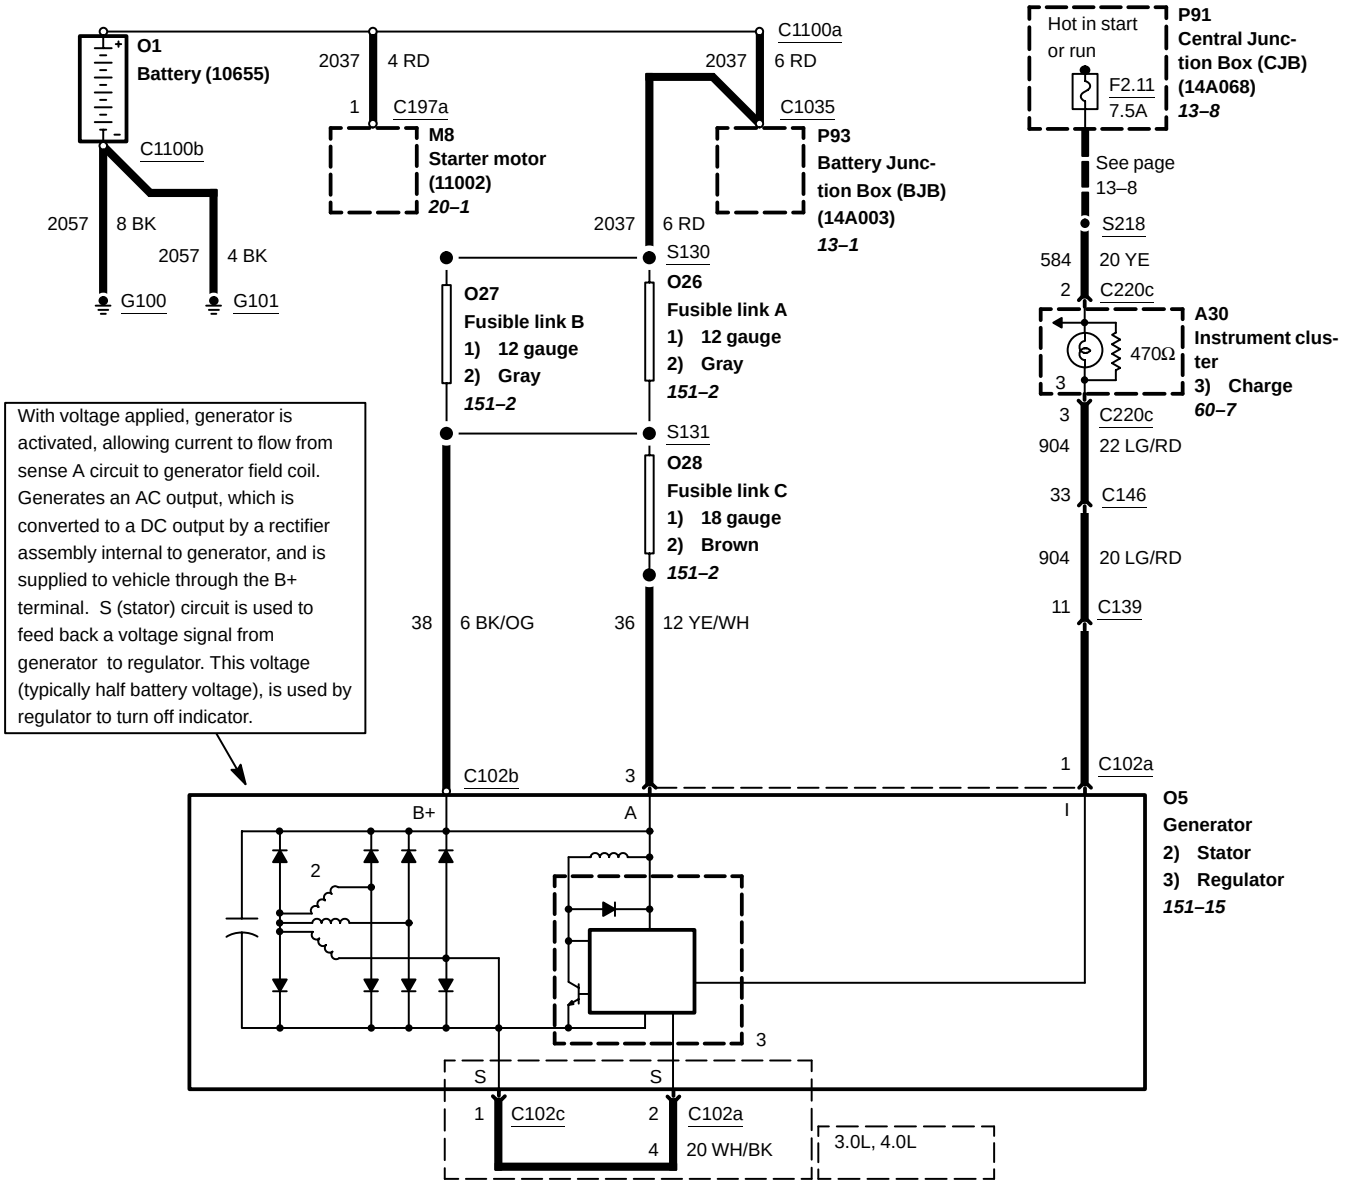
O1
Battery (10655)
C1100b
2057 8 BK
G100
2057 4 BK
G101
2037 4 RD
1 C197a
M8
Starter motor
(11002)
20–1
C1100a
2037 6 RD
C1035
P93
Battery Junction Box (BJB)
(14A003)
13–1
2037 6 RD
S130
O26
Fusible link A
1) 12 gauge
2) Gray
151–2
O27
Fusible link B
1) 12 gauge
2) Gray
151–2
S131
O28
Fusible link C
1) 18 gauge
2) Brown
151–2
38 6 BK/OG
36 12 YE/WH
With voltage applied, generator is activated, allowing current to flow from sense A circuit to generator field coil. Generates an AC output, which is converted to a DC output by a rectifier assembly internal to generator, and is supplied to vehicle through the B+ terminal. S (stator) circuit is used to feed back a voltage signal from generator to regulator. This voltage (typically half battery voltage), is used by regulator to turn off indicator.
C102b
3
B+
A
I
1 C102a
O5
Generator
2) Stator
3) Regulator
151–15
2
3
S
S
1 C102c
2 C102a
4 20 WH/BK
3.0L, 4.0L
Hot in start or run
F2.11
7.5A
P91
Central Junction Box (CJB)
(14A068)
13–8
See page 13–8
S218
584 20 YE
2 C220c
A30
Instrument cluster
3) Charge
60–7
470Ω
3
3 C220c
904 22 LG/RD
33 C146
904 20 LG/RD
11 C139