C175

12A581

A147
Powertrain Control Module (PCM) (12A650)

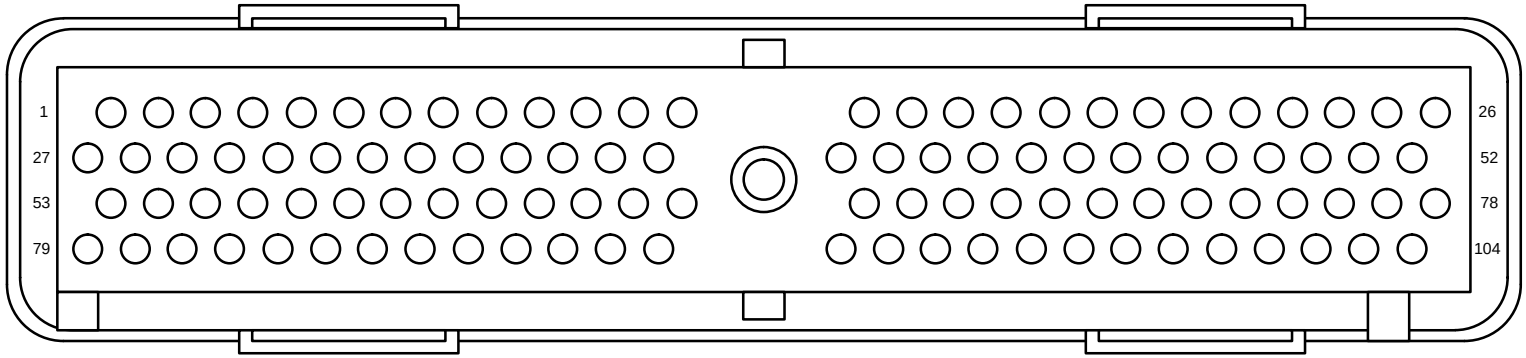

Pin	Circuit	Circuit Function
1	1025 (OG/YE)	Coil On Plug (COP) 6 (12029), control
2	658 (PK/LG)	Malfunction Indicator Lamp (MIL), control
3	570 (BK/WH)	Ground
4	–	not used
5	–	not used
6	237 (OG/YE)	Shift solenoid A
7	–	not used
8	–	not used
9	–	not used
10	–	not used
11	315 (VT/OG)	Shift solenoid B
12	911 (WH/LG)	Transmission Control Indicator Lamp (TCIL)
13	107 (VT)	Module programming signal
14	–	not used
15	915 (PK/LB)	SCP Bus –
16	914 (TN/OG)	SCP Bus +
17	–	not used
18	–	not used
19	–	not used
20	924 (BN/OG)	Powertrain Control Module (PCM) (12A650), to transmission coast clutch solenoid

Pin	Circuit	Circuit Function
21	349 (DB)	Crankshaft position sensor (6C315) +
22	350 (GY)	Crankshaft position sensor (6C315) –
23	570 (BK/WH)	Ground
24	570 (BK/WH)	Ground
25	567 (LB/YE)	Component case directly attached to metal part of vehicle (ground)
26	1024 (LG/WH)	Coil On Plug (COP) 1 (12029), control
27	1021 (LG/YE)	Coil On Plug (COP) 10, control
28	–	not used
29	224 (TN/WH)	PCM, to, Transmission control switch
30	–	not used
31	–	not used
32	311 (DG/VT)	Knock sensor (12A699) –
33	1203 (BK/LB)	Ground
34	1144 (YE/BK)	Digital Transmission Range (DTR) sensor, TR1
35	–	not used
36	968 (TN/LB)	Mass Air Flow (MAF) sensor (12B579), signal, return
37	923 (OG/BK)	Transmission Fluid Temperature (TFT) sensor, input
38	–	not used
39	743 (GY)	Intake Air Temperature (IAT) sensor (12A697), input
40	238 (DG/YE)	Fuel pump relay, switched power, output