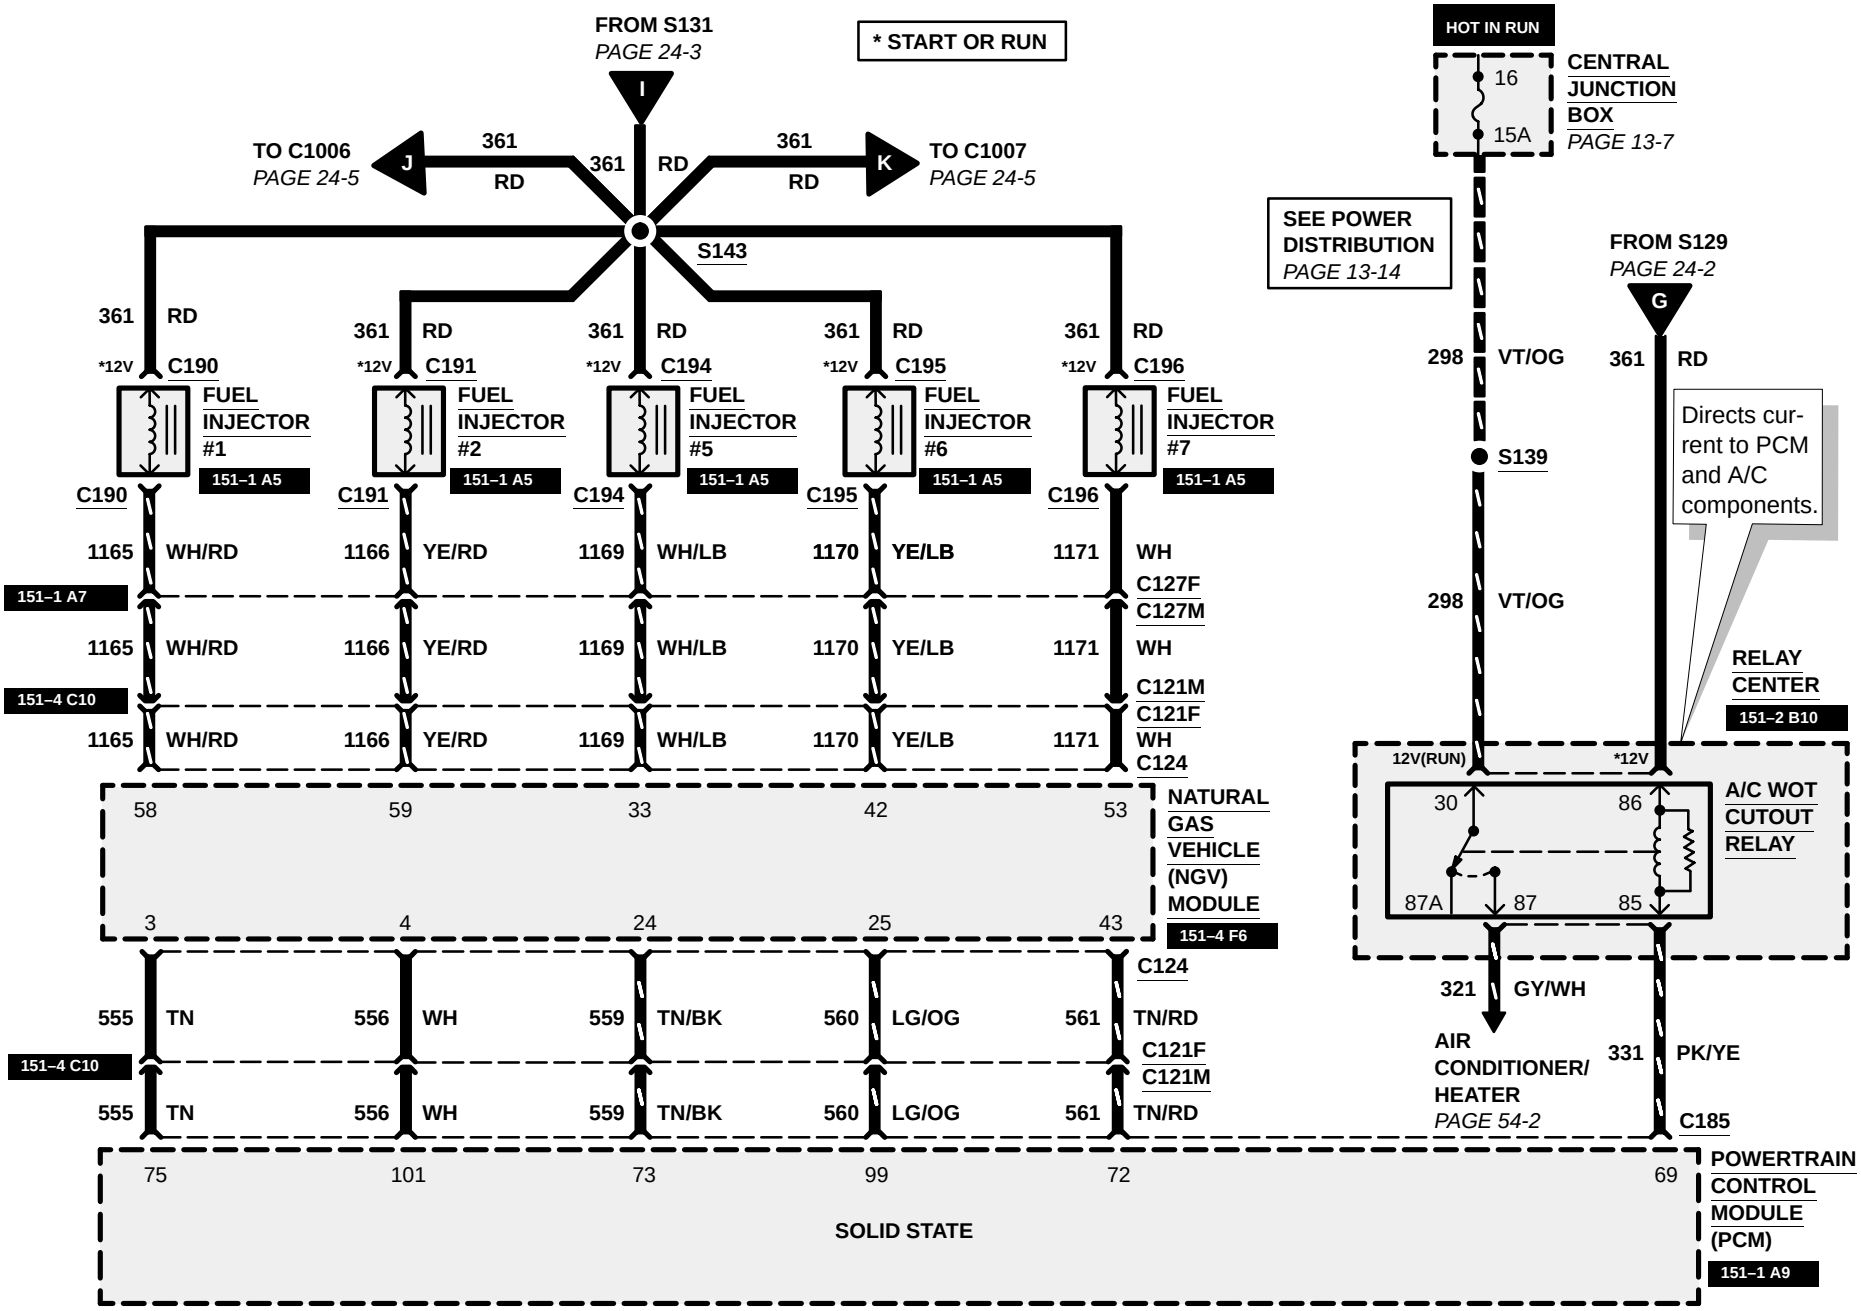
FROM S131
PAGE 24-3
* START OR RUN
I
TO C1006
PAGE 24-5
J
361 RD
361 RD
361 RD
K
TO C1007
PAGE 24-5
S143
HOT IN RUN
16
15A
CENTRAL JUNCTION BOX
PAGE 13-7
SEE POWER DISTRIBUTION
PAGE 13-14
FROM S129
PAGE 24-2
G
298 VT/OG
361 RD
Directs current to PCM and A/C components.
S139
298 VT/OG
RELAY CENTER
151–2 B10
12V(RUN)
*12V
30
86
87A
87
85
A/C WOT CUTOUT RELAY
321 GY/WH
AIR CONDITIONER/ HEATER
PAGE 54-2
331 PK/YE
C185
*12V C190 FUEL INJECTOR #1 151–1 A5
*12V C191 FUEL INJECTOR #2 151–1 A5
*12V C194 FUEL INJECTOR #5 151–1 A5
*12V C195 FUEL INJECTOR #6 151–1 A5
*12V C196 FUEL INJECTOR #7 151–1 A5
C190 1165 WH/RD
C191 1166 YE/RD
C194 1169 WH/LB
C195 1170 YE/LB
C196 1171 WH
151–1 A7
C127F
C127M
1165 WH/RD
1166 YE/RD
1169 WH/LB
1170 YE/LB
1171 WH
151–4 C10
C121M
C121F
1165 WH/RD
1166 YE/RD
1169 WH/LB
1170 YE/LB
1171 WH
C124
58 59 33 42 53
NATURAL GAS VEHICLE (NGV) MODULE
151–4 F6
3 4 24 25 43
C124
555 TN
556 WH
559 TN/BK
560 LG/OG
561 TN/RD
151–4 C10
C121F
C121M
555 TN
556 WH
559 TN/BK
560 LG/OG
561 TN/RD
75 101 73 99 72 69
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–1 A9