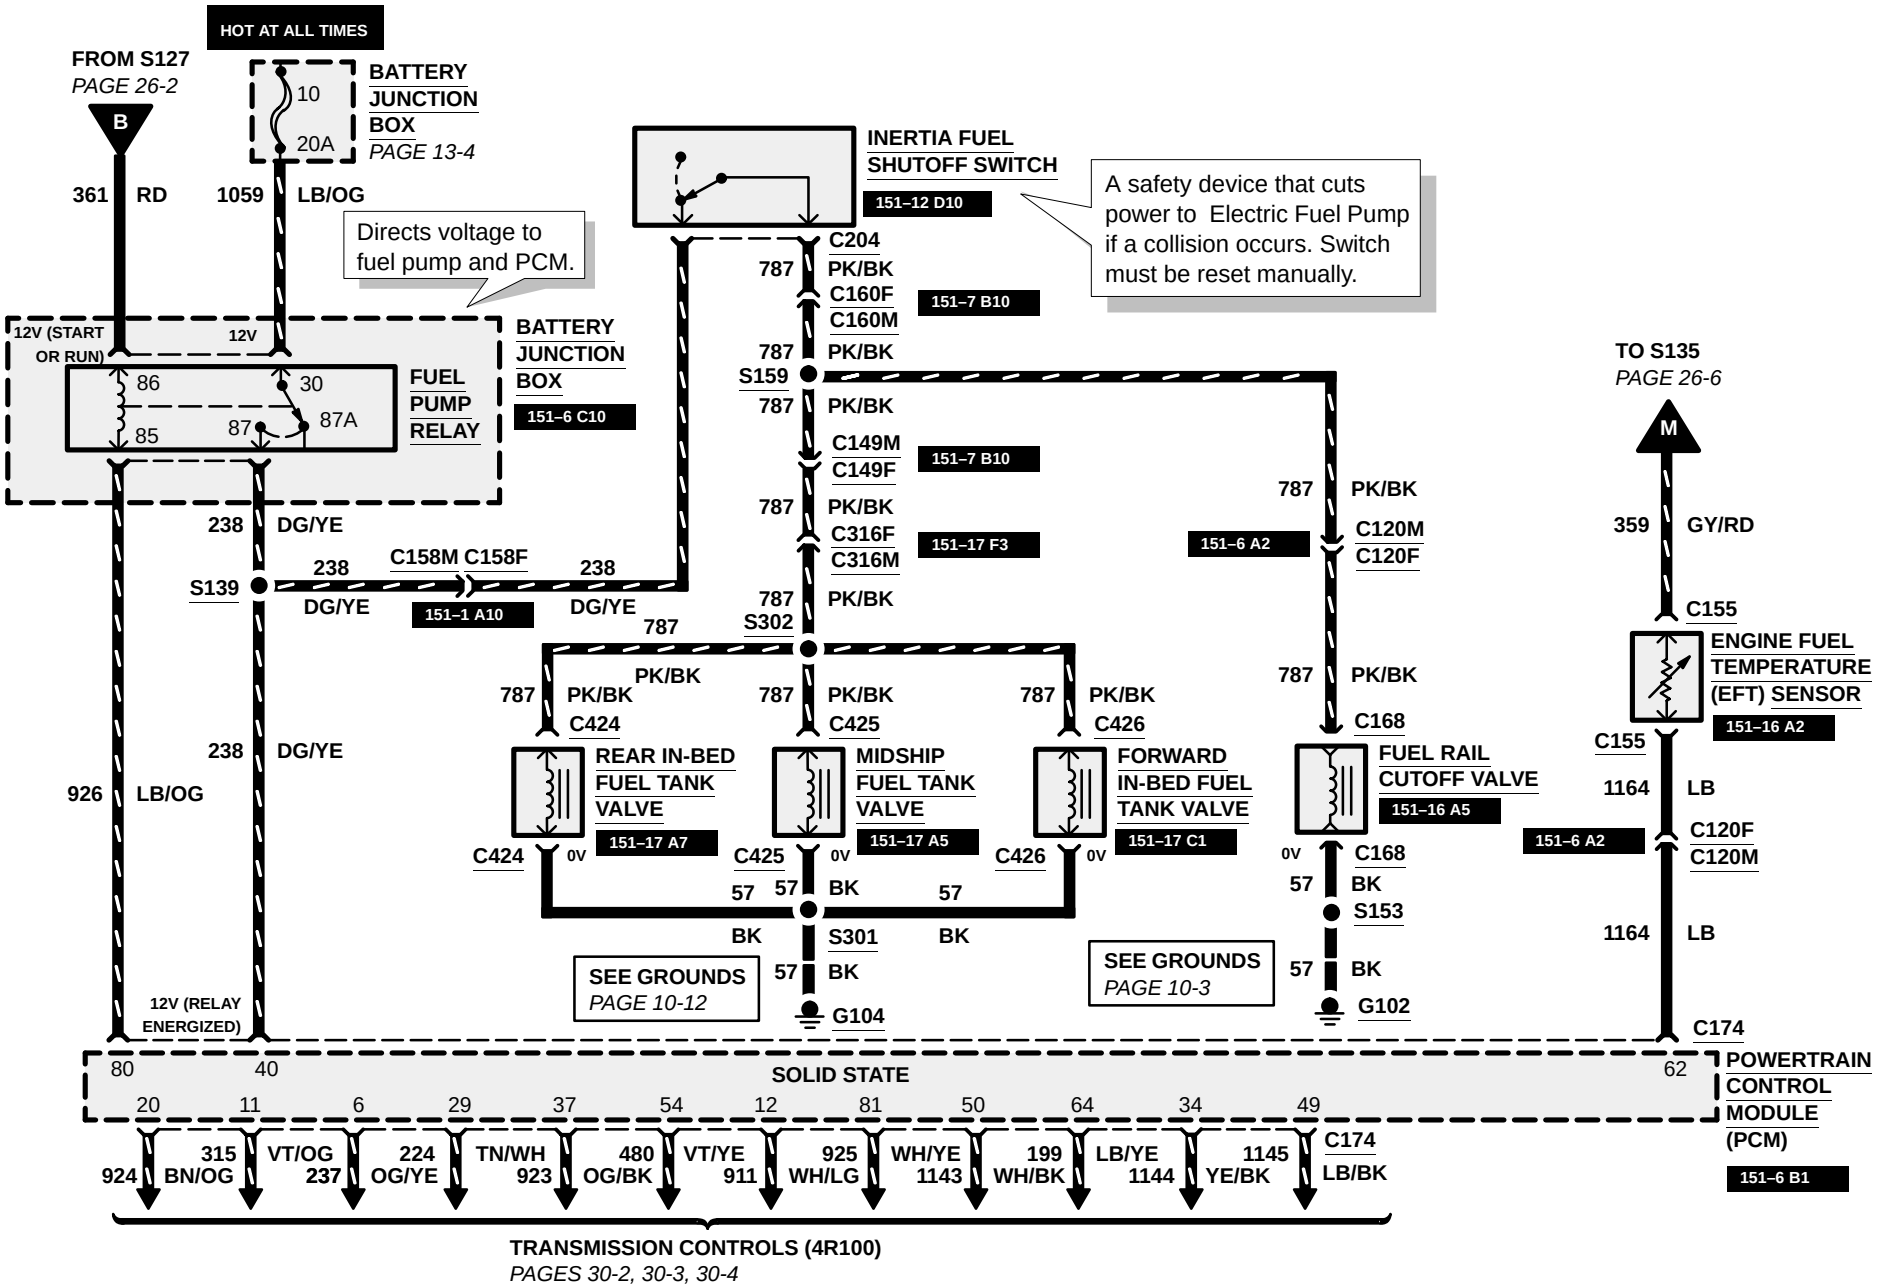
HOT AT ALL TIMES
FROM S127
PAGE 26-2
B
BATTERY JUNCTION BOX
PAGE 13-4
10
20A
361 RD
1059 LB/OG
Directs voltage to fuel pump and PCM.
INERTIA FUEL SHUTOFF SWITCH
151–12 D10
A safety device that cuts power to Electric Fuel Pump if a collision occurs. Switch must be reset manually.
C204
787 PK/BK
C160F
C160M
151–7 B10
787 PK/BK
S159
787 PK/BK
C149M
C149F
151–7 B10
787 PK/BK
C316F
C316M
151–17 F3
787 PK/BK
S302
787 PK/BK
12V (START OR RUN)
12V
86
30
85
87
87A
FUEL PUMP RELAY
BATTERY JUNCTION BOX
151–6 C10
238 DG/YE
238 DG/YE
C158M C158F
238 DG/YE
S139
151–1 A10
787 PK/BK
151–6 A2
C120M
C120F
TO S135
PAGE 26-6
M
359 GY/RD
C155
ENGINE FUEL TEMPERATURE (EFT) SENSOR
151–16 A2
C155
1164 LB
C120F
C120M
151–6 A2
787 PK/BK
C424
787 PK/BK
C425
787 PK/BK
C426
787 PK/BK
C168
238 DG/YE
926 LB/OG
REAR IN-BED FUEL TANK VALVE
151–17 A7
MIDSHIP FUEL TANK VALVE
151–17 A5
FORWARD IN-BED FUEL TANK VALVE
151–17 C1
FUEL RAIL CUTOFF VALVE
151–16 A5
C424 0V
C425 0V
C426 0V
0V C168
57 BK
S153
1164 LB
57 BK
57 BK
57 BK
BK S301 BK
SEE GROUNDS
PAGE 10-12
57 BK
G104
SEE GROUNDS
PAGE 10-3
57 BK
G102
12V (RELAY ENERGIZED)
C174
80 40
SOLID STATE
62
POWERTRAIN CONTROL MODULE (PCM)
151–6 B1
20 11 6 29 37 54 12 81 50 64 34 49
924 315 BN/OG
VT/OG 237
224 OG/YE
TN/WH 923
480 OG/BK
VT/YE 911
925 WH/LG
WH/YE 1143
199 WH/BK
LB/YE 1144
1145 YE/BK
C174
LB/BK
TRANSMISSION CONTROLS (4R100)
PAGES 30-2, 30-3, 30-4