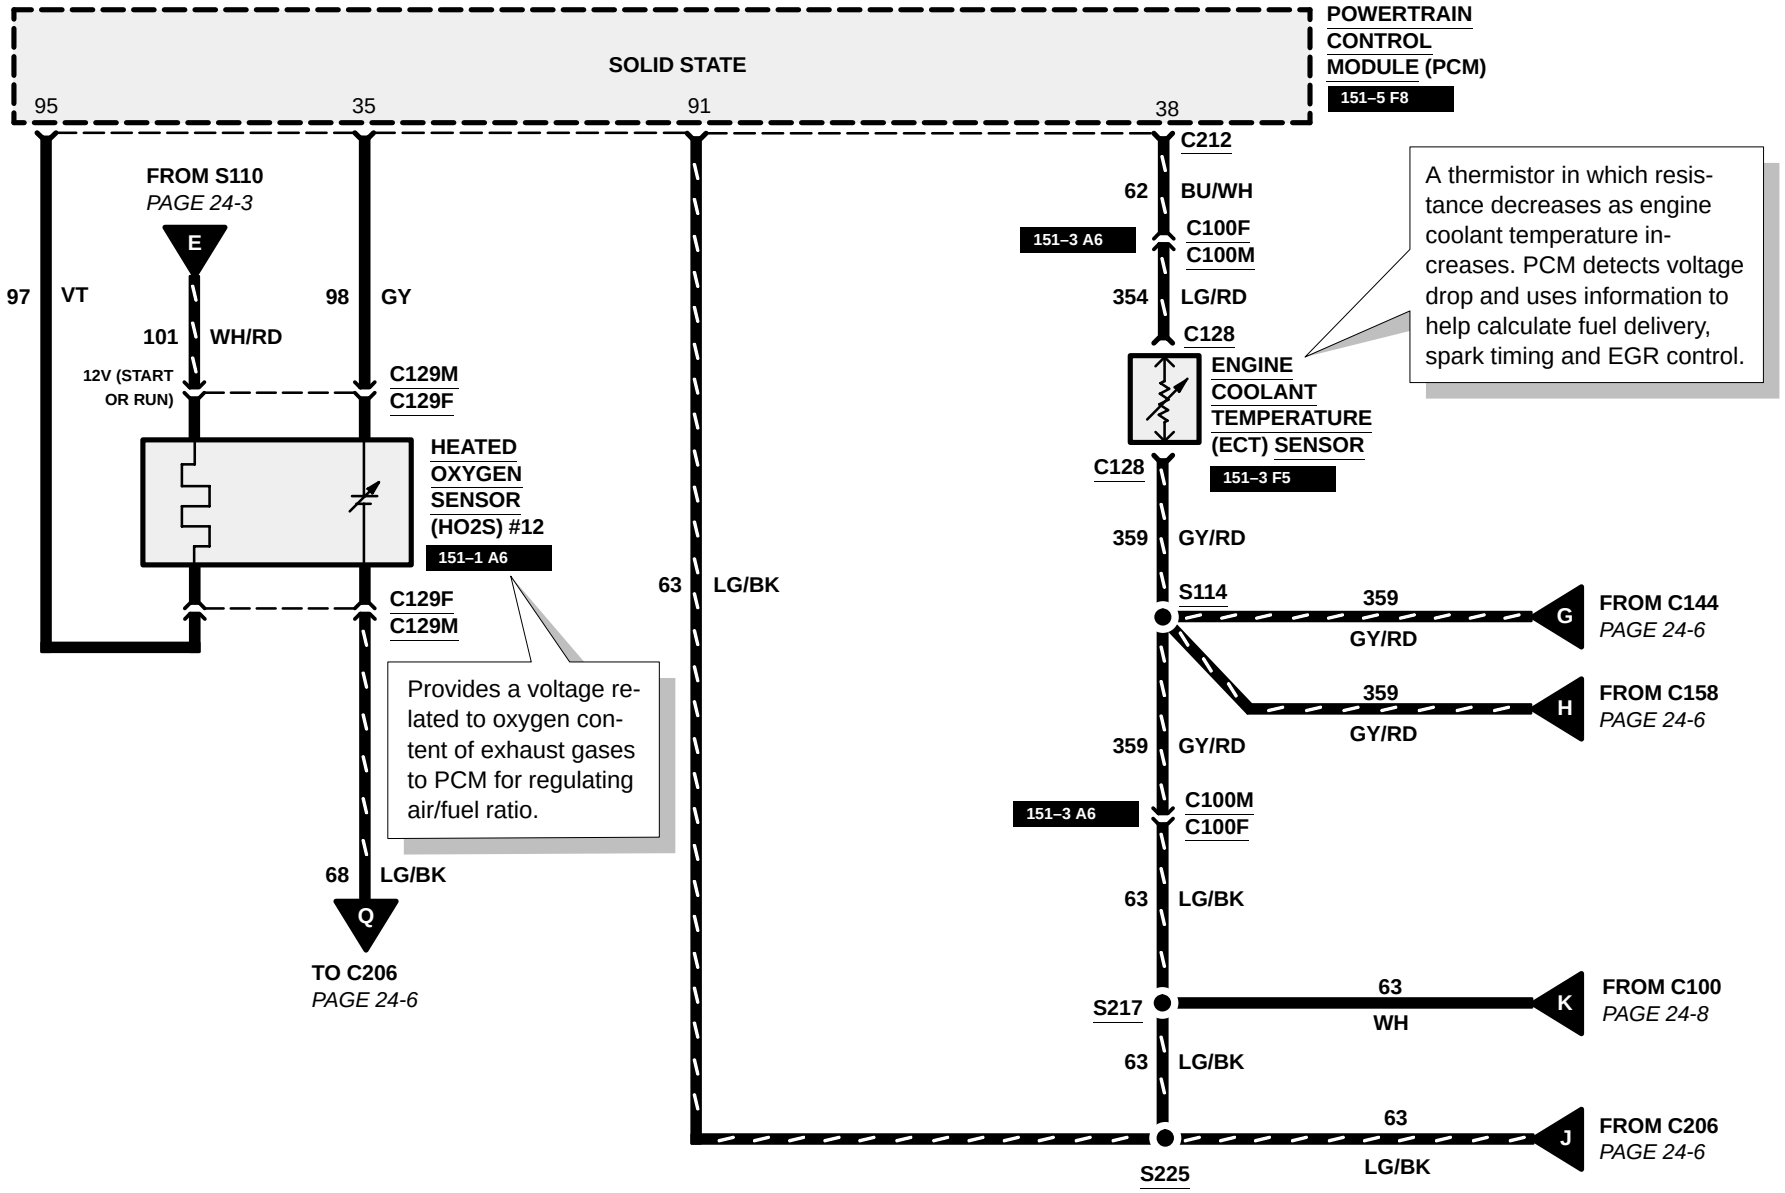
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–5 F8
95
35
91
38
C212
62 BU/WH
151–3 A6
C100F
C100M
354 LG/RD
C128
ENGINE COOLANT TEMPERATURE (ECT) SENSOR
151–3 F5
A thermistor in which resistance decreases as engine coolant temperature increases. PCM detects voltage drop and uses information to help calculate fuel delivery, spark timing and EGR control.
C128
359 GY/RD
S114
359 GY/RD
G
FROM C144
PAGE 24-6
359 GY/RD
H
FROM C158
PAGE 24-6
359 GY/RD
151–3 A6
C100M
C100F
63 LG/BK
S217
63 WH
K
FROM C100
PAGE 24-8
63 LG/BK
63 LG/BK
J
FROM C206
PAGE 24-6
S225
FROM S110
PAGE 24-3
E
97 VT
98 GY
101 WH/RD
12V (START OR RUN)
C129M
C129F
HEATED OXYGEN SENSOR (HO2S) #12
151–1 A6
C129F
C129M
Provides a voltage related to oxygen content of exhaust gases to PCM for regulating air/fuel ratio.
68 LG/BK
Q
TO C206
PAGE 24-6