6.8L EXCURSION

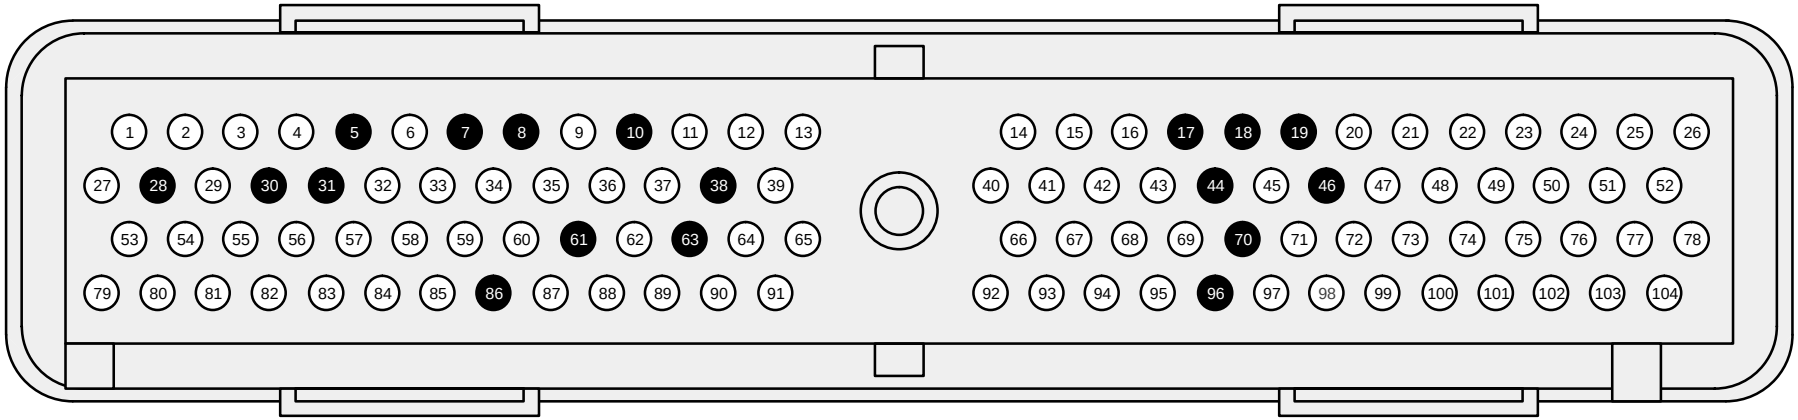

C1027

POWERTRAIN CONTROL MODULE (PCM)

6.8L EXCURSION

PIN	CIRCUIT	CIRCUIT FUNCTION	PIN	CIRCUIT	CIRCUIT FUNCTION
1	1025 (OG/YE)	Coil On Plug #6	36	968 (TN/LB)	Mass Air Flow (MAF) Sensor Return
2	658 (PK/LG)	MIL Lamp Control			
3	570 (BK/WH)	Ground	37	923 (OG/BK)	Transmission Fluid Temperature Sensor
4	322 (LB/YE)	Power Take Off Input			
5	–	NOT USED	38	–	NOT USED
6	237 (OG/YE)	Shift Solenoid #1	39	743 (GY)	Intake Air Temperature Input
7	–	NOT USED	40	238 (DG/YE)	Fuel Pump Monitor
8	–	NOT USED	41	439 (TN/LG)	A/C Head Pressure Switch
9	29 (YE/WH)	Fuel Gauge to Fuel Gauge Sender	42	1101 (GY/RD)	Fuel Injector #10
			43	71 (OG/LG)	Data Output Link
10	–	NOT USED	44	–	NOT USED
11	315 (VT/OG)	Shift Solenoid #2	45	39 (RD/WH)	Temperature Output to Dash
12	911 (WH/LG)	Transmission Control Indicator Lamp (TCIL)	46	–	NOT USED
			47	360 (BN/PK)	Exhaust Gas Recirculation (EGR) Solenoid
13	107 (VT)	Flash EPROM Power Supply (FEPS)			
			48	648 (WH/PK)	Clean Tach Output
14	784 (LB/BK)	4x4 Low Range Switch	49	1145 (DB/WH)	Digital Transmission Range (DTR) Sensor (TR2)
15	915 (PK/LB)	SCP Data Bus (–)			
16	914 (TN/OG)	SCP Data Bus (+)	50	1143 (DG/YE)	Digital Transmission Range (DTR) Sensor (TR4)
17	–	NOT USED			
18	–	NOT USED	51	570 (BK/WH)	Ground
19	–	NOT USED	52	1028 (WH/PK)	Coil On Plug #5
20	924 (BN/OG)	Coast Clutch Solenoid	53	1030 (DG/VT)	Coil On Plug #7
21	349 (DB)	Crankshaft Position Sensor (+)	54	480 (VT/YE)	Torque Converter Clutch (TCC) Solenoid
22	350 (GY)	Crankshaft Position Sensor (–)			
23	570 (BK/WH)	Ground	55	729 (RD/WH)	Power (Hot at All Times) (KAPWR)
24	570 (BK/WH)	Ground			
25	567 (LB/YE)	Case Ground	56	191 (LG/BK)	EVAP Canister Purge Valve
26	1024 (LG/WH)	Coil On Plug #1	57	310 (YE/RD)	Knock Sensor (KS+)
27	1021 (LG/YE)	Coil On Plug #10	58	679 (GY/BK)	Vehicle Speed Sensor (+)
28	–	NOT USED	59	970 (DG/WH)	Turbine Speed Sensor (+)
29	224 (TN/WH)	Transmission Control Switch	60	74 (GY/LB)	HEGO #11
30	–	NOT USED	61	–	NOT USED
31	–	NOT USED	62	791 (RD/PK)	Fuel Tank Pressure Transducer
32	311 (DG/VT)	Knock Sensor (KS–)	63	–	NOT USED
33	676 (PK/OG)	Vehicle Speed Sensor (–)	64	199 (LB/YE)	Digital Transmission Range (DTR) Sensor (TR3A)
34	1144 (WH/YE)	Digital Transmission Range (DTR) Sensor (TR1)	65	352 (BN/LG)	Delta Pressure Feedback EGR (DPFE) Sensor
35	392 (RD/LG)	HEGO #12			

6.8L EXCURSION

PIN	CIRCUIT	CIRCUIT FUNCTION	PIN	CIRCUIT	CIRCUIT FUNCTION
66	1102 (YE/LG)	Cylinder Head Temperature Sensor	86	–	NOT USED
67	91 (VT/WH)	Canister Vent Solenoid	87	94 (RD/BK)	HEGO #21
68	1100 (GY/BK)	Fuel Injector #9	88	967 (LB/RD)	Mass Air Flow (MAF) Sensor
69	331 (PK/YE)	A/C Clutch Relay	89	355 (GY/WH)	Throttle Position (TP) Sensor
70	–	NOT USED	90	351 (BN/WH)	Reference Output Voltage
71	361 (RD)	Power Input	91	359 (GY/RD)	Sensor Signal Return
72	561 (TN/RD)	Fuel Injector #7	92	810 (RD/LG)	Brake Pedal Position (BPP) Switch
73	559 (TN/BK)	Fuel Injector #5	93	387 (RD/WH)	HEGO Sensor Heater #11 Voltage Monitor
74	557 (BN/YE)	Fuel Injector #3			
75	555 (TN)	Fuel Injector #1	94	388 (YE/LB)	HEGO Sensor Heater #21 Voltage Monitor
76	570 (BK/WH)	Ground			
77	570 (BK/WH)	Ground	95	389 (WH/BK)	HEGO Sensor Heater #12 Voltage Monitor
78	1027 (PK/LB)	Coil On Plug #2			
79	1029 (WH/RD)	Coil On Plug #8	96	–	NOT USED
80	926 (LB/OG)	Fuel Pump Relay Control	97	361 (RD)	Power Input
81	925 (WH/YE)	Electronic Pressure Control (EPC) Solenoid	98	562 (LB)	Fuel Injector #8
			99	560 (LG/OG)	Fuel Injector #6
82	1142 (WH/RD)	Coil On Plug #9	100	558 (BN/LG)	Fuel Injector #4
83	264 (WH/LB)	Idle Air Control (IAC) Valve	101	556 (WH)	Fuel Injector #2
84	136 (DB/YE)	Output Shaft Speed Sensor (OSS +)	102	1141 (YE/BK)	Coil On Plug #4
			103	570 (BK/WH)	Ground
85	795 (DG)	Cam Sensor Signal	104	1026 (PK/WH)	Coil On Plug #3