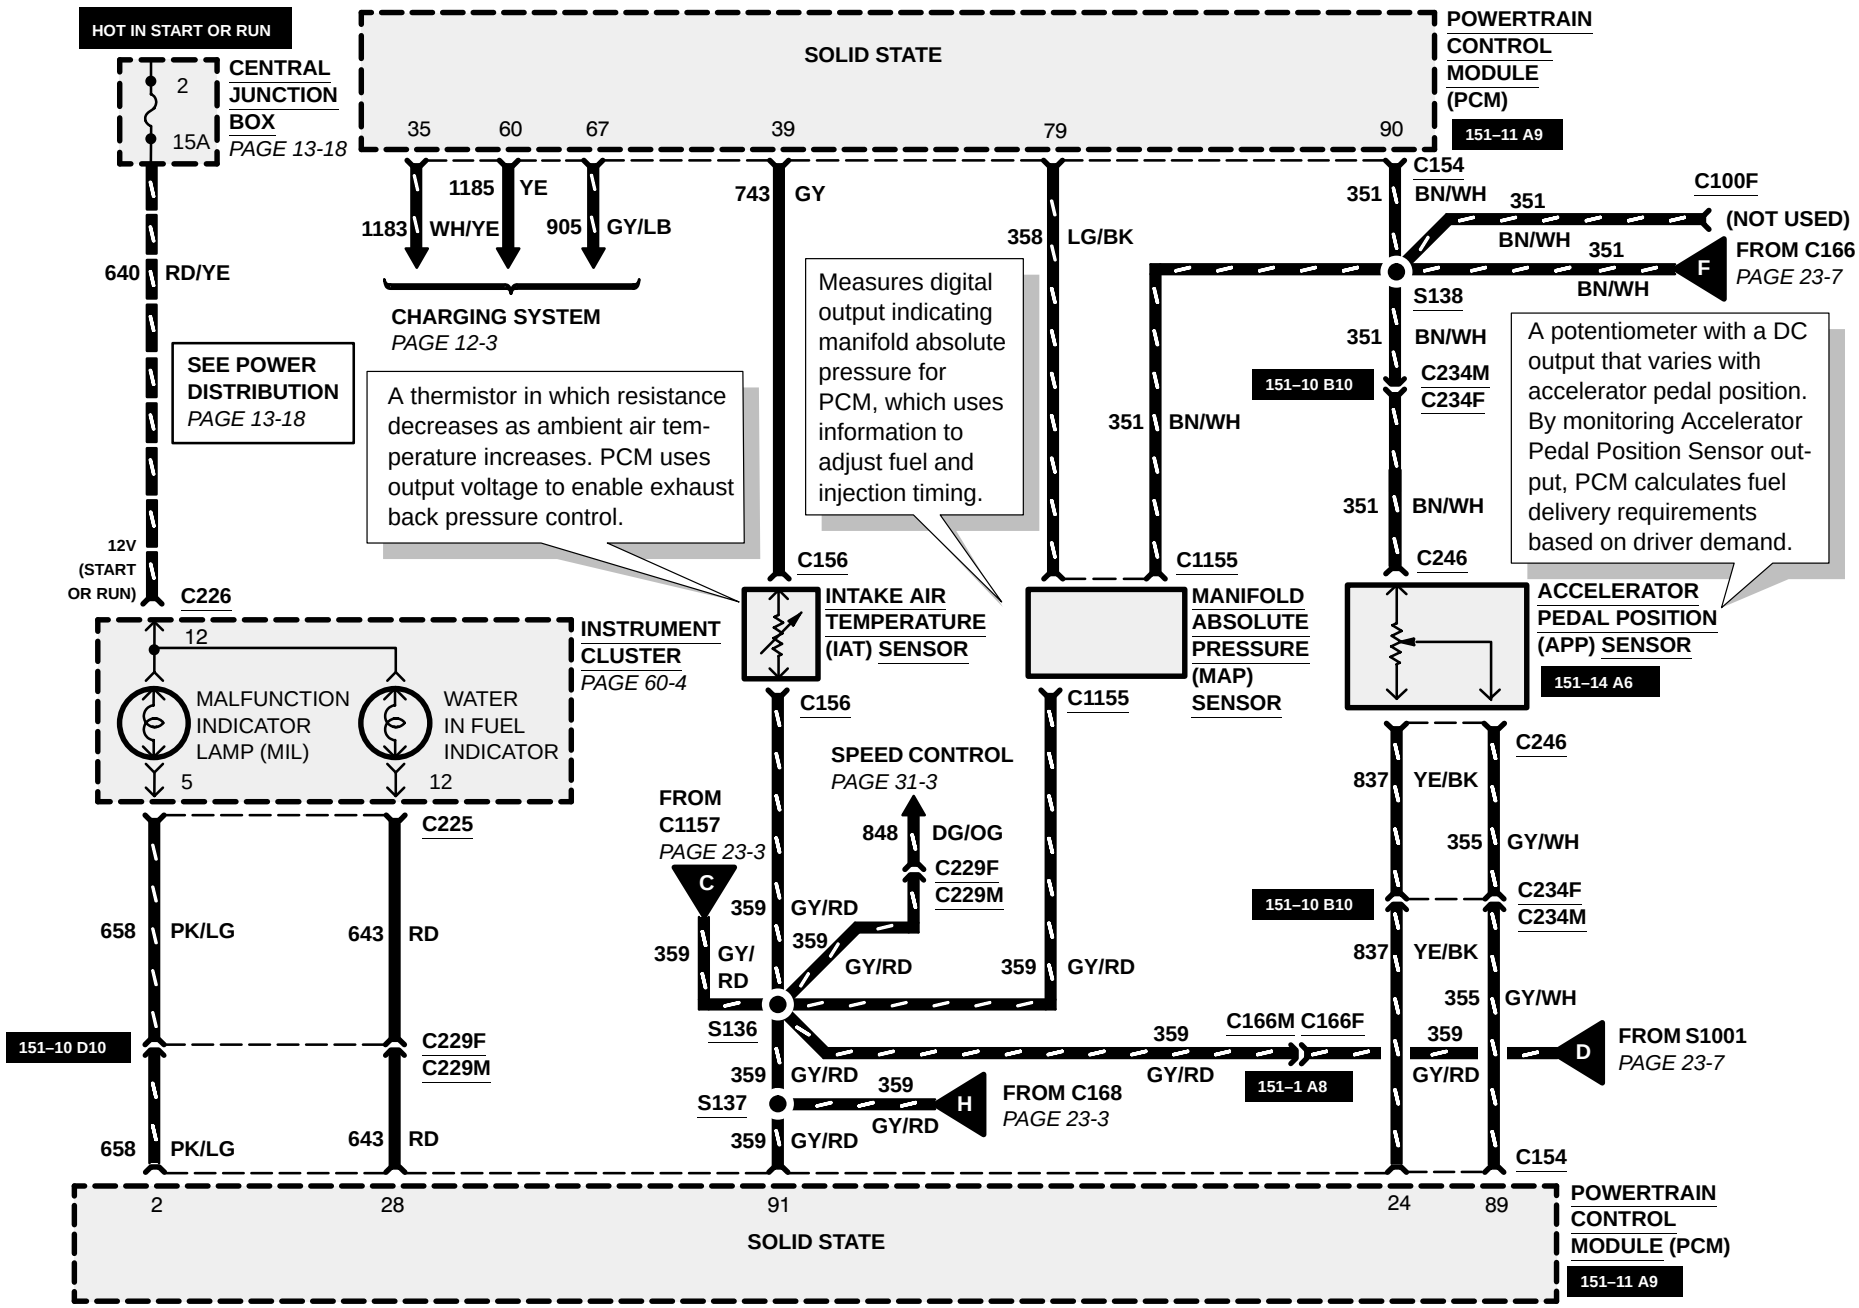
HOT IN START OR RUN
CENTRAL JUNCTION BOX
PAGE 13-18
2
15A
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–11 A9
35
60
67
39
79
90
1185 YE
1183 WH/YE
905 GY/LB
CHARGING SYSTEM
PAGE 12-3
743 GY
358 LG/BK
351 BN/WH
C154
C100F
(NOT USED)
FROM C166
PAGE 23-7
F
640 RD/YE
SEE POWER DISTRIBUTION
PAGE 13-18
A thermistor in which resistance decreases as ambient air temperature increases. PCM uses output voltage to enable exhaust back pressure control.
Measures digital output indicating manifold absolute pressure for PCM, which uses information to adjust fuel and injection timing.
A potentiometer with a DC output that varies with accelerator pedal position. By monitoring Accelerator Pedal Position Sensor output, PCM calculates fuel delivery requirements based on driver demand.
S138
C234M
C234F
151–10 B10
12V (START OR RUN)
C226
C156
C1155
C246
INTAKE AIR TEMPERATURE (IAT) SENSOR
MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR
ACCELERATOR PEDAL POSITION (APP) SENSOR
151–14 A6
INSTRUMENT CLUSTER
PAGE 60-4
12
MALFUNCTION INDICATOR LAMP (MIL)
WATER IN FUEL INDICATOR
5
12
SPEED CONTROL
PAGE 31-3
FROM C1157
PAGE 23-3
848 DG/OG
C229F
C229M
C225
658 PK/LG
643 RD
359 GY/RD
837 YE/BK
355 GY/WH
S136
S137
C166M C166F
FROM C168
PAGE 23-3
H
FROM S1001
PAGE 23-7
D
151–10 D10
151–1 A8
2
28
91
24
89
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–11 A9