C281a

7A786

A255
Four–wheel drive
control module

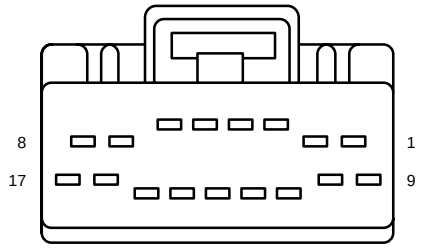

F17005

Pin	Circuit	Circuit function
1	972 (BK/WH)	Voltage supplied at all times (overload protected)
	1205 (BK)	Ground
2	994 (WH)	Voltage supplied at all times (overload protected)
	778 (OG)	Four–wheel drive control module to Transfer case assembly
3	236 (BK/LG)	Four–wheel drive control module to Transfer case assembly
	762 (YE/WH)	Motor position 6, Ground
4	70 (LB/WH)	ISO Bus
	763 (OG/WH)	Motor position 1
5	780 (DB)	Four–wheel drive control module to Four–wheel drive switch
	764 (BN/WH)	Motor position 2
6	772 (LB)	Four–wheel drive control module to Transfer case assembly
	770 (WH)	Motor position 3
7	1205 (BK)	Ground
	771 (VT/YE)	Motor position 4
8	778 (OG)	Four–wheel drive control module to Transfer case assembly
	976 (OG)	Four–wheel drive control module to Transfer case assembly

Pin	Circuit	Circuit function
9	298 (VT/OG)	Voltage in Run or Accessory (overload protected)
	777 (YE)	Four–wheel drive control module to Transfer case assembly
10	976 (OG)	Voltage supplied in Start (overload protected)
	236 (BK/LG)	Four–wheel drive control module, to, Transfer case assembly
11	763 (OG/WH)	Motor position 1
	772 (LB)	Four–wheel drive control module, to, Transfer case assembly
12	810 (RD/LG)	Brake pedal position switch (13480), input
	359 (GY/RD)	signal, return
13	960 (BK/LB)	Four–wheel drive control module, to ABS control module
	774 (LG)	Sensor, voltage
14	999 (LB/WH)	Door ajar indicator, control
	–	not used
15	764 (BN/WH)	Motor position 2
	–	not used
16	463 (RD/WH)	Neutral, switch sense, input
	–	not used
17	777 (YE)	Four–wheel drive control module to Transfer case assembly
	779 (BN)	Four–wheel drive control module, to, Differential lock solenoid