## C2047

### 14401

K2
Indicator flasher
relay (13350)

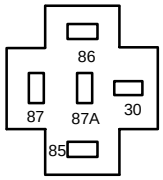

F05016

| Pin | Circuit | Circuit function |
|---|---|---|
| 87 | 44 (LB) | Turn signal flasher to turn signal switch |
| 87A | 385 (WH/RD) | Voltage supplied at all times (overload protected) |
| 85 | 383 (RD/WH) | Emergency warning flasher, feed |
| 86 | 57 (BK) | Ground |
| 30 | 8 (OG/YE) | Voltage in Run (overload protected) |

## C2048

### 14401

K115
Battery saver relay

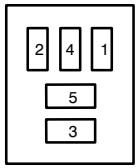

F05064

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 792 (TN/YE) | Battery saver relay - fused feed |
| | 792 (TN/YE) | Battery saver relay - fused feed |
| 2 | 1005 (VT/OG) | Battery saver relay - output |
| 3 | 705 (LG/OG) | Battery saver relay, switched power |
| 4 | – | not used |
| 5 | 792 (TN/YE) | Battery saver relay - fused feed |

## C2051

### 14401

K50
One–touch window
relay

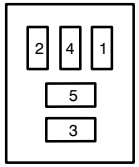

F05064

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 400 (LB/BK) | Accessory relay, switched power, output |
| 2 | 1007 (YE/RD) | Generic Electronic Module (GEM) (14B205)<br>to, One–touch window relay - output |
| 3 | 903 (RD) | Window motor, feed, Down |
| 4 | 991 (TN/LB) | Master window adjust switch (14529), feed, Down |
| 5 | 400 (LB/BK) | Accessory relay, switched power, output |

## C2058

### 14401

K336
Window safety relay

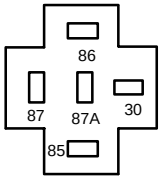

F05016

| Pin | Circuit | Circuit function |
|---|---|---|
| 87 | 170 (RD/LB) | Window safety relay, switched output |
| 87A | – | not used |
| 85 | 57 (BK) | Ground |
| 86 | 1002 (BK/PK) | Voltage in Run or Accessory (overload protected) |
| 30 | 400 (LB/BK) | Accessory relay, switched power, output |