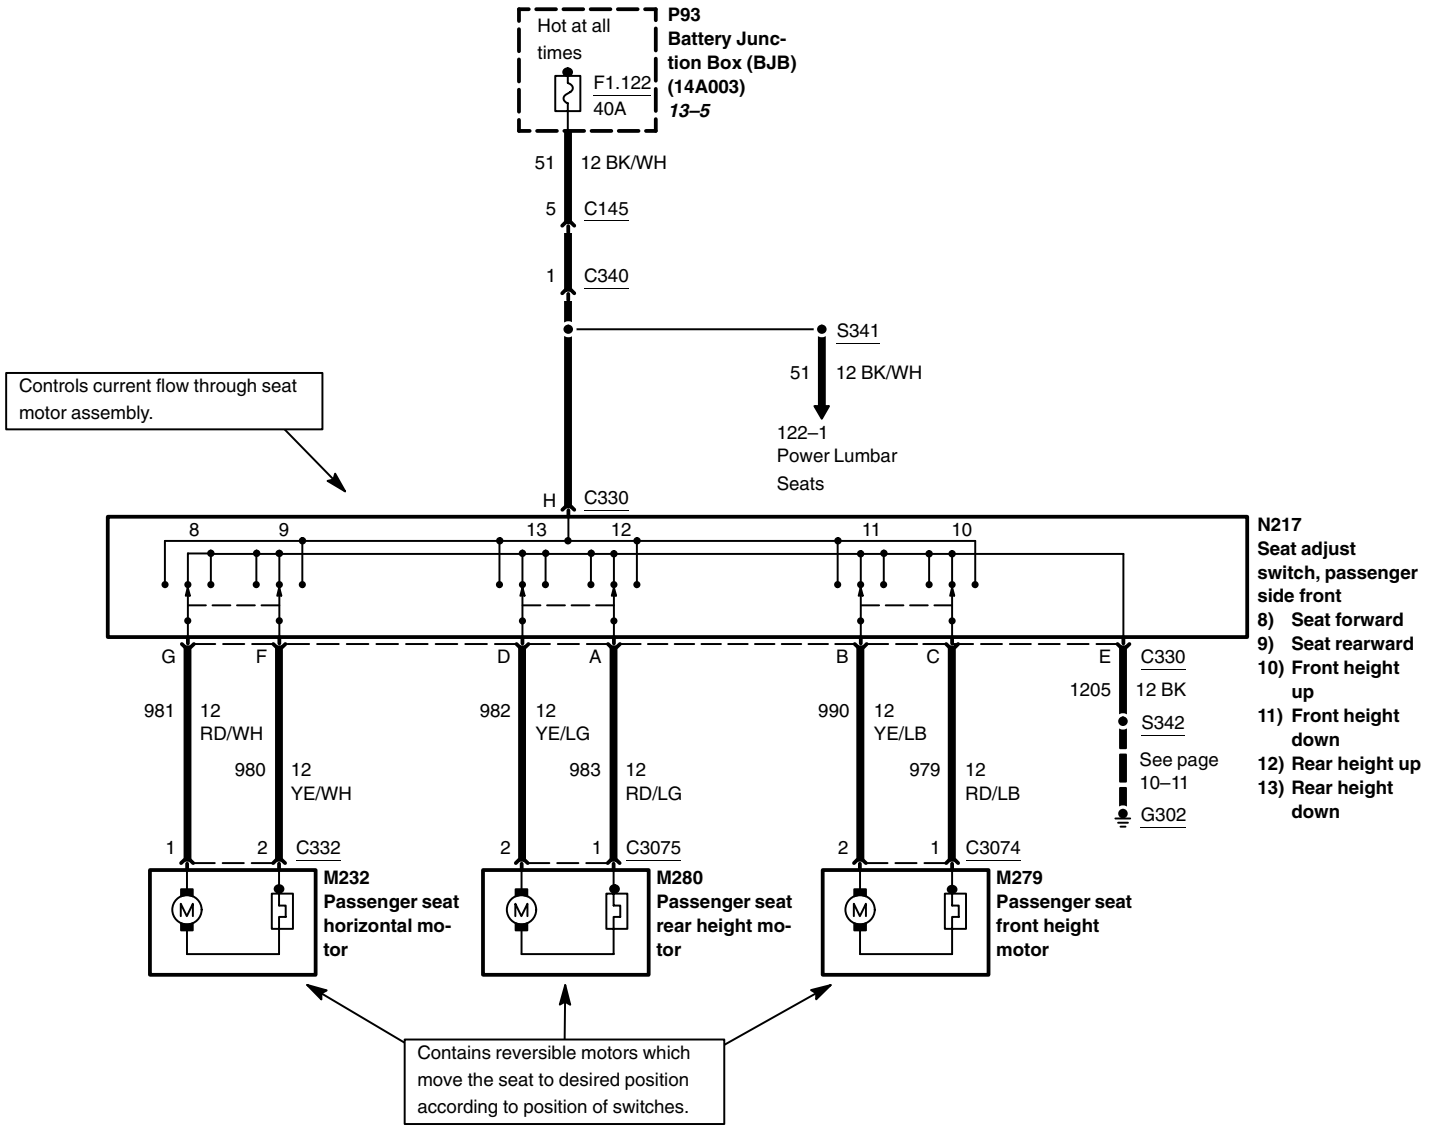
Hot at all times
F1.122
40A
P93
Battery Junction Box (BJB)
(14A003)
13–5
51
12 BK/WH
5
C145
1
C340
S341
51
12 BK/WH
122–1
Power Lumbar Seats
Controls current flow through seat motor assembly.
H
C330
8
9
13
12
11
10
N217
Seat adjust switch, passenger side front
8) Seat forward
9) Seat rearward
10) Front height up
11) Front height down
12) Rear height up
13) Rear height down
G
F
D
A
B
C
E
C330
981
12
RD/WH
980
12
YE/WH
982
12
YE/LG
983
12
RD/LG
990
12
YE/LB
979
12
RD/LB
1205
12 BK
S342
See page 10–11
G302
1
2
C332
2
1
C3075
2
1
C3074
M232
Passenger seat horizontal motor
M280
Passenger seat rear height motor
M279
Passenger seat front height motor
Contains reversible motors which move the seat to desired position according to position of switches.