C177 (BK)

14290

Forward crash sensor

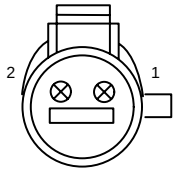

F02473

Pin	Circuit	Circuit function
1	–	not used
2	619 (PK/WH)	Air bag center sensor, to, Electronic Crash Sensor (ECS) module

C180 (BK)

12B637

Camshaft position sensor (6B288)

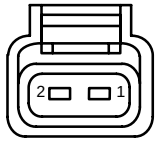

F02026

Pin	Circuit	Circuit function
1	796 (LB)	Camshaft position sensor (6B288), signal, return
2	795 (DG)	Camshaft position sensor (6B288), to, Powertrain Control Module (PCM) (12A650)

C181 (GY)

12B637

Fuel injector 1 (9F593)

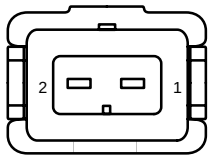

F02089

Pin	Circuit	Circuit function
1	555 (TN)	Fuel injector 1, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C182 (GY)

12B637

Fuel injector 2 (9F593)

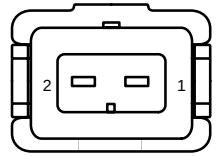

F02089

Pin	Circuit	Circuit function
1	556 (WH)	Fuel injector 2, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C183 (GY)

12B637

Fuel injector 3 (9F593)

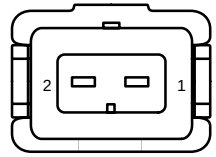

F02089

Pin	Circuit	Circuit function
1	557 (BN/YE)	Fuel injector 3, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C184 (GY)

12B637

Fuel injector 4 (9F593)

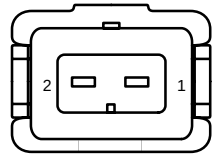

F02089

Pin	Circuit	Circuit function
1	558 (BN/LB)	Fuel injector 4, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)