## C444

### 13A612

N318
Stoplamp switch

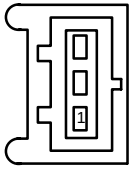


F03030

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 15-LG23 (GN/WH) | Voltage, ignition switch in Start or Run (not overload protected) |
| | 15-PG6 (GN/YE) | Voltage, ignition switch in Start or Run (not overload protected) |
| 2 | – | not used |
| 3 | 15S-LG23 (GN/WH) | Voltage, ignition switch in Start or Run (not overload protected), Switched |
| | 15S-PG7 (GN/BU) | Voltage, ignition switch in Start or Run (not overload protected), Switched |
| | 15S-LG23 (GN/WH) | Voltage, ignition switch in Start or Run (not overload protected), Switched |
| | 15S-PG17 (GN/BU) | Voltage, ignition switch in Start or Run (not overload protected), Switched |

## C446

### 14014

F06112

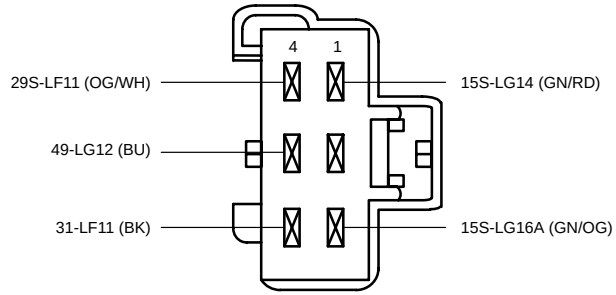


### 13A412
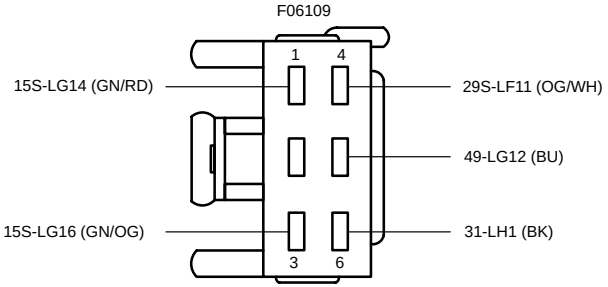
F06109