122-1 POWER LUMBAR SEATS

2002 EXPEDITION/NAVIGATOR

For diagnostic information refer to Section 501-10 of the Workshop Manual.

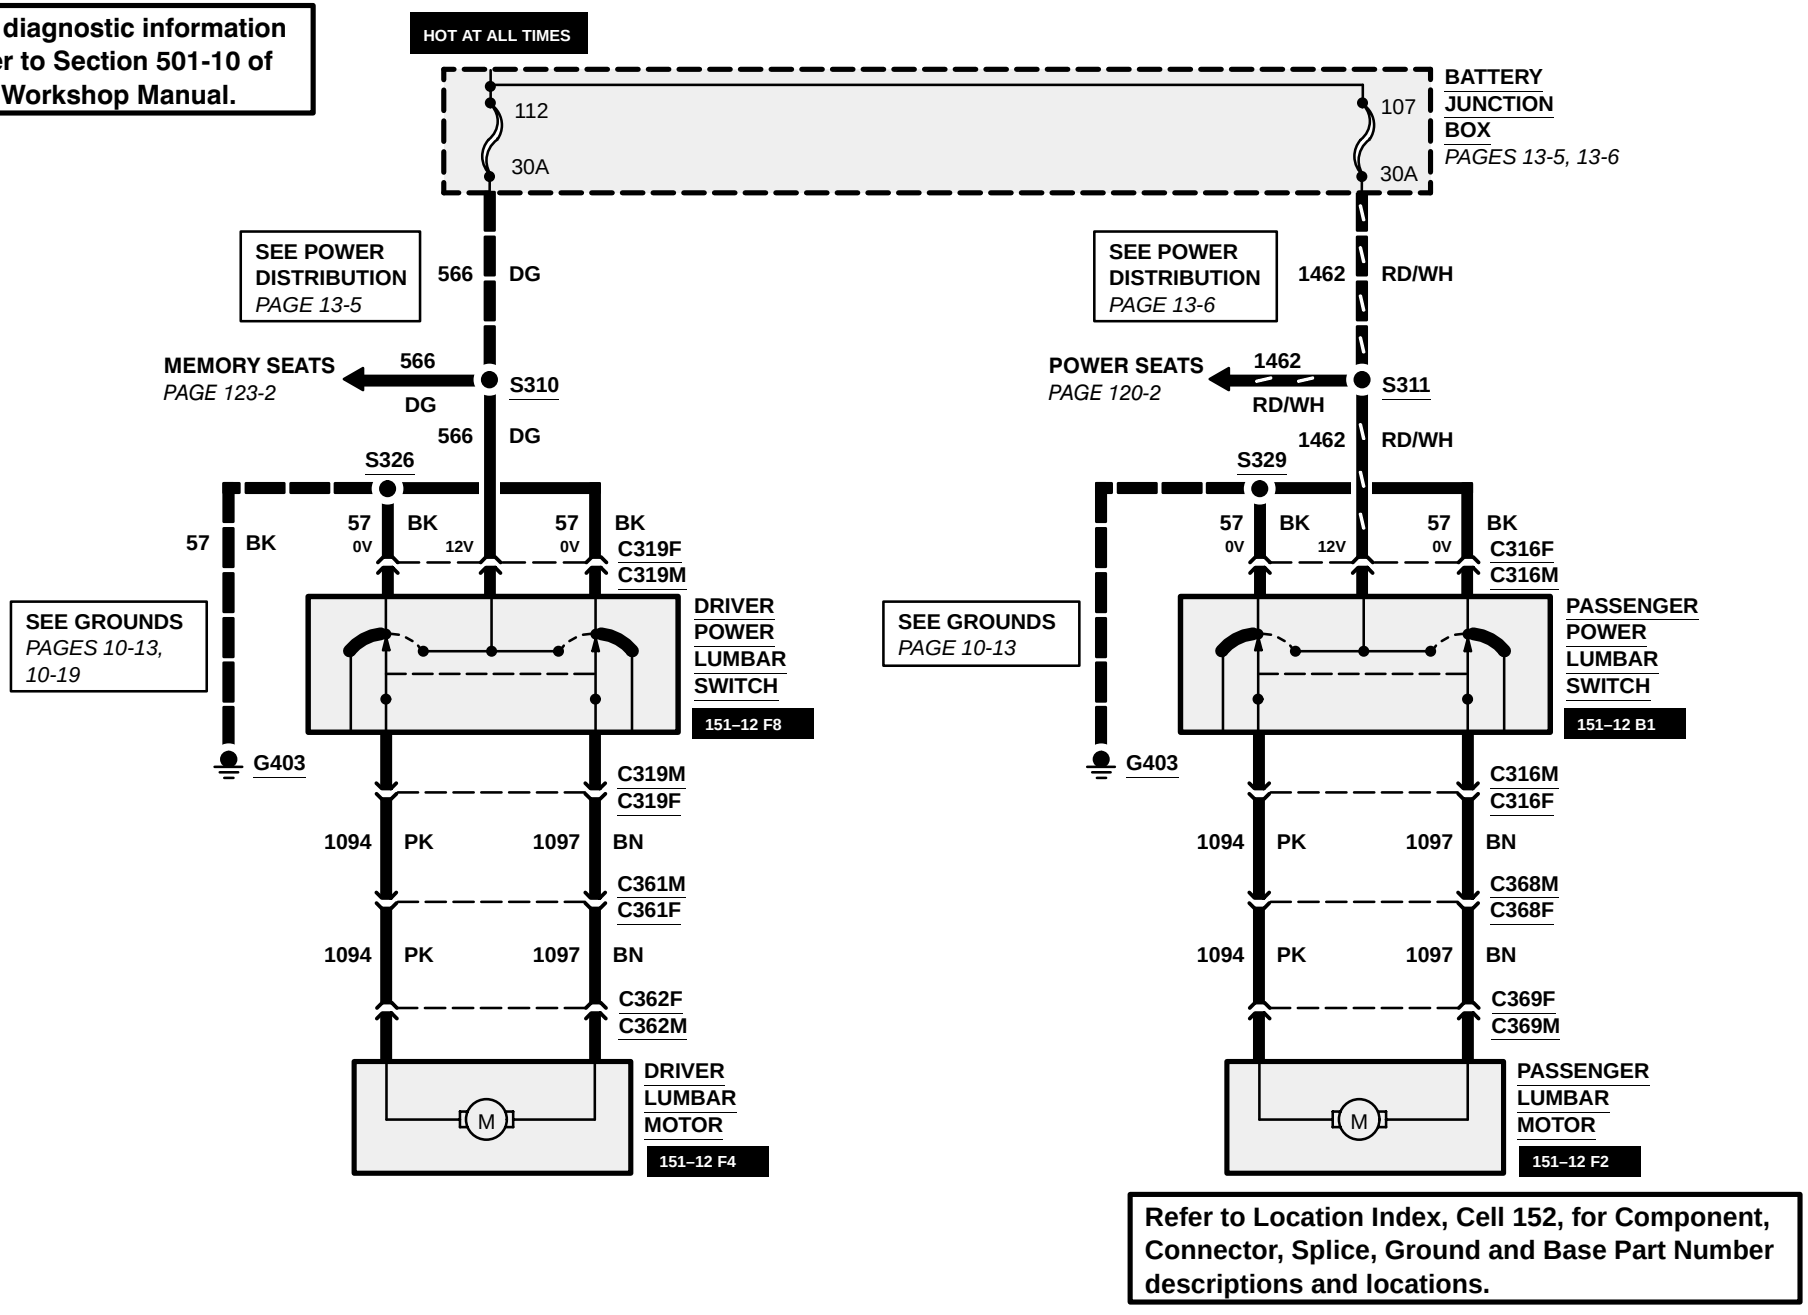

Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.