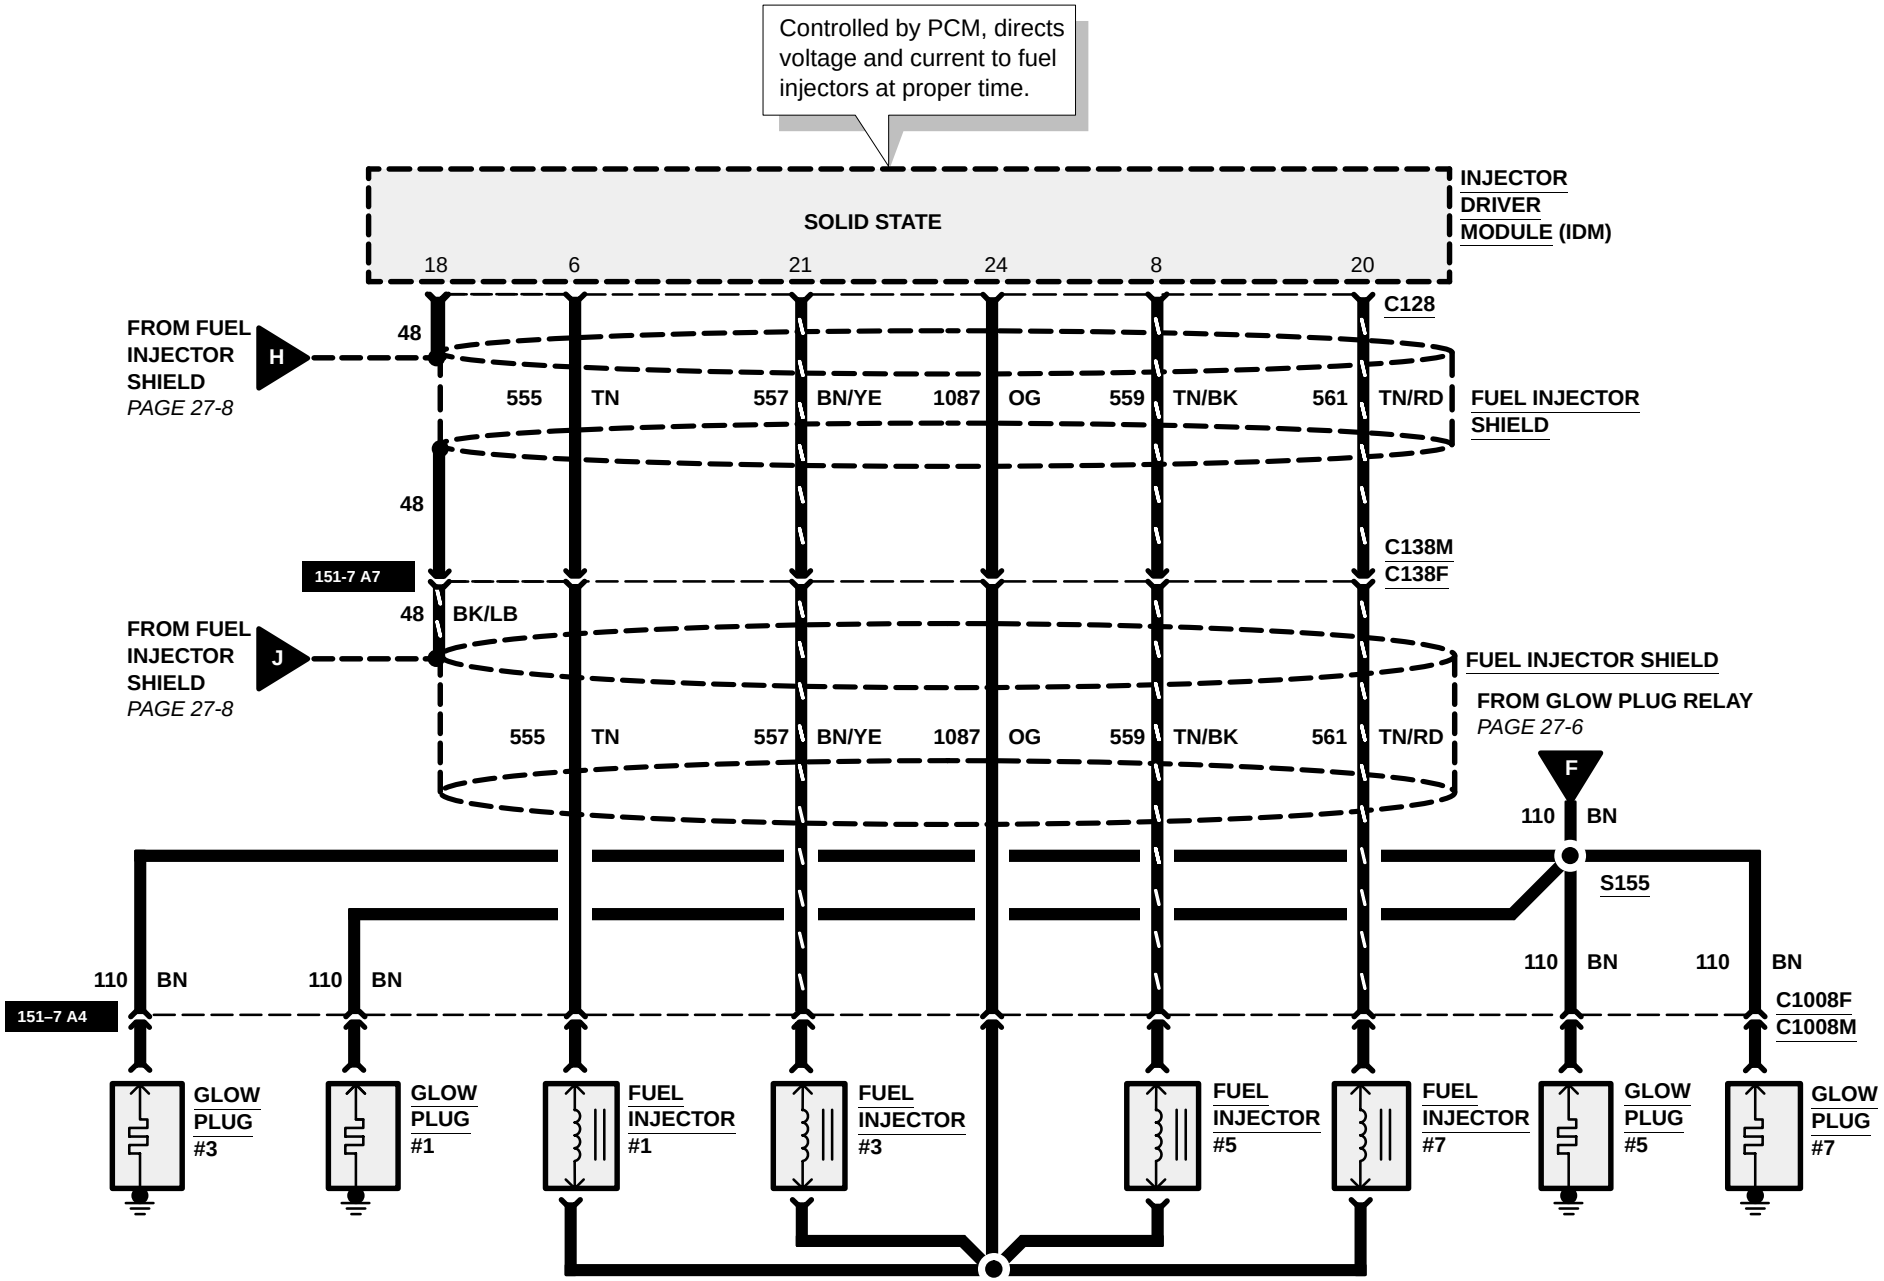
Controlled by PCM, directs voltage and current to fuel injectors at proper time.
SOLID STATE
INJECTOR DRIVER MODULE (IDM)
18
6
21
24
8
20
C128
FROM FUEL INJECTOR SHIELD
H
PAGE 27-8
48
555 TN
557 BN/YE
1087 OG
559 TN/BK
561 TN/RD
FUEL INJECTOR SHIELD
48
C138M
C138F
151-7 A7
FROM FUEL INJECTOR SHIELD
J
PAGE 27-8
48 BK/LB
FUEL INJECTOR SHIELD
FROM GLOW PLUG RELAY
PAGE 27-6
F
110 BN
S155
110 BN
110 BN
110 BN
C1008F
C1008M
151–7 A4
GLOW PLUG #3
GLOW PLUG #1
FUEL INJECTOR #1
FUEL INJECTOR #3
FUEL INJECTOR #5
FUEL INJECTOR #7
GLOW PLUG #5
GLOW PLUG #7