C722

14A005

Seat heater switch, left rear

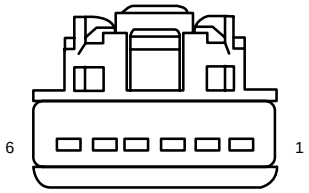

F06301

Pin	Circuit	Circuit function
1	31-HC15 (BK/YE)	Ground
2	8-HC21 (WH/GN)	Climate controlled seat module - High
3	7-HC21 (YE/GN)	indicator - High
4	7-HC22 (YE)	indicator - Low
5	64S-LH15 (BU)	Illumination, feed
6	10-HC21 (GY/OG)	Climate controlled seat module - Low

C801

* without heated seats
** with heated seats

14A005

Window adjust switch, right rear (14A412)

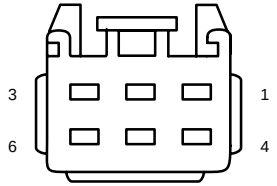

F06214

Pin	Circuit	Circuit function
1	31-LH33 (BK/GN)	Illumination, Ground
2	10-AJ24 (GY)	Down, switch sense
3	7-AJ24 (YE)	Reference voltage
4	*64S-LH33 (BU/BK)	Illumination, feed
	**64S-LH33A (BU/BK)	Illumination, feed
5	8-AJ24 (WH)	Up, switch sense
6	–	not used

C802

14632

Speaker, right rear (18808)

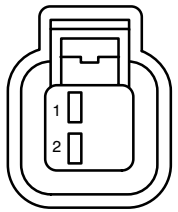

F02069

Pin	Circuit	Circuit function
1	8-MD18 (WH)	Speaker, right rear (18808) +
2	10-MD18 (GY)	Speaker, right rear (18808) –