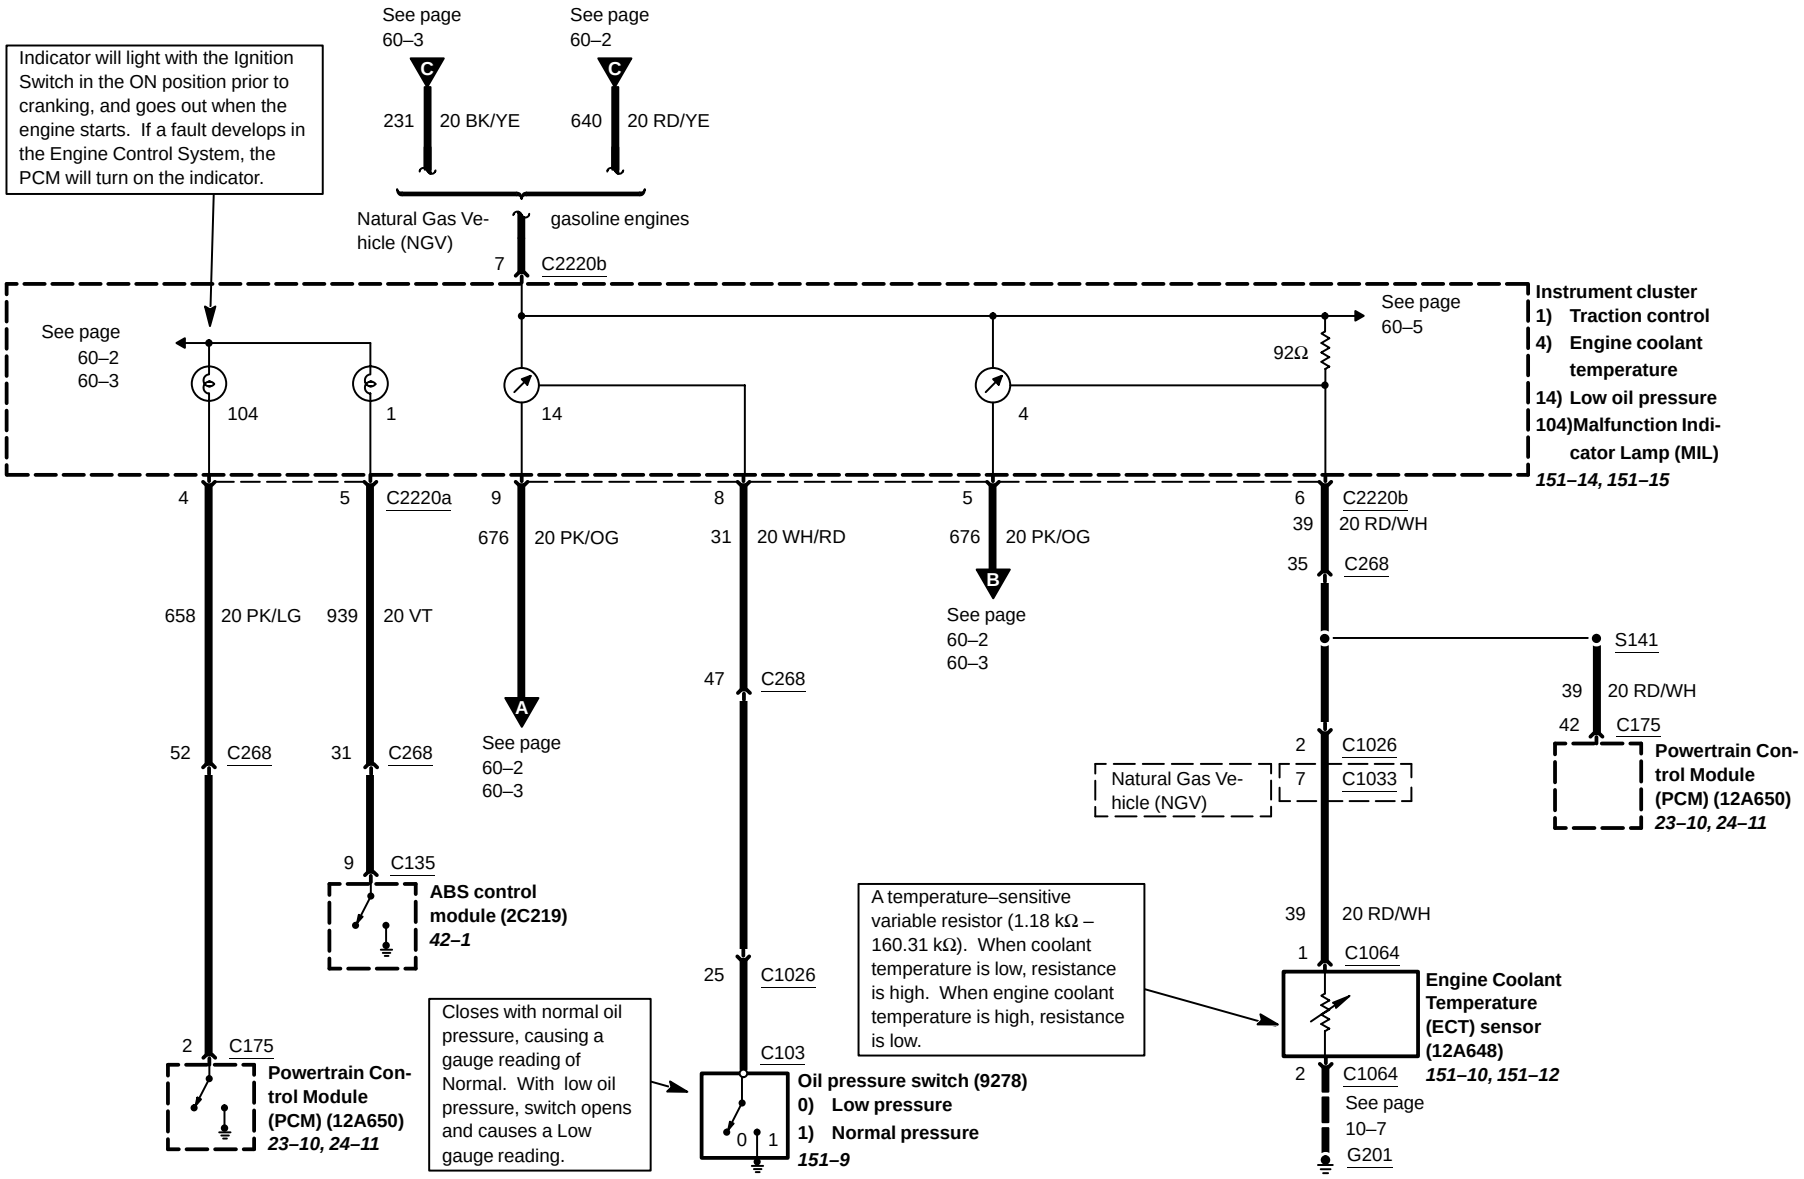
Indicator will light with the Ignition Switch in the ON position prior to cranking, and goes out when the engine starts. If a fault develops in the Engine Control System, the PCM will turn on the indicator.
See page 60–3
See page 60–2
231 20 BK/YE
640 20 RD/YE
Natural Gas Vehicle (NGV)
gasoline engines
7 C2220b
See page 60–2 60–3
See page 60–5
92Ω
Instrument cluster
1) Traction control
4) Engine coolant temperature
14) Low oil pressure
104) Malfunction Indicator Lamp (MIL)
151–14, 151–15
104
1
14
4
4
5 C2220a
9
8
5
6 C2220b
658 20 PK/LG
939 20 VT
676 20 PK/OG
31 20 WH/RD
676 20 PK/OG
39 20 RD/WH
35 C268
52 C268
31 C268
47 C268
See page 60–2 60–3
S141
39 20 RD/WH
42 C175
Powertrain Control Module (PCM) (12A650)
23–10, 24–11
2 C1026
7 C1033
Natural Gas Vehicle (NGV)
9 C135
ABS control module (2C219)
42–1
A temperature–sensitive variable resistor (1.18 kΩ – 160.31 kΩ). When coolant temperature is low, resistance is high. When engine coolant temperature is high, resistance is low.
39 20 RD/WH
1 C1064
Engine Coolant Temperature (ECT) sensor (12A648)
2 C1064
151–10, 151–12
25 C1026
Closes with normal oil pressure, causing a gauge reading of Normal. With low oil pressure, switch opens and causes a Low gauge reading.
C103
Oil pressure switch (9278)
0) Low pressure
1) Normal pressure
151–9
0 1
2 C175
Powertrain Control Module (PCM) (12A650)
23–10, 24–11
See page 10–7
G201