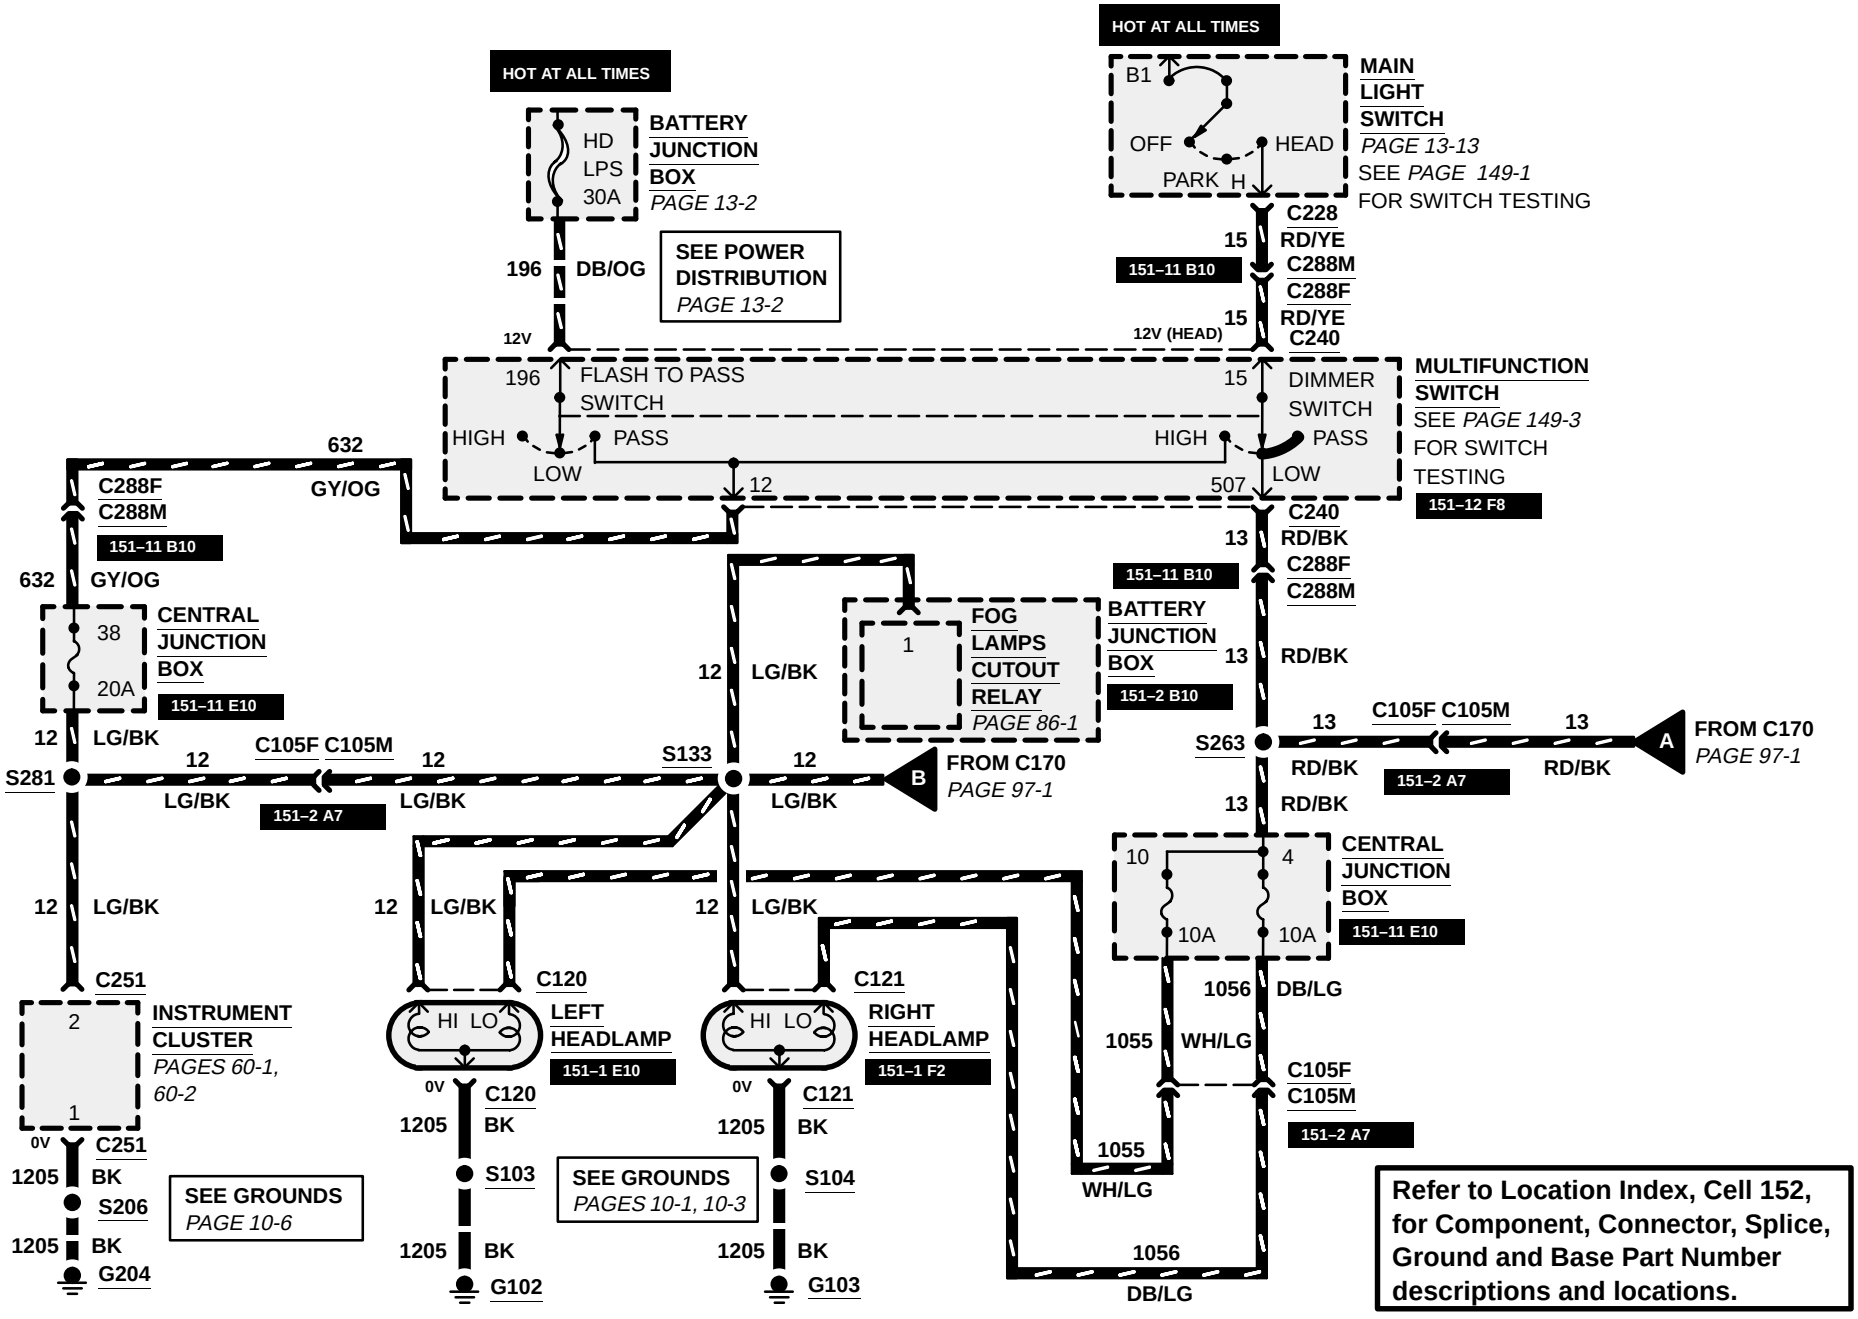
HOT AT ALL TIMES
BATTERY JUNCTION BOX
PAGE 13-2
HD LPS 30A
196 DB/OG
SEE POWER DISTRIBUTION
PAGE 13-2
12V
HOT AT ALL TIMES
MAIN LIGHT SWITCH
PAGE 13-13
SEE PAGE 149-1 FOR SWITCH TESTING
B1
OFF
HEAD
PARK H
C228
15 RD/YE
151–11 B10
C288M
C288F
15 RD/YE
12V (HEAD)
C240
MULTIFUNCTION SWITCH
SEE PAGE 149-3 FOR SWITCH TESTING
151–12 F8
196
FLASH TO PASS SWITCH
HIGH
PASS
LOW
12
15
DIMMER SWITCH
HIGH
PASS
LOW
507
632
C288F
C288M
151–11 B10
632 GY/OG
632 GY/OG
CENTRAL JUNCTION BOX
38
20A
151–11 E10
12 LG/BK
S281
12 LG/BK
C105F C105M
151–2 A7
12 LG/BK
S133
12 LG/BK
12 LG/BK
FOG LAMPS CUTOUT RELAY
PAGE 86-1
1
BATTERY JUNCTION BOX
151–2 B10
FROM C170
PAGE 97-1
B
C240
13 RD/BK
C288F
C288M
151–11 B10
13 RD/BK
S263
13 RD/BK
C105F C105M
151–2 A7
13
13
RD/BK
RD/BK
A
FROM C170
PAGE 97-1
13 RD/BK
CENTRAL JUNCTION BOX
10
4
10A
10A
151–11 E10
1056 DB/LG
1055 WH/LG
1055 WH/LG
C105F
C105M
151–2 A7
1056 DB/LG
12 LG/BK
C251
INSTRUMENT CLUSTER
PAGES 60-1, 60-2
2
1
0V
C251
1205 BK
S206
1205 BK
G204
SEE GROUNDS
PAGE 10-6
12 LG/BK
C120
LEFT HEADLAMP
151–1 E10
HI LO
0V
C120
1205 BK
S103
1205 BK
G102
12 LG/BK
C121
RIGHT HEADLAMP
151–1 F2
HI LO
0V
C121
1205 BK
S104
1205 BK
G103
SEE GROUNDS
PAGES 10-1, 10-3
Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.