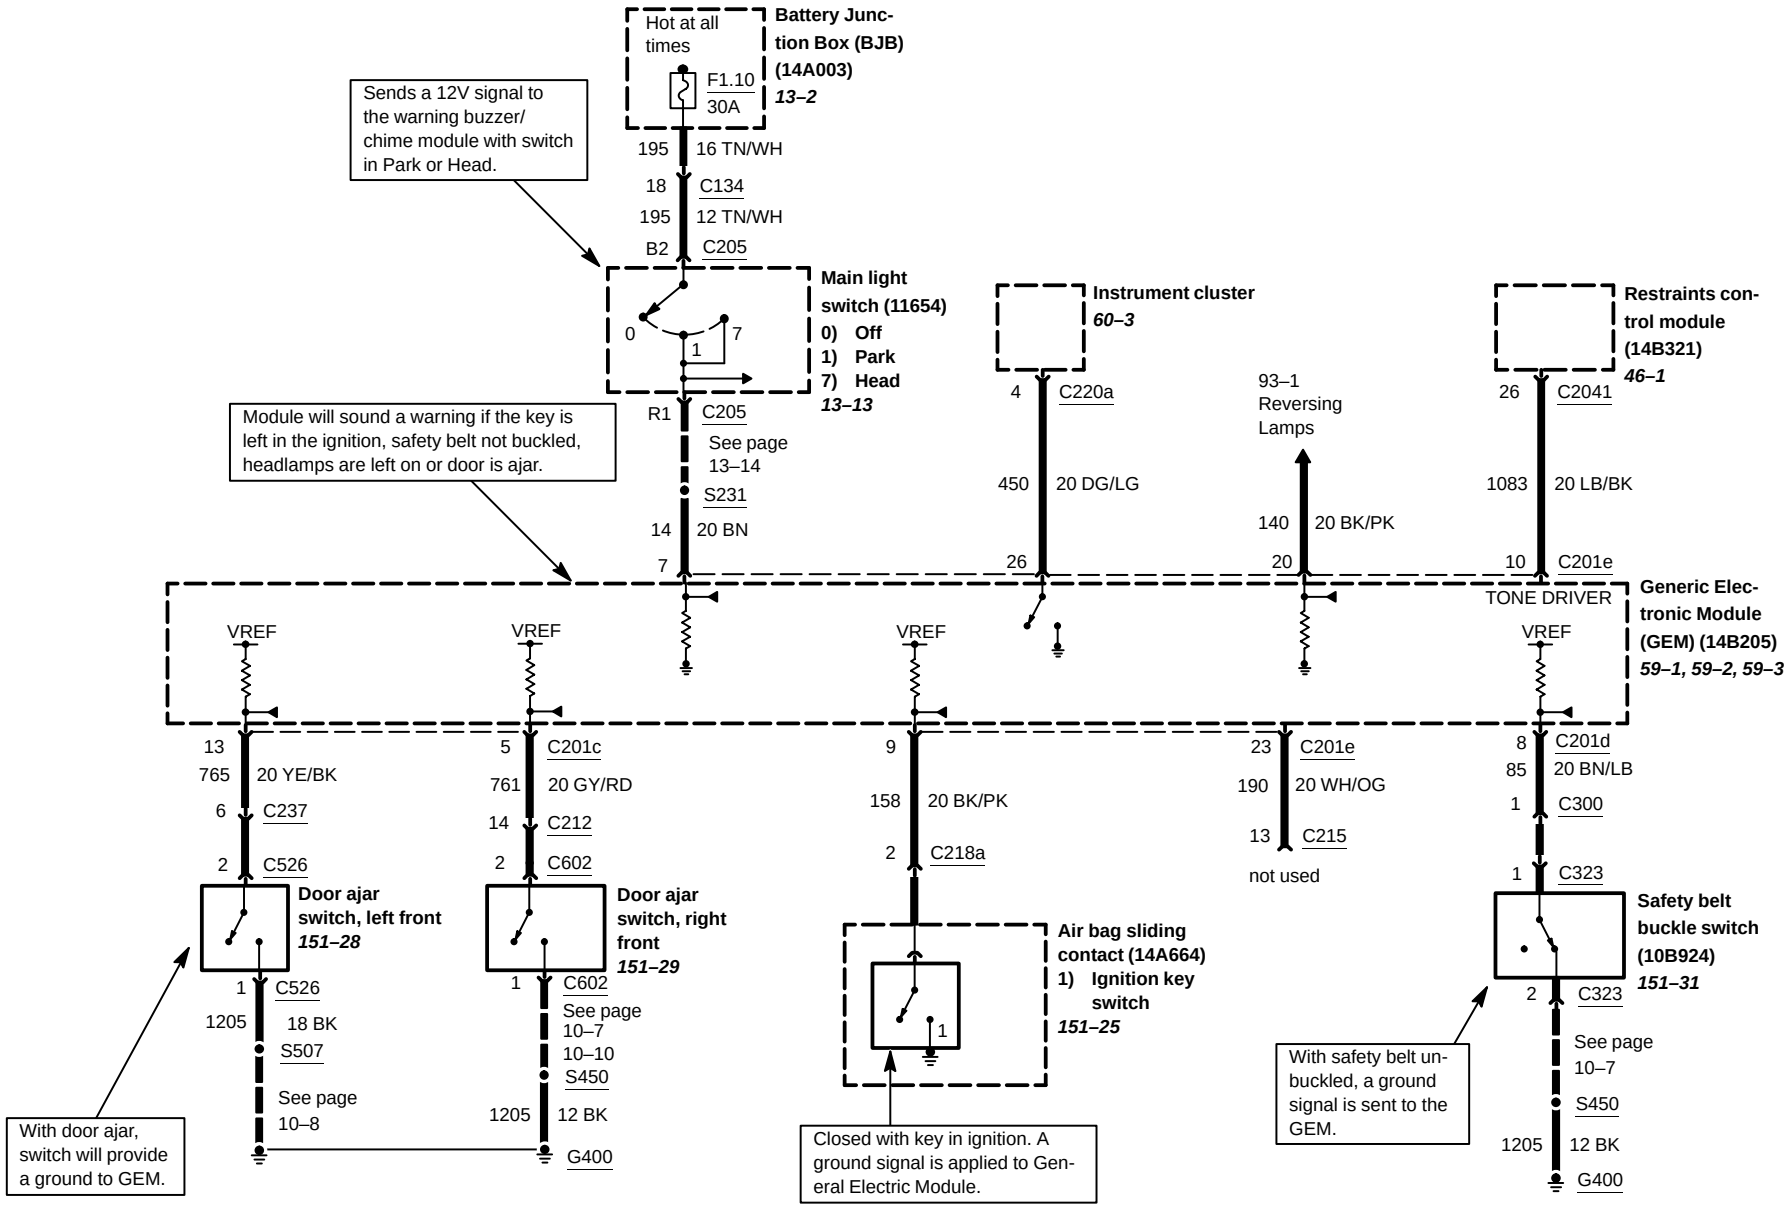
Hot at all times
Battery Junction Box (BJB) (14A003) 13–2
F1.10
30A
195 16 TN/WH
18 C134
195 12 TN/WH
B2 C205
Sends a 12V signal to the warning buzzer/ chime module with switch in Park or Head.
Main light switch (11654)
0) Off
1) Park
7) Head
13–13
0
1
7
R1 C205
See page 13–14
S231
14 20 BN
7
Module will sound a warning if the key is left in the ignition, safety belt not buckled, headlamps are left on or door is ajar.
Instrument cluster 60–3
4 C220a
450 20 DG/LG
26
93–1 Reversing Lamps
140 20 BK/PK
20
Restraints control module (14B321) 46–1
26 C2041
1083 20 LB/BK
10 C201e
TONE DRIVER
Generic Electronic Module (GEM) (14B205) 59–1, 59–2, 59–3
VREF
VREF
VREF
VREF
13
765 20 YE/BK
6 C237
2 C526
Door ajar switch, left front 151–28
1 C526
1205 18 BK
S507
See page 10–8
With door ajar, switch will provide a ground to GEM.
5 C201c
761 20 GY/RD
14 C212
2 C602
Door ajar switch, right front 151–29
1 C602
See page 10–7
10–10
S450
1205 12 BK
G400
9
158 20 BK/PK
2 C218a
Air bag sliding contact (14A664)
1) Ignition key switch
151–25
1
Closed with key in ignition. A ground signal is applied to General Electric Module.
23 C201e
190 20 WH/OG
13 C215
not used
8 C201d
85 20 BN/LB
1 C300
1 C323
Safety belt buckle switch (10B924) 151–31
2 C323
See page 10–7
S450
1205 12 BK
G400
With safety belt unbuckled, a ground signal is sent to the GEM.