C220a

14401

A30
Instrument cluster

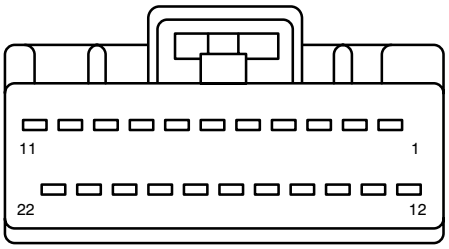

F22003

Pin	Circuit	Circuit Function
1	29-AL12 (OG)	Voltage supplied at all times (overload protected)
2	33-AL6 (YE/BU)	Switched between: Battery voltage, Ground or Open
3	32-AL6 (WH/BU)	Switched between: Battery voltage, Ground or Open
4	35-AL7 (VT/BK)	Switched between: Battery voltage, Ground or Open
5	34-AL7 (BU/BK)	Switched between: Battery voltage, Ground or Open
6	31-AL11 (BK)	Ground
7	64S-LK29 (BU/RD)	Variable D.C. voltage (not overload protected), Switched
8	–	not used
9	7-LD7 (YE/RD)	Voltage D.C. supplied at all times (sensor)
10	10-GL6 (GY/VT)	Signal 2 (Y–direction, reverse, downward)
11	15-JA14 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected)
12	9-GG25 (BN/WH)	Sensor signal return (reference/ground)
13	7-GG25 (YE/VT)	Voltage D.C. supplied at all times (sensor)
14	–	not used
15	–	not used
16	–	not used
17	–	not used
18	8-GE52 (WH/BK)	Sensor signal
19	8-LE42 (WH/BU)	Sensor signal
20	–	not used
21	30S-GM7 (RD/WH)	Voltage supplied at all times (not overload protected), Switched
22	31S-JA14 (BK/GN)	Ground, Switched

C220b

14401

A30
Instrument cluster

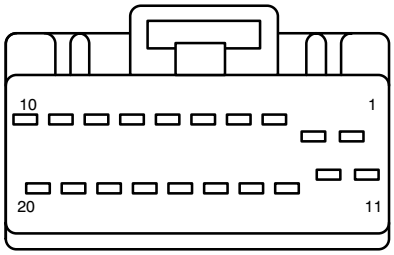

F22003

Pin	Circuit	Circuit Function
1	–	not used
2	–	not used
3	29-GG11 (OG/BU)	Voltage supplied at all times (overload protected)
4	8-GL36 (WH/RD)	Sensor signal
5	10-GL36 (GY/RD)	Signal 2 (Y–direction, reverse, downward)
6	15-GG14 (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected)
7	7-LD13 (YE/BK)	Voltage D.C. supplied at all times (sensor)
8	8-TA34 (WH)	Sensor signal
9	9-LG43 (BN/WH)	Sensor signal return (reference/ground)
10	10-GJ9 (GY/OG)	Signal 2 (Y–direction, reverse, downward)
11	–	not used
12	–	not used
13	91-GG11 (BN/RD)	Ground
14	8-JA13 (WH/BK)	Sensor signal
15	4-EG8 (GY/VT)	Data link, bus positive
16	5-EG8 (BU/WH)	Data link, bus negative
17	75-GG15 (YE/GN)	Voltage: Ignition switch in Accessory or Run
18	31S-BB12 (BK/YE)	Ground, Switched
19	8-LE14 (WH/BU)	Sensor signal
20	8-LG43 (WH/VT)	Sensor signal