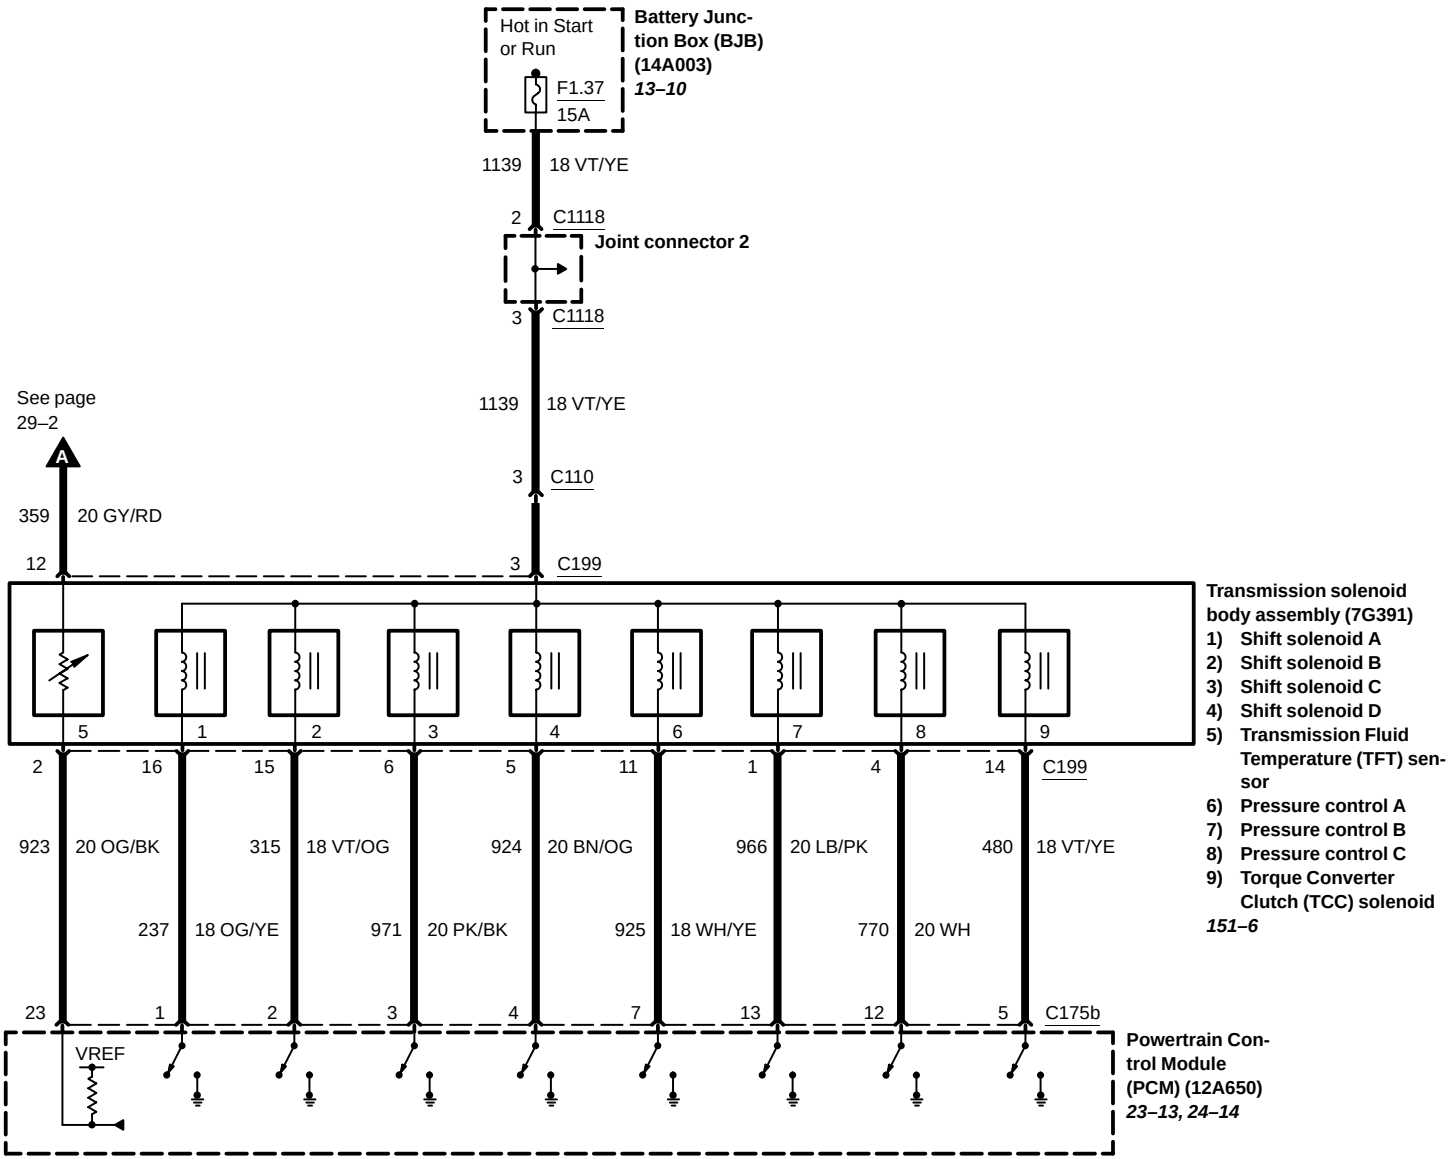
Hot in Start or Run
F1.37
15A
Battery Junction Box (BJB) (14A003)
13–10
1139 18 VT/YE
2 C1118
Joint connector 2
3 C1118
1139 18 VT/YE
3 C110
359 20 GY/RD
12 3 C199
See page 29–2
A
5 1 2 3 4 6 7 8 9
Transmission solenoid body assembly (7G391)
1) Shift solenoid A
2) Shift solenoid B
3) Shift solenoid C
4) Shift solenoid D
5) Transmission Fluid Temperature (TFT) sensor
6) Pressure control A
7) Pressure control B
8) Pressure control C
9) Torque Converter Clutch (TCC) solenoid
151–6
2 16 15 6 5 11 1 4 14 C199
923 20 OG/BK
315 18 VT/OG
924 20 BN/OG
966 20 LB/PK
480 18 VT/YE
237 18 OG/YE
971 20 PK/BK
925 18 WH/YE
770 20 WH
23 1 2 3 4 7 13 12 5 C175b
VREF
Powertrain Control Module (PCM) (12A650)
23–13, 24–14