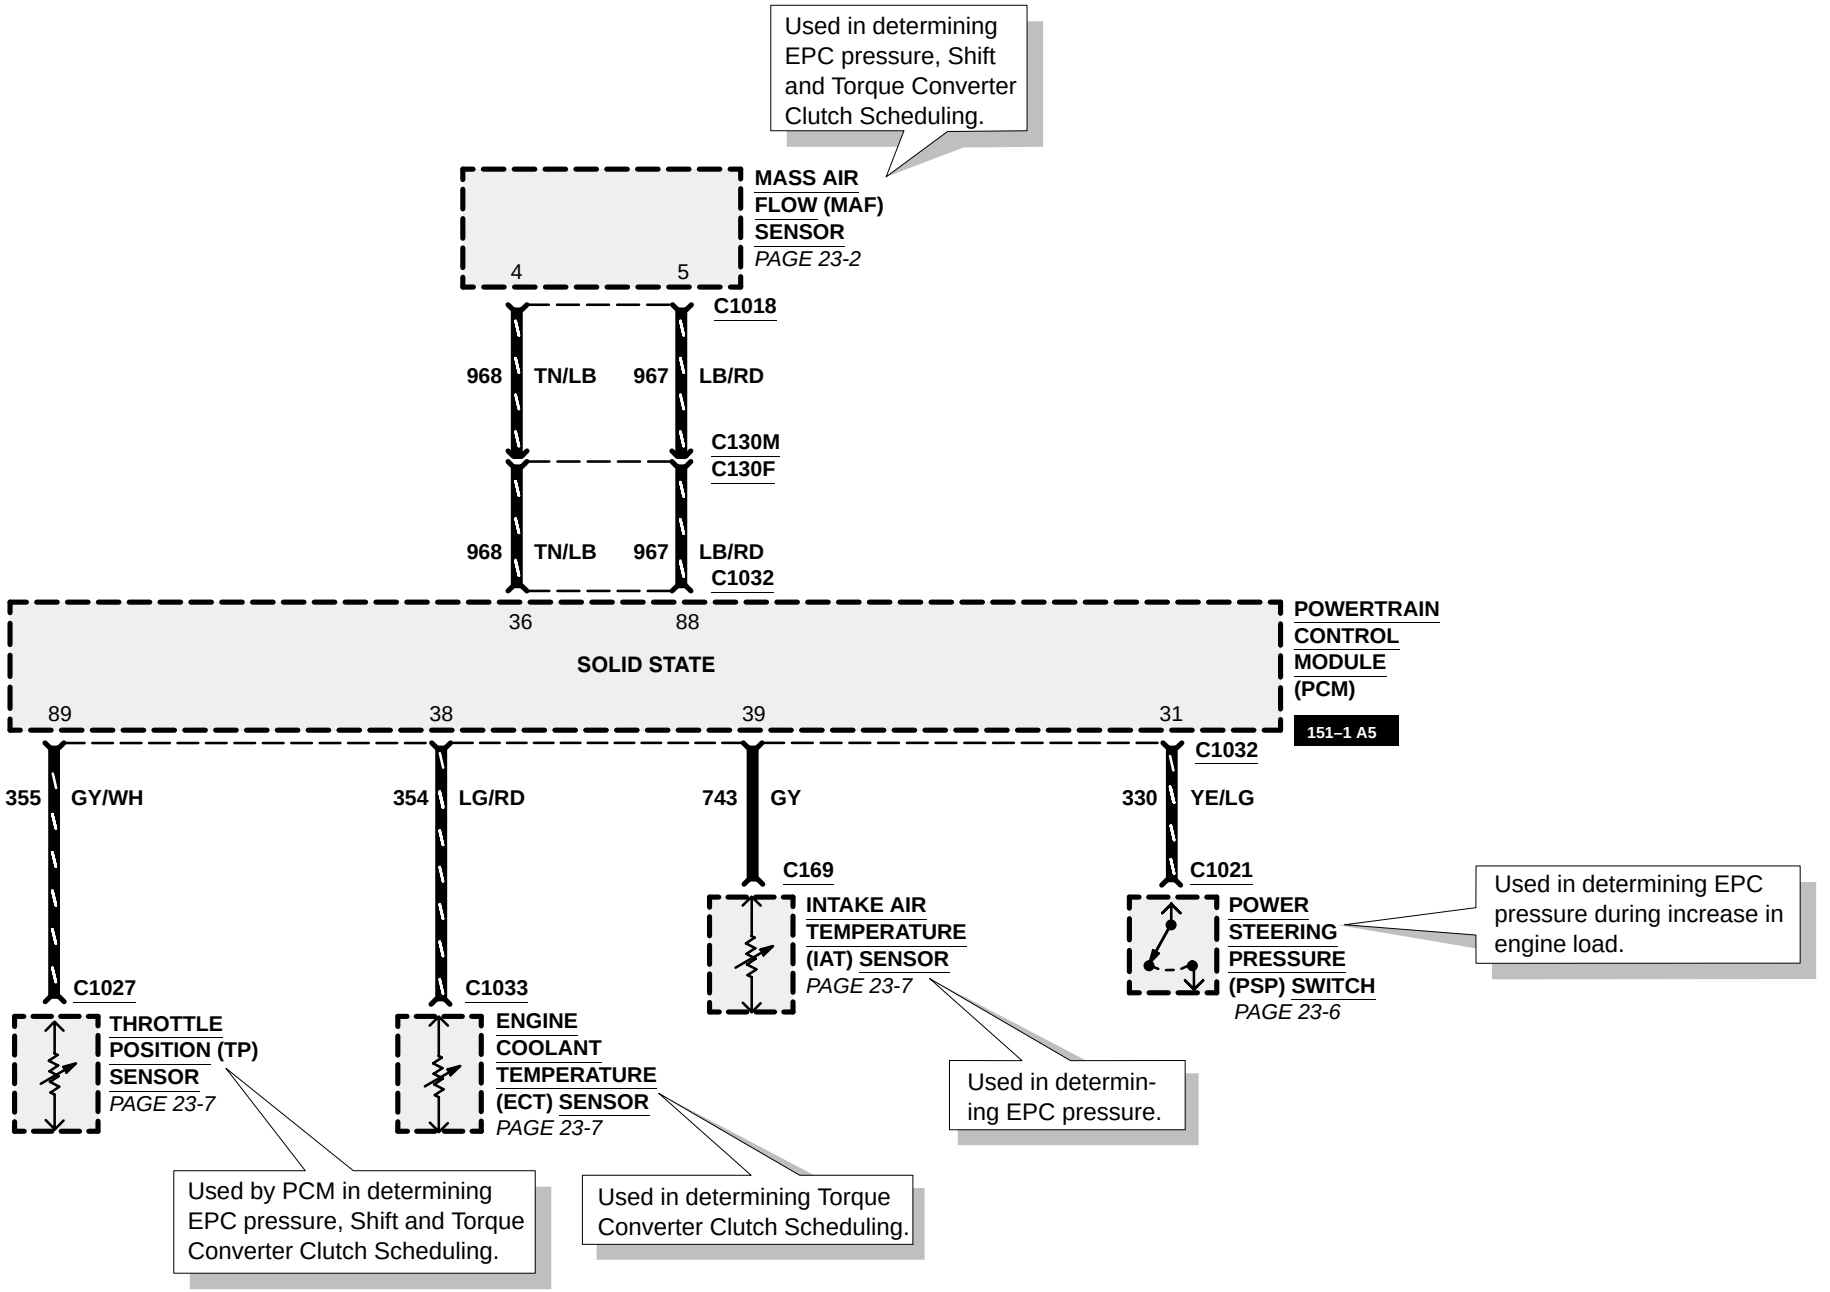
Used in determining EPC pressure, Shift and Torque Converter Clutch Scheduling.
MASS AIR FLOW (MAF) SENSOR
PAGE 23-2
4
5
C1018
968 TN/LB
967 LB/RD
C130M
C130F
968 TN/LB
967 LB/RD
C1032
36
88
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–1 A5
89
38
39
31
C1032
355 GY/WH
354 LG/RD
743 GY
330 YE/LG
C169
C1021
INTAKE AIR TEMPERATURE (IAT) SENSOR
PAGE 23-7
POWER STEERING PRESSURE (PSP) SWITCH
PAGE 23-6
Used in determining EPC pressure during increase in engine load.
Used in determining EPC pressure.
C1027
C1033
THROTTLE POSITION (TP) SENSOR
PAGE 23-7
ENGINE COOLANT TEMPERATURE (ECT) SENSOR
PAGE 23-7
Used by PCM in determining EPC pressure, Shift and Torque Converter Clutch Scheduling.
Used in determining Torque Converter Clutch Scheduling.