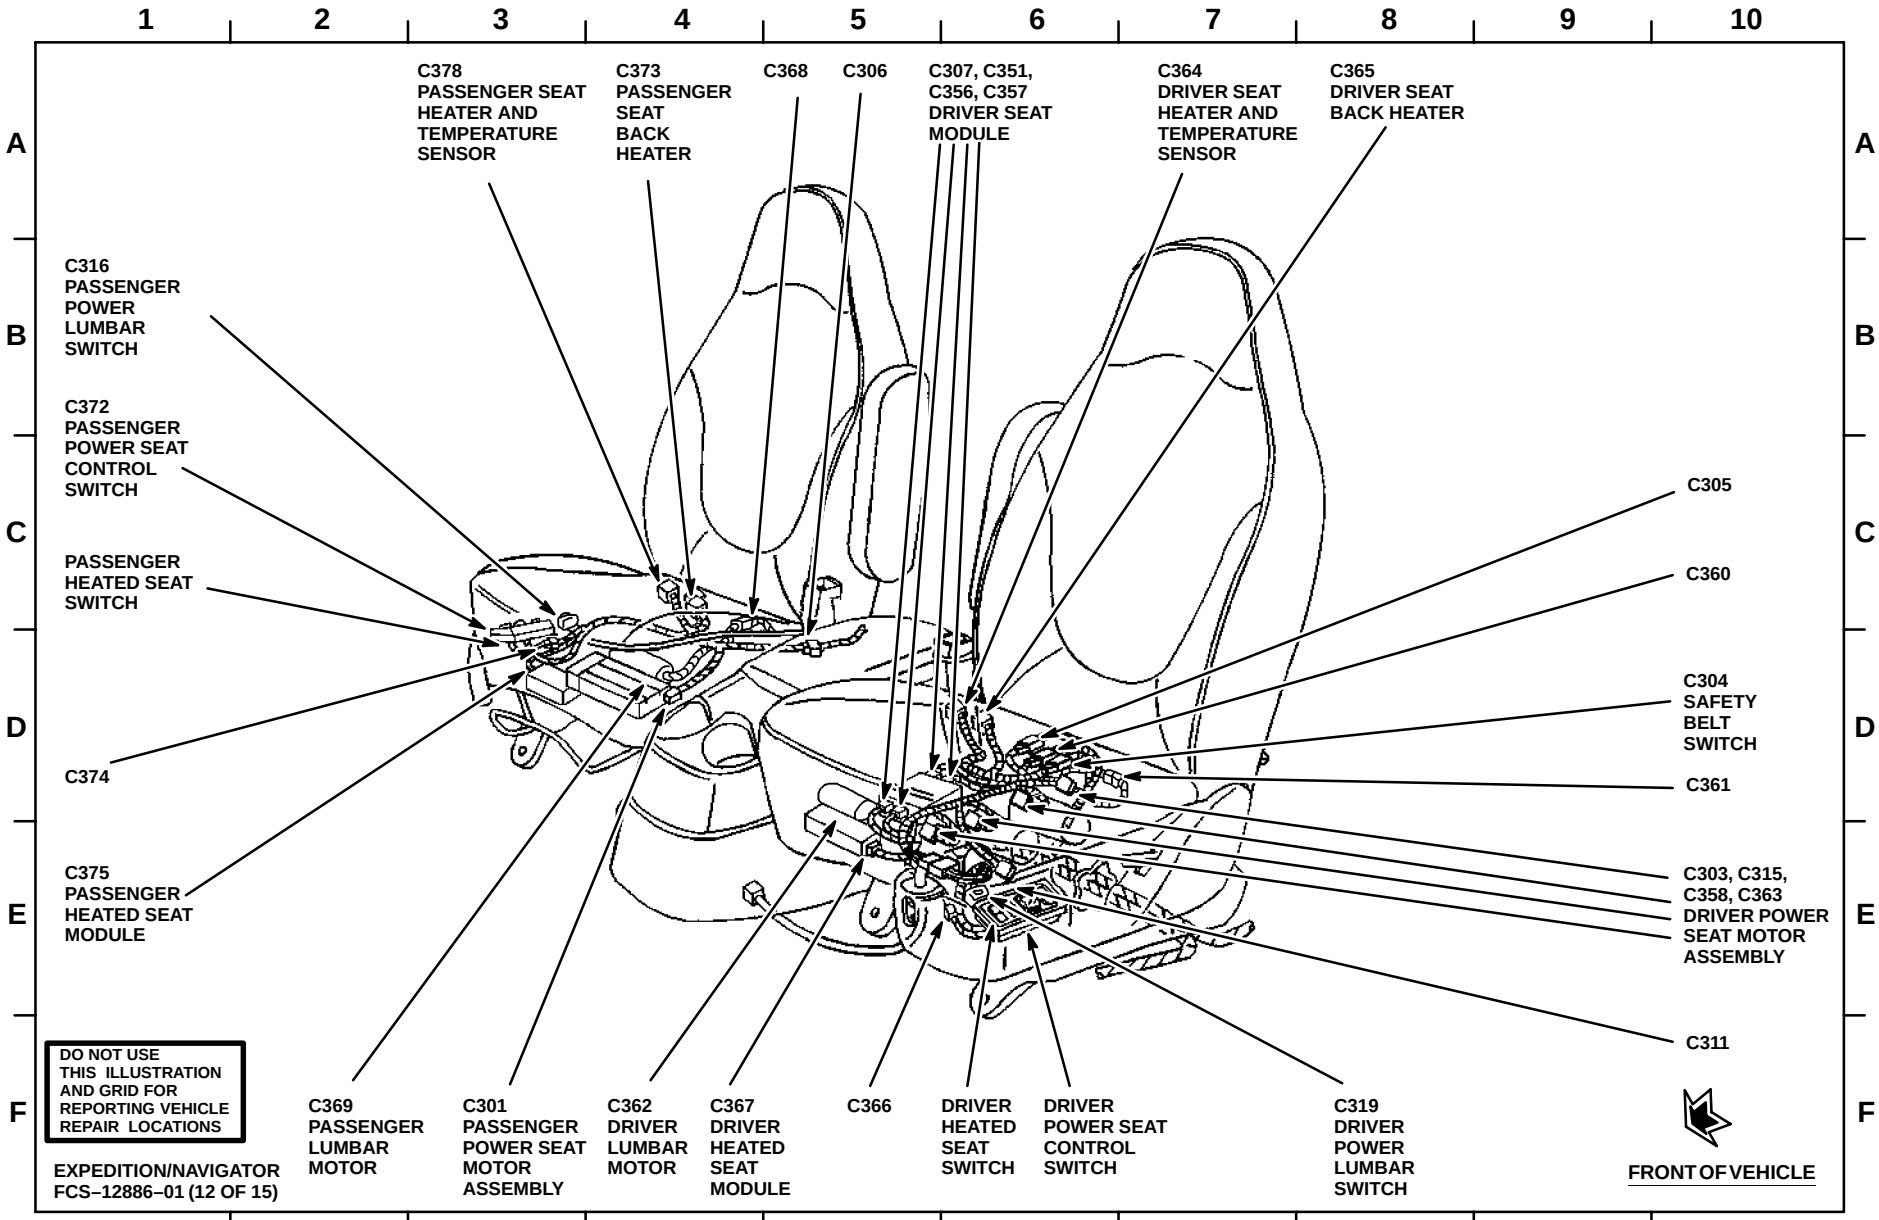
1
2
3
4
5
6
7
8
9
10
A
B
C
D
E
F
C378 PASSENGER SEAT HEATER AND TEMPERATURE SENSOR
C373 PASSENGER SEAT BACK HEATER
C368
C306
C307, C351, C356, C357 DRIVER SEAT MODULE
C364 DRIVER SEAT HEATER AND TEMPERATURE SENSOR
C365 DRIVER SEAT BACK HEATER
C316 PASSENGER POWER LUMBAR SWITCH
C372 PASSENGER POWER SEAT CONTROL SWITCH
PASSENGER HEATED SEAT SWITCH
C374
C375 PASSENGER HEATED SEAT MODULE
C305
C360
C304 SAFETY BELT SWITCH
C361
C303, C315, C358, C363 DRIVER POWER SEAT MOTOR ASSEMBLY
C311
C319 DRIVER POWER LUMBAR SWITCH
DRIVER POWER SEAT CONTROL SWITCH
DRIVER HEATED SEAT SWITCH
C366
C367 DRIVER HEATED SEAT MODULE
C362 DRIVER LUMBAR MOTOR
C301 PASSENGER POWER SEAT MOTOR ASSEMBLY
C369 PASSENGER LUMBAR MOTOR
DO NOT USE THIS ILLUSTRATION AND GRID FOR REPORTING VEHICLE REPAIR LOCATIONS
EXPEDITION/NAVIGATOR
FCS–12886–01 (12 OF 15)
FRONT OF VEHICLE

POWER SEATS