## C349

**14B079**

P87
Rear Integrated Control Panel (RICP)

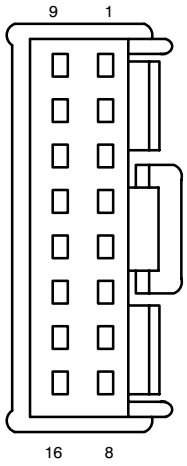


F16027

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 801 (TN/YE) | Speaker, left rear – |
| 2 | 800 (GY/LB) | Speaker, left rear + |
| 3 | 803 (BN/PK) | Speaker, right rear – |
| 4 | 802 (OG/RD) | Speaker, right rear + |
| 5 | – | not used |
| 6 | 694 (BK/LG) | Ground |
| 7 | 57 (BK) | Ground |
| 8 | 235 (RD/BK) | Instrument illumination, input |
| 9 | 825 (TN/LG) | Speaker, right rear + |
| 10 | 827 (TN/WH) | Speaker, left rear + |
| 11 | – | not used |
| 12 | 832 (LB/PK) | Audio corporate protocol A |
| 13 | 833 (TN) | Audio corporate protocol B |
| 14 | – | not used |
| 15 | 1068 (LG/BK) | Audio System ON (ASYSON) |
| 16 | 729 (RD/WH) | Voltage supplied at all times (overload protected) |

## C350

**7A786**

A257
Transfer case assembly

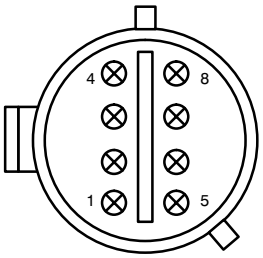


F08050

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 777 (YE) | Four–wheel drive control module, to Transfer case assembly |
| 2 | 763 (OG/WH) | Motor position 2 |
| 3 | 764 (BN/WH) | Motor position 3 |
| 4 | 770 (WH) | Motor position 4 |
| 5 | – | not used |
| 6 | 778 (OG) | Four–wheel drive control module, to Transfer case assembly |
| 7 | 762 (YE/WH) | Motor position 1 |
| 8 | 771 (VT/YE) | Motor position 5 |

## C351

**14683**

M247
Rear window motor

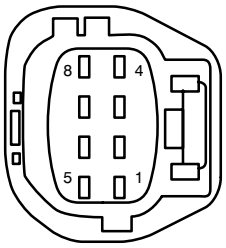


F08161

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | – | not used |
| 2 | 1002 (BK/PK) | Voltage in Run or Accessory (overload protected) |
| 3 | 404 (VT/LG) | Window motor |
| 4 | 405 (VT/LB) | Window motor |
| 5 | 570 (BK/WH) | Ground |
| 6 | 407 (TN/BK) | Window motor |
| 7 | 193 (YE/LG) | Voltage supplied at all times (overload protected) |
| 8 | 57 (BK) | Ground |