C175 (GY)

14290

Powertrain Control Module (PCM) (12A650)

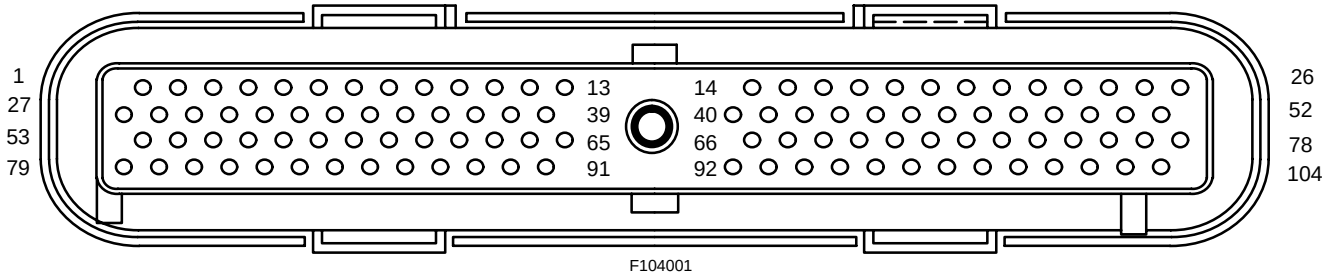

F104001

* Marauder
** Natural Gas Vehicle (NGV)

Pin	Circuit	Circuit function
1	1025 (OG/YE)	Coil On Plug (COP) 6 (12A366) control
2	658 (PK/LG)	Malfunction Indicator Lamp (MIL) control
3	570 (BK/WH)	Ground
4	–	not used
5	–	not used
6	237 (OG/YE)	Shift solenoid A
7	654 (YE/LG)	Generator regulator 'S' terminal
8	791 (RD/PK)	Fuel rail temperature sensor signal
9	29 (YE/WH)	Fuel pump/fuel gauge sender
10	3067 (LB/RD)	Manifold Absolute Pressure (MAP) sensor input
11	315 (VT/OG)	Shift solenoid B
12	911 (WH/LG)	Transmission Control Indicator Lamp (TCIL)
13	107 (VT)	Module programming signal
14	–	not used
15	915 (PK/LB)	SCP Bus –
16	914 (TN/OG)	SCP Bus +
17	1216 (GY/OG)	RX signal
18	1215 (WH/LG)	TX signal
19	1270 (OG/RD)	cylinder head Temperature indicator Lamp
20	1907 (WH/LG)	Fuel door release solenoid, indicator
21	138 (BK/PK)	Powertrain Control Module (PCM) (12A650) – Crank-shaft position sensor (6C315) +
22	139 (GY/YE)	Powertrain Control Module (PCM) (12A650) – Crank-shaft position sensor (6C315) –
23	–	not used

Pin	Circuit	Circuit function
24	570 (BK/WH)	Ground
25	57 (BK)	Ground
26	1024 (LG/WH)	Coil On Plug (COP) 1 (12A366) control
27	1021 (LG/YE)	Coil On Plug (COP) 5 (12A366) control
28	229 (RD/OG)	Engine cooling fan motor control
29	224 (TN/WH)	PCM to transmission overdrive cancel switch
30	1269 (OG/RD)	Light emitting diode (LED) Signal Ground
31	328 (YE/LG)	Power steering pressure sensor input
32	311 (DG/VT)	Knock sensor (12A699) –
33	–	not used
34	1144 (YE/BK)	Digital Transmission Range (DTR) sensor, TR1
35	392 (RD/LG)	Heated Oxygen Sensor (HO2S) #12 (9G444) input
36	968 (TN/LB)	Mass Air Flow (MAF) sensor (12B579) signal return
37	923 (OG/BK)	Transmission Fluid Temperature (TFT) sensor input
38	3062 (BK/WH)	A/C evaporator discharge air temperature sensor, input
39	743 (GY)	Intake Air Temperature (IAT) sensor (12A697) input
40	238 (DG/YE)	Powertrain Control Module (PCM) (12A650) to Fuel pump monitor
		** Powertrain Control Module (PCM) (12A650) to Natural Gas Vehicle (NGV) tank Power
41	883 (PK/LB)	A/C clutch cycling pressure switch (19D594)
42	39 (RD/WH)	Engine Coolant Temperature (ECT) sensor (12A648) input
43	205 (DB/LG)	Low fuel indicator

Pin	Circuit	Circuit function
44	3405 (GY/RD)	Starter relay (11450) control
45	904 (LG/RD)	Generator, common
46	–	not used
47	360 (BN/PK)	Differential pressure feedback EGR (DPFE) sensor (9J460), control
48	76 (LG/WH)	Tachometer input
49	1145 (LB/BK)	Digital Transmission Range (DTR) sensor, TR2
50	1143 (WH/BK)	Digital Transmission Range (DTR) sensor, TR4
51	570 (BK/WH)	Ground
52	1028 (WH/PK)	Coil On Plug (COP) 3 (12A366) control
53	1030 (DG/VT)	Coil On Plug (COP) 4 (12A366) control
54	126 (VT/YE)	Torque Converter Clutch (TCC) solenoid
55	554 (YE/BK)	Voltage supplied at all times (overload protected)
56	191 (LG/BK)	Powertrain Control Module (PCM) (12A650) to Vapor management valve
57	310 (YE/RD)	Knock sensor (12A699) +
58	–	not used
59	–	not used
60	74 (GY/LB)	Heated Oxygen Sensor (HO2S) #11 (9F472), input
61	393 (VT/LG)	Heated Oxygen Sensor (HO2S) #22 (9G444), input
62	791 (RD/PK)	Fuel tank pressure transducer sensor (9C968)
63	1289 (OG/LG)	Injection pressure sensor input
64	199 (LB/YE)	Digital Transmission Range (DTR) sensor, TR3A
65	352 (BN/LG)	Differential Pressure Feedback EGR (DPFE) sensor, input
66	1102 (YE/LG)	Cylinder–head temperature sensor (6G004) to Power-train Control Module (PCM) (12A650)
	*354 (LG/RD)	Engine Coolant Temperature (ECT) sender, input
67	91 (VT/WH)	Canister vent
68	679 (GY/BK)	Vehicle Speed Sensor (VSS) +
69	331 (PK/YE)	A/C clutch relay, control
70	584 (YE)	Generator/Battery indicator control
71	361 (RD)	Voltage supplied in Start and Run (overload protected)
72	561 (TN/RD)	Fuel injector 7, control

Pin	Circuit	Circuit function
73	559 (TN/BK)	Fuel injector 5, control
74	557 (BN/YE)	Fuel injector 3, control
75	555 (TN)	Fuel injector 1, control
76	570 (BK/WH)	Ground
77	–	not used
78	1027 (PK/LB)	Coil On Plug (COP) 7 (12A366), control
79	1029 (WH/RD)	Coil On Plug (COP) 8 (12A366), control
80	926 (LB/OG)	Powertrain Control Module (PCM) (12A650) to Fuel pump, control
81	925 (WH/YE)	Electronic Pressure Control (EPC) solenoid
82	–	not used
83	264 (WH/LB)	Idle air control valve (IAC) (9F715), control
84	136 (DB/YE)	Output Shaft Speed (OSS) sensor (7H103)
85	282 (DB/OG)	Camshaft position sensor (6B288), input
86	1154 (WH/BK)	A/C pressure transducer sensor, input
87	94 (RD/BK)	Heated Oxygen Sensor (HO2S) #21 (9F472), input
88	967 (LB/RD)	Mass Air Flow (MAF) sensor (12B579), output
89	355 (GY/WH)	Throttle Position Sensor (TPS) (9B989), input
90	351 (BN/WH)	Reference, voltage
91	359 (GY/RD)	signal return
92	569 (DG)	Hot with BPP switch engaged
93	387 (RD/WH)	Heated Oxygen Sensor (HO2S) #11 (9F472), heater
94	388 (YE/LB)	Heated Oxygen Sensor (HO2S) #21 (9F472), heater
95	389 (WH/BK)	Heated Oxygen Sensor (HO2S) #12 (9G444), heater
96	390 (TN/YE)	Heated Oxygen Sensor (HO2S) #22 (9G444), heater
97	361 (RD)	Voltage supplied in Start and Run (overload protected)
98	562 (LB)	Fuel injector 8, control
99	560 (LG/OG)	Fuel injector 6, control
100	558 (BN/LB)	Fuel injector 4, control
101	556 (WH)	Fuel injector 2, control
102	–	not used
103	570 (BK/WH)	Ground
104	1026 (PK/WH)	Coil On Plug (COP) 2 (12A366), control