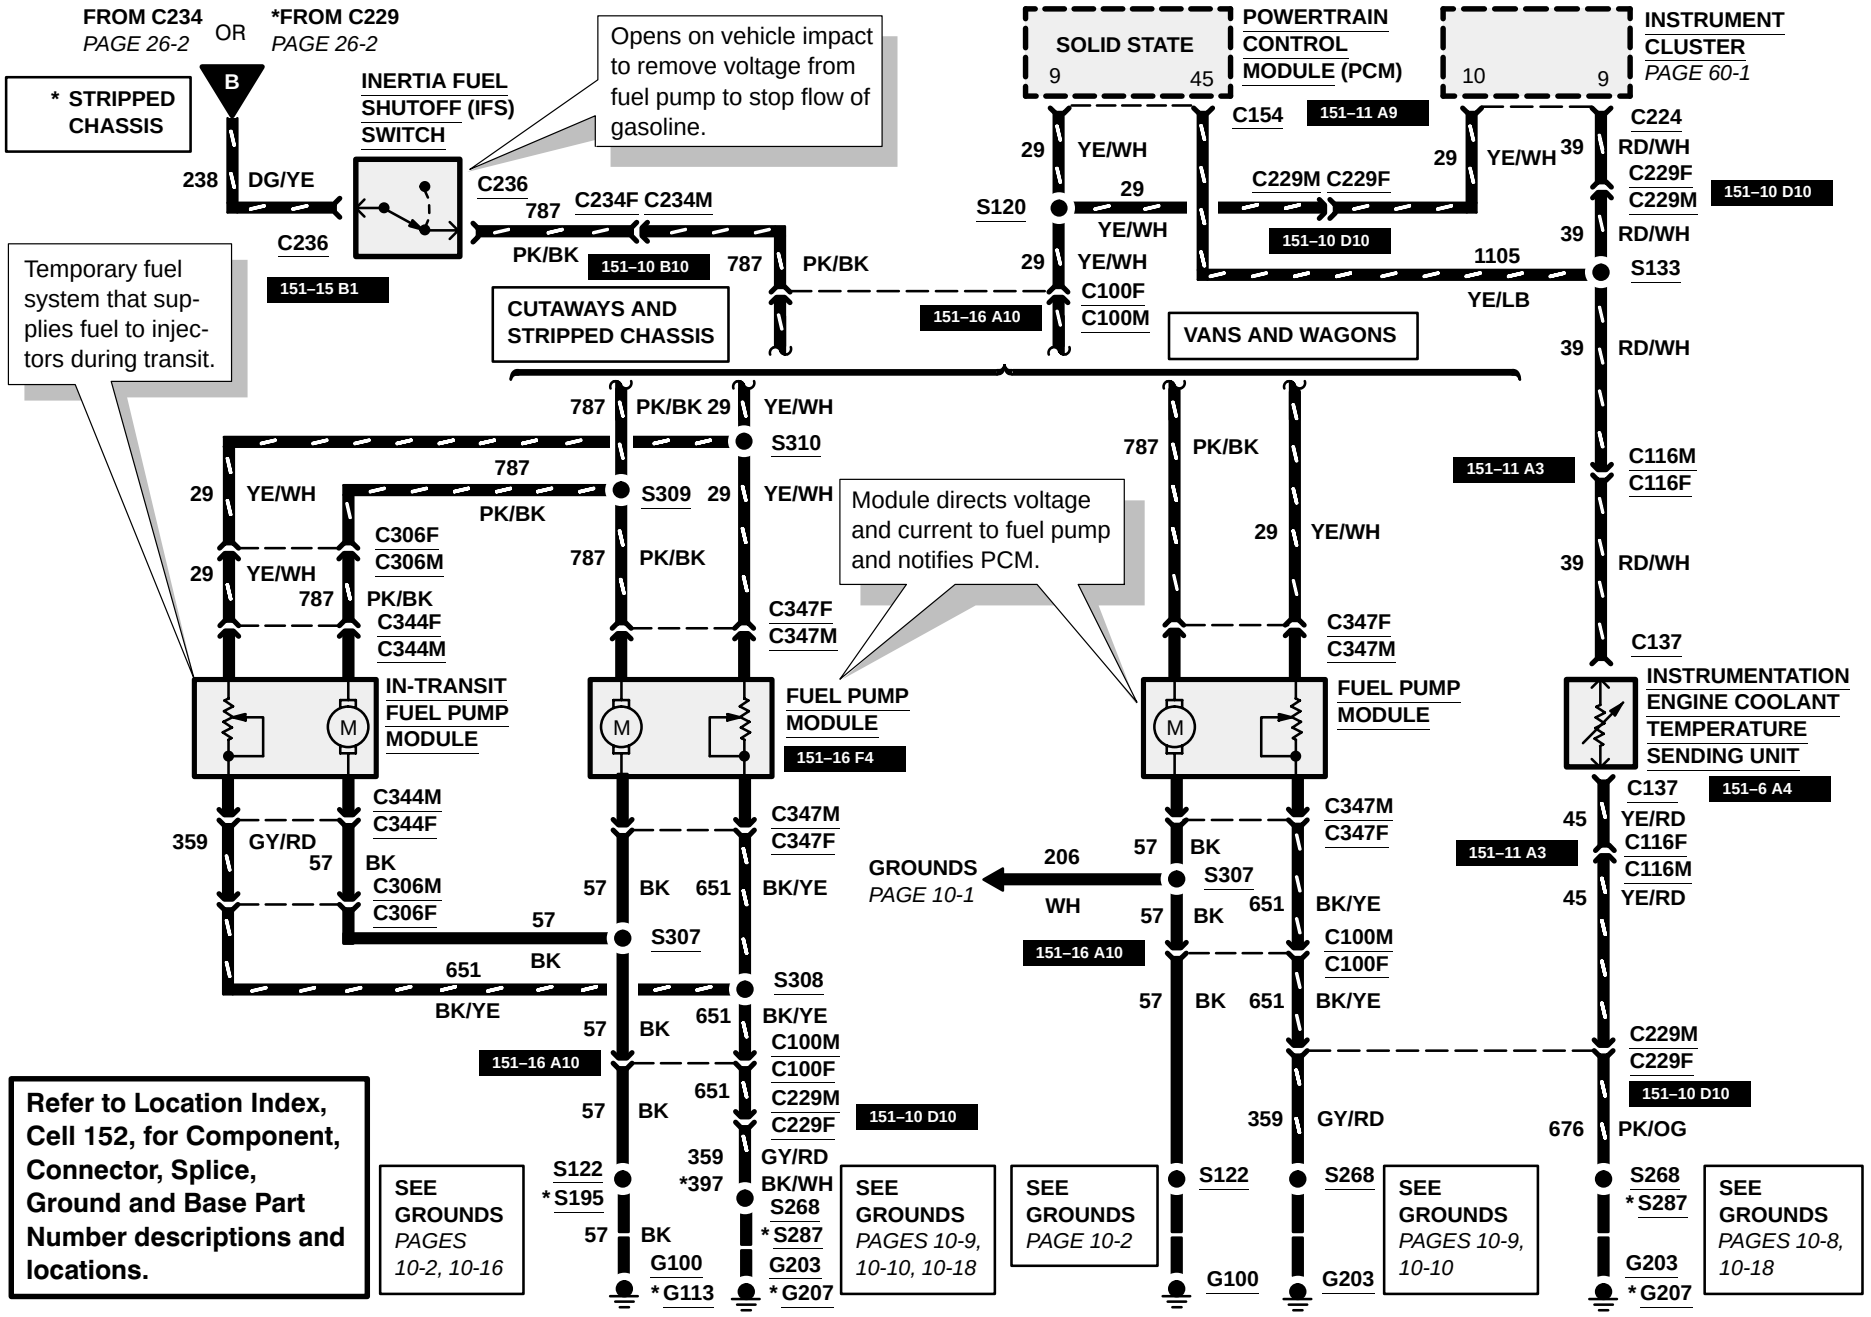
FROM C234
PAGE 26-2
OR
*FROM C229
PAGE 26-2
* STRIPPED CHASSIS
B
INERTIA FUEL SHUTOFF (IFS) SWITCH
Opens on vehicle impact to remove voltage from fuel pump to stop flow of gasoline.
238 DG/YE
C236
C236
151–15 B1
787 C234F C234M
PK/BK
151–10 B10
787 PK/BK
CUTAWAYS AND STRIPPED CHASSIS
151–16 A10
SOLID STATE
9
45
POWERTRAIN CONTROL MODULE (PCM)
C154
151–11 A9
10
9
INSTRUMENT CLUSTER
PAGE 60-1
29 YE/WH
S120
29 YE/WH
29 YE/WH
C100F
C100M
C229M C229F
151–10 D10
29 YE/WH
39 RD/WH
C224
C229F
C229M
151–10 D10
39 RD/WH
1105 YE/LB
S133
VANS AND WAGONS
39 RD/WH
C116M
C116F
151–11 A3
Temporary fuel system that supplies fuel to injectors during transit.
787 PK/BK
29 YE/WH
S310
787
29 YE/WH
S309
29 YE/WH
PK/BK
C306F
C306M
29 YE/WH
787 PK/BK
C344F
C344M
787 PK/BK
C347F
C347M
Module directs voltage and current to fuel pump and notifies PCM.
787 PK/BK
29 YE/WH
C347F
C347M
29 YE/WH
39 RD/WH
C137
IN-TRANSIT FUEL PUMP MODULE
FUEL PUMP MODULE
151–16 F4
FUEL PUMP MODULE
INSTRUMENTATION ENGINE COOLANT TEMPERATURE SENDING UNIT
C137
151–6 A4
C344M
C344F
359 GY/RD
57 BK
C306M
C306F
57 BK 651 BK/YE
C347M
C347F
57
S307
651 BK
S308
BK/YE
57 BK 651 BK/YE
C100M
C100F
151–16 A10
C347M
C347F
GROUNDS
PAGE 10-1
206 WH
57 BK
S307
57 BK 651 BK/YE
C100M
C100F
151–16 A10
57 BK 651 BK/YE
45 YE/RD
C116F
C116M
151–11 A3
45 YE/RD
C229M
C229F
151–10 D10
57 BK 651 BK/YE
C229M
C229F
151–10 D10
359 GY/RD
676 PK/OG
Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.
SEE GROUNDS PAGES 10-2, 10-16
S122
*S195
57 BK
359 GY/RD
*397 BK/WH
S268
*S287
G100
*G113
*G207
SEE GROUNDS PAGES 10-9, 10-10, 10-18
SEE GROUNDS PAGE 10-2
S122
S268
G100
G203
SEE GROUNDS PAGES 10-9, 10-10
S268
*S287
G203
*G207
SEE GROUNDS PAGES 10-8, 10-18