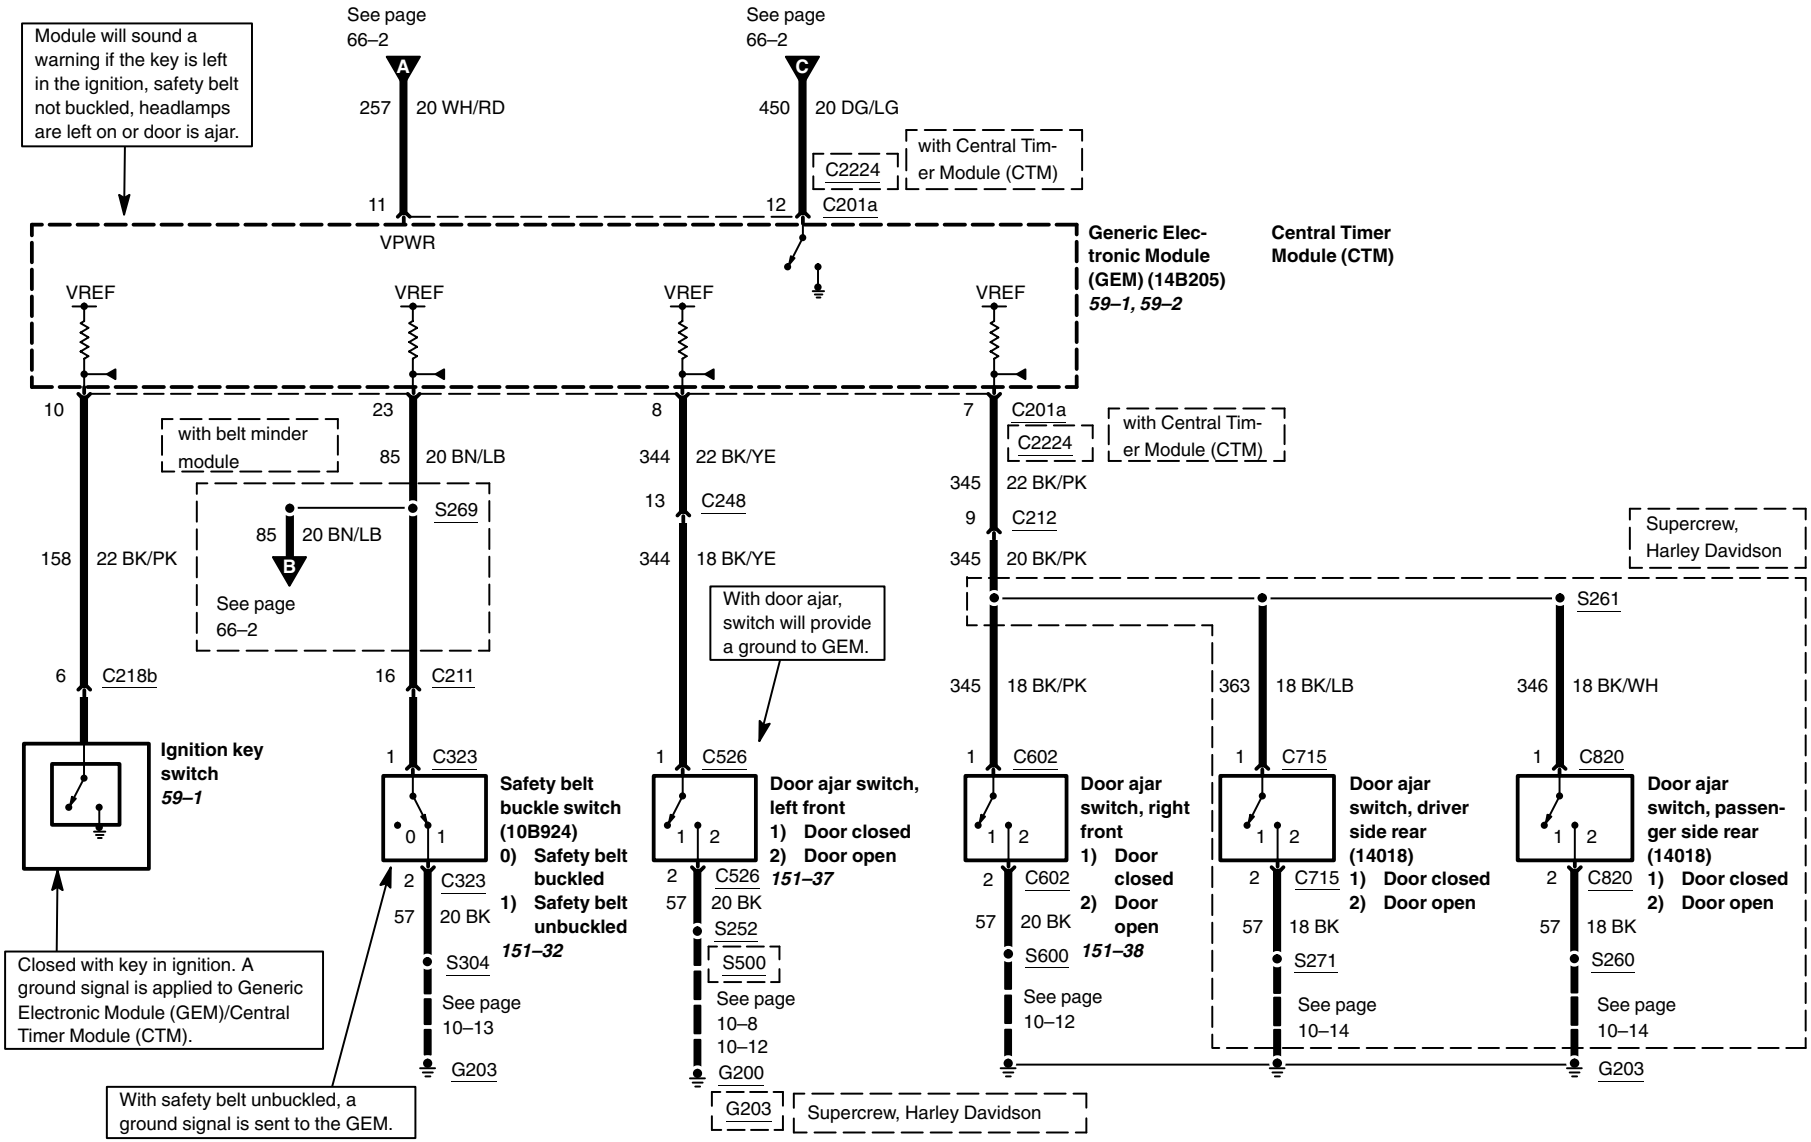
Module will sound a warning if the key is left in the ignition, safety belt not buckled, headlamps are left on or door is ajar.
See page 66–2
See page 66–2
A
C
257 20 WH/RD
450 20 DG/LG
C2224
with Central Timer Module (CTM)
11
12 C201a
VPWR
Generic Electronic Module (GEM) (14B205) 59–1, 59–2
Central Timer Module (CTM)
VREF
VREF
VREF
VREF
10
23
8
7 C201a
C2224
with Central Timer Module (CTM)
with belt minder module
85 20 BN/LB
344 22 BK/YE
345 22 BK/PK
S269
13 C248
9 C212
85 20 BN/LB
B
158 22 BK/PK
344 18 BK/YE
345 20 BK/PK
Supercrew, Harley Davidson
See page 66–2
With door ajar, switch will provide a ground to GEM.
S261
6 C218b
16 C211
345 18 BK/PK
363 18 BK/LB
346 18 BK/WH
1 C323
1 C526
1 C602
1 C715
1 C820
Ignition key switch 59–1
Safety belt buckle switch (10B924)
0) Safety belt buckled
1) Safety belt unbuckled
151–32
Door ajar switch, left front
1) Door closed
2) Door open
151–37
Door ajar switch, right front
1) Door closed
2) Door open
151–38
Door ajar switch, driver side rear (14018)
1) Door closed
2) Door open
Door ajar switch, passenger side rear (14018)
1) Door closed
2) Door open
2 C323
57 20 BK
2 C526
57 20 BK
2 C602
57 20 BK
2 C715
57 18 BK
2 C820
57 18 BK
S304
S252
S500
S600
S271
S260
See page 10–13
See page 10–8
10–12
See page 10–12
See page 10–14
See page 10–14
G203
G200
G203
Supercrew, Harley Davidson
G203
Closed with key in ignition. A ground signal is applied to Generic Electronic Module (GEM)/Central Timer Module (CTM).
With safety belt unbuckled, a ground signal is sent to the GEM.