C611

14A205

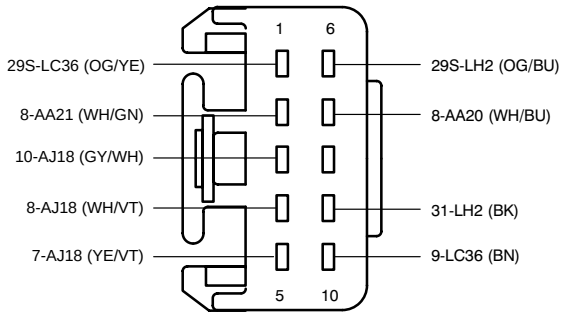

F10063

14A005

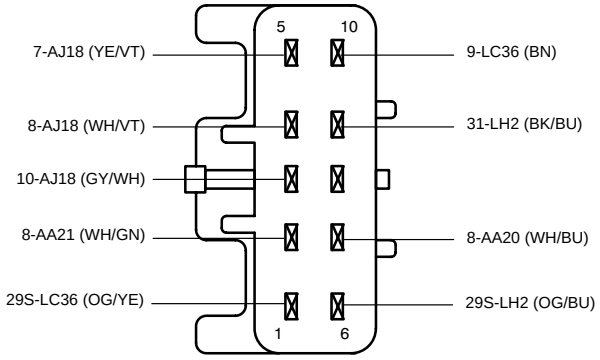

F10041

C612

14630

Y18
Speaker, right front
(18808)

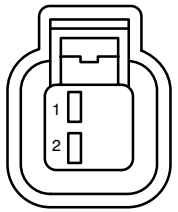

F02069

Pin	Circuit	Circuit function
1	8-MD17 (WH/RD)	Speaker, right front (18808), Audio signal positive
2	10-MD17 (GY/RD)	Speaker, right front (18808), Audio signal negative

C701

14A005

N111
Window adjust
switch, left rear
(14A412)

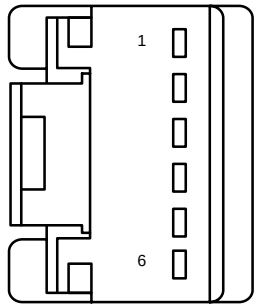

F06163

Pin	Circuit	Circuit function
1	8-AJ14A (WH/BU)	Sensor signal
2	10-AJ14A (GY/VT)	Signal 2 (Y–direction, reverse, downward)
3	7-AJ14A (YE/BU)	Voltage DC supplied at all times (sensor)
4	31-LH16 (BK/OG)	Ground
5	–	not used
6	29S-LH16 (OG)	Voltage supplied at all times (overload protected), Switched