C149 (BK)

12A522

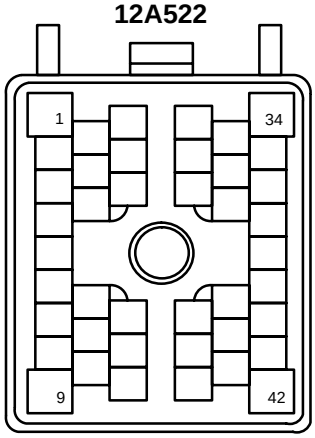

F42007

12B637

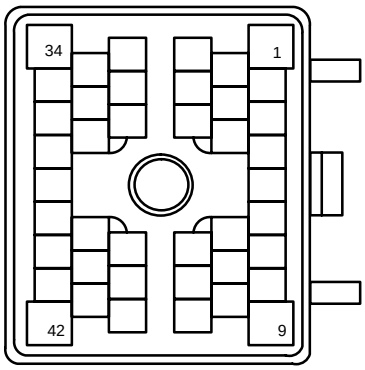

F42009

(1)	EP90 (BK)	(14)	AW25 (PK)	(29)	ES92	(1)	EP90 (BK)	(14)	AW25 (PK)	(29)	ES92
(2)	AV18 (LG/RD)	(15)	AV08 (WH/VT)	(30)	AV85 (YE)	(2)	AV18 (LG/RD)	(15)	AV08 (WH/VT)	(30)	AV85 (YE)
(3)	AV92 (BK/YE)	(16)	EP92 (BK)	(31)	AV62 (YE/VT)	(3)	AV92 (BK/YE)	(16)	EP92 (BK)	(31)	AV62 (YE/VT)
(4)	AA01 (OG) ES10 (BK)	(17)	AW12	(32)	AV63 (LB)	(4)	AA01 (OG) ES10 (BK)	(17)	AW12 (VT)	(32)	AV63 (LB)
(5)	AA01 (OG) ES11	(18)	AV53 (GN/RD)	(33)	AV64 (GY/BU)	(5)	AA01 (OG) ES11	(18)	AV53 (GN/RD)	(33)	AV64 (GY/BU)
(6)	AA02 (OG) AW30 (LG)	(19)	AW26 (BU)	(34)	EP57 (BK)	(6)	AA02 (OG) AW30 (LG)	(19)	AW26 (BU)	(34)	EP57 (BK)
(7)		(20)		(35)		(7)		(20)		(35)	
(8)	ES48 (BK/RD)	(21)	AWE2	(36)	ZY21 (RD/WH)	(8)	ES48 (BK/RD)	(21)	AWE2	(36)	ZY21 (RD/WH)
(9)	AV87 (BU/YE)	(22)	AV33 (BN/YE)	(37)	AV27 (WH)	(9)	AV87 (BU/YE)	(22)	AV33 (BN/YE)	(37)	AV27 (WH)
(10)	AV51 (GN/OG)	(23)	AV52 (GY)	(38)	AV37 (BN)	(10)	AV51 (GN/OG)	(23)	AV52 (GY)	(38)	AV37 (BN)
(11)	AV72 (WH/OG)	(24)	AV60 (GN)	(39)	ES97	(11)	AV72 (GY/RD)	(24)	AV60 (GN)	(39)	ES97
(12)	AV55 (YE/GN)	(25)	AW19 (BK/WH)	(40)	AV20 (RD)	(12)	AV55 (YE/GN)	(25)	AW19 (BK/WH)	(40)	AV20 (RD)
(13)	AW18 (GN/BK)	(26)		(41)	AV21 (BK/YE)	(13)	AW18 (GN/BK)	(26)		(41)	AV21 (BK/YE)
		(27)		(42)				(27)		(42)	
		(28)	AA02 (OG) AW31 (BU/YE)					(28)	AA02 (OG) AW31 (BU/YE)		

C150 (BK)

12A522

B214
Coolant temperature sensor 2



F01015

Pin	Circuit	Circuit Function
1	MA03 (BU/WH)	Coolant temperature sensor 2, input

C151 (BN)

12B637

Y203
Manifold Absolute Pressure (MAP)/Barometric Pressure (BARO) solenoid

F02137

Pin	Circuit	Circuit Function
1	AW12 (VT)	Manifold Absolute Pressure (MAP)/Barometric Pressure (BARO) solenoid, control
2	AW11 (BU/YE)	Voltage supplied in Start and Run (overload protected)