C131 (BK)

14A103



F03139

E8
Turn lamp, right front

Pin	Circuit	Circuit Function
1	LBE3 (BK)	Ground
2	–	not used
3	LB13 (RD/WH)	Turn lamps, Right, switched power

C134a (WH)

14A103

A210
Wiper/washer amplifier assembly, front

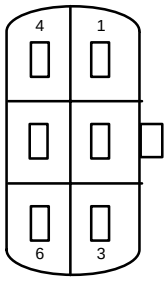

F06153

Pin	Circuit	Circuit Function
1	WA06 (RD)	switched power, input
2	WA03 (BK/WH)	Voltage in Run or Accessory (overload protected)
3	WAE1 (BK)	Ground
4	WA04 (BU/OG)	switched power, output
5	WA10 (YE/RD)	Windshield washer pump motor, control
6	WA05 (BN/WH)	switched power, output

C134b (WH)

14A103

A210
Wiper/washer amplifier assembly, front

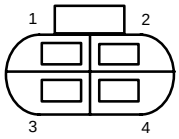

F04135

Pin	Circuit	Circuit Function
1	WA08 (PK)	Wiper/washer, input
2	WA09 (GN)	Wiper/washer, input
2	WAE3 (BK)	Ground
4	WA07 (WH)	Wiper/washer, return

C137 (GY)

12B637

B210
Manifold Absolute Pressure (MAP)/Barometric Pressure (BARO) sensor



F03131

Pin	Circuit	Circuit Function
1	AW26 (BU)	signal, return
2	AW25 (PK)	EVAP pressure sensor, input
2	AW24 (BN)	Reference, voltage

C138 (BU)

12B637

Y134
EVAP canister purge valve

F02137

Pin	Circuit	Circuit Function
1	AW19 (BK/WH)	Voltage supplied in Start and Run (overload protected)
2	AW18 (GN/BK)	EVAP canister purge valve

C140 (BK)

14A103

M37
Engine cooling fan motor

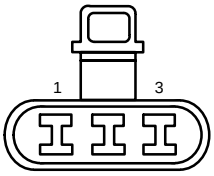

F03137

Pin	Circuit	Circuit Function
1	FAE1 (BK)	Ground
2	FA05 (BU/WH)	Low speed fan control relay, switched power
3	FA10 (BU/RD)	High speed cooling fan relay, switched power

C141 (WH)

14A103

B208
Heated Oxygen Sensor (HO2S), front



F03129

Pin	Circuit	Circuit Function
1	ES90 (BK)	Heated Oxygen Sensor (HO2S), front, heater
2	AV19 (LG)	signal, return
3	AV91 (BU/YE)	Voltage supplied in Start and Run (overload protected)